

[Manuals.plus](#) /

› [HADEN](#) /

› Haden 800W Electric Kitchen Stand Mixer User Manual

HADEN 197405

Haden 800W Electric Kitchen Stand Mixer User Manual

Model: 197405

1. INTRODUCTION

Thank you for choosing the Haden 800W Electric Kitchen Stand Mixer. This appliance is designed to simplify your baking and cooking tasks, offering powerful performance and versatile functionality. With its robust motor, generous 4.5-litre stainless steel bowl, and three specialized attachments, you can effortlessly prepare a wide range of recipes, from light batters to heavy doughs.

Please read this manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.



Figure 1: Haden 800W Electric Kitchen Stand Mixer

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the mixer.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from

beaters during operation to prevent injury and/or damage to the mixer.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the headlift interlock is engaged before operating the mixer.

3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your Haden Stand Mixer:

- **Main Mixer Unit:** Houses the motor, speed control knob, and headlift mechanism.
- **4.5-Litre Stainless Steel Bowl:** Large capacity bowl for mixing ingredients.
- **Whisk Attachment:** Ideal for whipping cream, egg whites, and light batters.
- **Dough Hook Attachment:** Designed for kneading yeast doughs for bread, pizza, and pasta.
- **Flat Beater Attachment:** Suitable for mixing cakes, cookies, frostings, and mashed potatoes.
- **Speed Control Knob:** Allows selection of 7 different speed settings.
- **Headlift Interlock:** Safety mechanism that locks the mixer head in place during operation.
- **Non-slip Feet:** Provides stability during operation.

5L STAND MIXER



Figure 2: Key Features of the Stand Mixer



Figure 3: Included Attachments (Dough Hook, Whisk, Flat Beater)

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.

2. **Placement:** Place the mixer on a clean, dry, flat, and stable surface. Ensure the non-slip feet are firmly gripping the surface.
3. **Attaching the Bowl:** Place the stainless steel mixing bowl onto the base of the mixer. Turn the bowl clockwise until it locks securely into place.



Figure 4: Bowl Locking Mechanism

4. **Attaching an Accessory:**

- Ensure the mixer is unplugged and the speed control is set to 'OFF'.
- Press the headlift release button and lift the mixer head until it clicks into the upright position.
- Align the chosen attachment (whisk, dough hook, or flat beater) with the accessory shaft. Push the attachment upwards and turn it slightly clockwise until it locks into place.
- Lower the mixer head by pressing the headlift release button and gently pushing the head down until it locks into position.

5. **OPERATING INSTRUCTIONS**

1. **Add Ingredients:** Place your ingredients into the stainless steel mixing bowl.

2. **Select Speed:** Plug the mixer into a suitable power outlet. Turn the speed control knob to your desired speed setting (1-7). Start with a lower speed and gradually increase as needed to prevent splashing.



Figure 5: Speed Control Knob

3. **Mixing:** Allow the mixer to operate until ingredients are thoroughly combined. For best results, occasionally stop the mixer and scrape down the sides of the bowl with a spatula.
4. **Stopping:** When finished, turn the speed control knob to 'OFF' and unplug the mixer from the power outlet.
5. **Removing Bowl and Attachments:** Lift the mixer head, then turn the attachment counter-clockwise to remove it. Unlock and remove the mixing bowl.

Recommended Speed Settings:

- **Speeds 1-2:** For heavy mixtures, kneading dough, mashing potatoes.
- **Speeds 3-4:** For medium-heavy mixtures, creaming butter and sugar, mixing cake batter.
- **Speeds 5-7:** For light mixtures, whipping eggs, cream, and thin batters.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Haden Stand Mixer.

- **Always unplug the mixer** before cleaning.
- **Main Unit:** Wipe the exterior of the main mixer unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Stainless Steel Bowl:** The 4.5-litre stainless steel bowl is dishwasher safe for convenient cleaning.
- **Attachments (Whisk, Dough Hook, Flat Beater):** Hand wash these attachments with warm, soapy water. Rinse thoroughly and dry immediately to prevent corrosion. Do not wash attachments in a dishwasher unless explicitly stated by the manufacturer.
- **Storage:** Store the mixer and its attachments in a clean, dry place. The attachments can be stored inside the mixing bowl for compact storage.

7. TROUBLESHOOTING

If you encounter any issues with your Haden Stand Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet fault; head not fully lowered/locked.	Ensure plug is securely in outlet. Check power outlet with another appliance. Ensure mixer head is fully lowered and locked into place.
Attachments not mixing ingredients properly.	Incorrect attachment for task; insufficient quantity of ingredients; attachment not properly installed.	Use the correct attachment for the mixture consistency. Ensure minimum ingredient quantities are met. Re-install attachment, ensuring it clicks into place.
Mixer is vibrating excessively or moving on counter.	Heavy dough/mixture; non-slip feet not gripping surface.	Reduce batch size for very heavy mixtures. Ensure mixer is on a clean, dry, flat, and stable surface.
Motor smells or overheats.	Overloading; continuous operation for too long.	Reduce load or mixing time. Allow mixer to cool down before resuming use. If problem persists, contact customer support.

If the problem persists after attempting these solutions, please contact Haden Customer Support.

8. SPECIFICATIONS

Feature	Specification
Brand	HADEN
Model Number	197405
Power	800W
Colour	Black
Product Dimensions	22.6 x 34.5 x 33.7 cm
Item Weight	5.2 kg

Feature	Specification
Bowl Capacity	4.5 litres (5 litres listed in some specs, using 4.5L from feature bullets)
Bowl Material	Stainless Steel
Special Feature	Removable Bowl
Controls Type	Knob Control
Dishwasher Safe	Bowl only

9. WARRANTY AND SUPPORT

Your Haden 800W Electric Kitchen Stand Mixer comes with a**Two Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact Haden Customer Support. Keep your proof of purchase for warranty validation.

Haden Customer Support: Please refer to the contact information provided on the Haden official website or your product packaging for the most up-to-date support details.

© 2024 HADEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084RS5SQM>

More documents and user manuals: <https://manuals.plus/>