

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SHARP](#) /

› [SHARP Drum-Type Washing Machine ES-S7E-WL User Manual](#)

SHARP ES-S7E-WL

SHARP Drum-Type Washing Machine ES-S7E-WL User Manual

Model: ES-S7E-WL

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your SHARP Drum-Type Washing Machine, model ES-S7E-WL. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it is damaged or malfunctioning.
- Keep children away from the appliance during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not attempt to repair or replace any part of your appliance unless specifically recommended in this manual.

3. PRODUCT OVERVIEW

The SHARP ES-S7E-WL is a compact drum-type washing machine designed for efficient washing and drying. It features a 7kg washing capacity and a 3.5kg drying capacity, making it suitable for various household needs. The appliance incorporates advanced technologies such as heater sensor drying and DD Inverter for optimal performance and energy efficiency.

Key Features:

- **Compact Drum Design:** Slim depth allows for installation in typical waterproof pans.
- **Heater Sensor Drying:** Efficient drying with sensor technology.

- **DD Inverter Motor:** Ensures quiet operation and durability.
- **Plasmacluster Technology:** Helps suppress mold growth inside the drum and offers deodorization and sterilization for clothes that cannot be washed with water.
- **Variety of Courses:** Includes a 'Short-time' course for quick washes and a 'Stylish Clothes' course to prevent shrinkage and damage.

Product Images:



Figure 3.1: Front view of the SHARP ES-S7E-WL washing machine with the door open, showing the drum interior. The door features a unique textured glass design.

「4つのセンサー」で かしこく省エネ



衣類の種類

水位センサー

乾き具合

温度センサー

衣類の量

重量センサー

周囲の温度

温度センサー

衣類のかたより

振動センサー


フィルター目詰まり

温度センサー

Figure 3.2: Diagram illustrating the four sensors (temperature, water level, vibration, weight) in the SHARP ES-S7E-WL washing machine. These sensors intelligently optimize washing and drying based on clothing type, dryness, weight, ambient temperature, and filter clogging.



プラズマクラスターで
いつでも清潔！ **シャープだけ！**

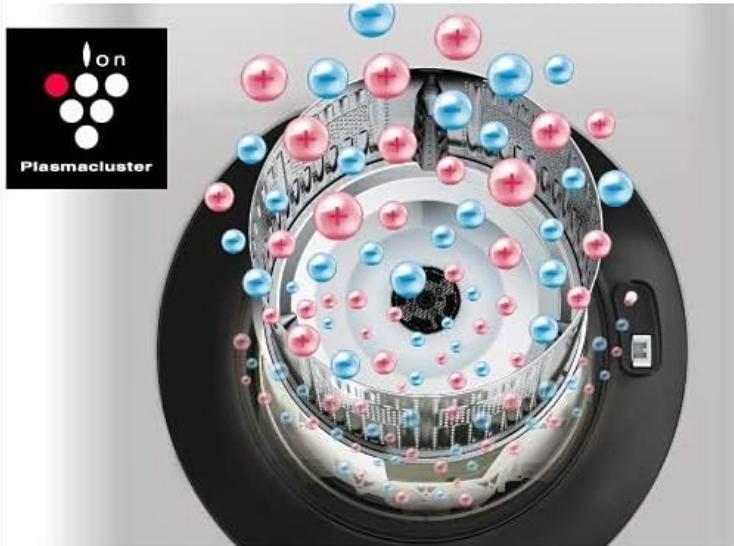

ボタン1つで洗濯槽をお手入れ
プラズマクラスター
槽クリーンコース




水で洗えない衣類にも
プラズマクラスター
消臭コース

Figure 3.3: Illustration of Plasmacluster technology in action. This feature helps keep the drum clean and can sterilize and deodorize clothes that cannot be washed with water, as well as reduce static electricity during drying.

■操作パネル



■寸法図

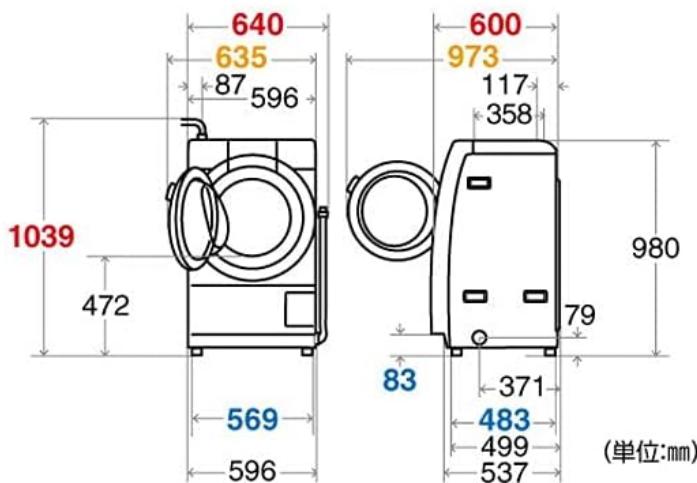

電源コード長 : 約1.94m アース線長 : 約2.54m
給水ホース長 : 約0.8m 排水ホース長: 約0.83m
ドアを最大に開けた時の角度: 約105°
排水ホース取出: 左・右 2方向+真下*

* 真下の場合は、条件に合わせて別売のサービス部品が必要です。
※ 他の寸法図の詳細はサポートページをご覧ください。



Figure 3.4: This image highlights additional features: the 'Short-time course' for quick washing with speed-wash detergents, and the 'Stylish clothes course' designed to clean delicate garments while minimizing shrinkage and damage.

4. SETUP

Proper installation is crucial for the performance and longevity of your washing machine. Please ensure the following conditions are met before installation.

Installation Requirements:

- Dimensions:** The outer dimensions of the unit are Width 640mm (body width 596mm) x Depth 600mm x Height 1,039mm (including drain and water supply hoses).
- Waterproof Pan:** The appliance can be installed on a waterproof pan of 540mm or more.
- Space Requirements:** Ensure at least 1cm clearance on the left/right (side wall), 1cm or more at the rear, and 15cm or more above for filter access. For door opening, allow 20-40cm in front.

商品寸法+10cm以上の幅が必要です。


《搬入における確認項目》

〈商品の寸法〉




〈玄関の高さ〉

商品寸法+10cm

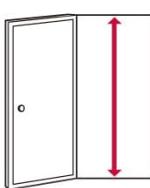


〈玄関の幅〉

商品寸法+10cm

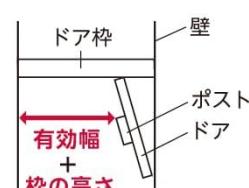


〈廊下の幅〉

商品寸法+10cm

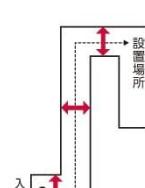


〈エレベータの幅〉

商品寸法+10cm

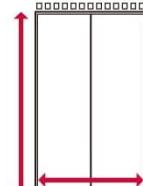

〈階段の幅〉


商品寸法+10cm

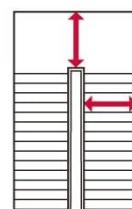


《設置における確認項目》

・必要なスペースは商品によって異なるため、詳細はメーカーべージなどでご確認ください。

・洗濯機の設置時にはドアを開閉するため前面のスペース確保が必要となります。

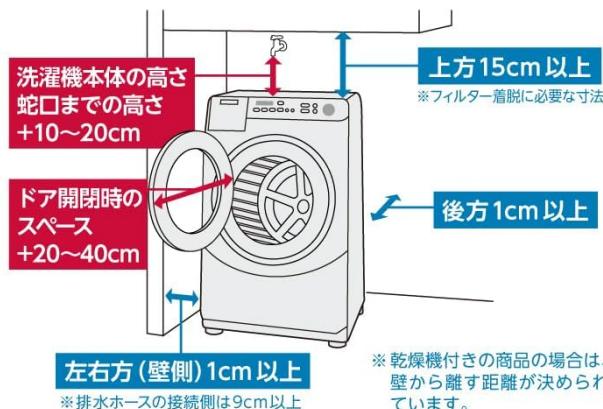

防水パンの有無と内側サイズをチェック

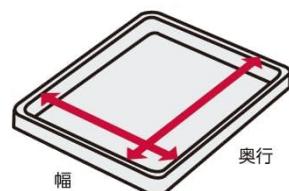

※ 排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Figure 4.1: Detailed diagram outlining critical installation checks, including required clearances for product dimensions, door swing, and placement on a waterproof pan. Always confirm these measurements before installation.

その他の特長



Figure 4.2: A comprehensive dimension diagram of the washing machine, providing precise measurements for width (including body width), depth, height, and the length of power and water hoses. This is essential for planning the installation space.

Installation Reference Video:

Your browser does not support the video tag.

Video 4.1: This video provides a visual guide for the installation process of a drum-type washing machine, demonstrating how to prepare the unit and connect hoses. While not specific to the ES-S7E-WL model, it offers general installation principles.

5. OPERATING INSTRUCTIONS

This section details the basic steps for operating your SHARP washing machine for both washing and drying cycles.

Control Panel:



Figure 5.1: The control panel features various buttons for power, course selection (wash, rinse, spin, dry), special functions like 'Stylish Clothes' and 'Short-time', and a start/pause button. The digital display shows remaining time and settings.

Basic Washing Cycle:

1. Load laundry into the drum.
2. Add detergent and fabric softener to the appropriate dispensers.
3. Press the **Power** button.
4. Select your desired wash course (e.g., 'Standard', 'Stylish Clothes', 'Short-time').
5. Press the **Start/Pause** button to begin the cycle.

Drying Cycle:

1. Load laundry into the drum (ensure it does not exceed the 3.5kg dry capacity).
2. Press the **Power** button.

3. Select a drying course or a wash-to-dry course.
4. Adjust drying intensity if available (e.g., 'Standard', 'Gentle').
5. Press the **Start/Pause** button to begin drying.

Special Functions:

- **Plasmacluster Deodorization/Sterilization:** Use this course for items that cannot be wet-washed to remove odors and sterilize.
- **Short-time Course:** Ideal for lightly soiled items or when using speed-wash compatible detergents.
- **Stylish Clothes Course:** Designed to gently clean delicate garments, minimizing shrinkage and damage.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Cleaning the Drum:

- The Plasmacluster technology helps suppress mold growth inside the drum.
- For thorough cleaning, use the dedicated 'Drum Clean' course periodically.

Filter Cleaning:

- The appliance has two filters: a lint filter and a drain filter.
- Regularly clean the lint filter to maintain drying efficiency.
- The drain filter should also be cleaned regularly to prevent clogs from fine debris.

Door Gasket Cleaning:

- The rubber gasket around the door can accumulate dirt and moisture. Wipe it clean regularly to prevent mold and odors.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Common Issues:

- **Error Code E04:** This error may indicate an issue with the vibration sensor. If this occurs frequently, contact customer support.
- **Clothes not drying completely:** Ensure the drying capacity (3.5kg) is not exceeded. Overloading can lead to incomplete drying, especially for bulky items like bath towels.
- **Loud noise during spin cycle:** While some noise is normal, excessive noise might indicate an unbalanced load or an issue with the machine's leveling. Ensure the machine is level and the load is balanced.
- **Wrinkled clothes after drying:** For best results, remove clothes promptly after the drying cycle. For cotton sheets, some wrinkling may occur; consider air drying for a smoother finish.

If the problem persists after attempting these solutions, please contact SHARP customer service.

8. SPECIFICATIONS

Feature	Specification
Model Number	ES-S7E-WL

Brand	SHARP
Washing Capacity	7 kg
Drying Capacity	3.5 kg
Drying Method	Heater Sensor Drying
Outer Dimensions (W x D x H)	640 mm x 600 mm x 1039 mm (Body width 596mm)
Product Weight	81 kg
Operating Noise (Wash)	24 dB
Operating Noise (Spin)	39 dB
Operating Noise (Dry)	36 dB
Voltage	100 V (AC)
Control Type	Push Button, Fully Automatic
Max Spin Speed	980 RPM
Drum Material	Stainless Steel
Included Components	Instruction Manual

9. WARRANTY AND SUPPORT

Your SHARP ES-S7E-WL washing machine comes with a manufacturer's warranty. Please refer to the warranty certificate included with your product for specific terms and conditions.

Warranty Period:

Maximum 1 year, based on the regulations specified in the warranty certificate.

Customer Support:

For technical assistance, service requests, or inquiries regarding your product, please contact SHARP customer support. Contact details can typically be found on the warranty certificate or the official SHARP website.