

[manuals.plus](#) /

› [De'Longhi](#) /

› [De'Longhi Magnifica S Smart ECAM230.13.B Automatic Coffee Machine User Manual](#)

## De'Longhi ECAM230.13.B

# De'Longhi Magnifica S Smart ECAM230.13.B Automatic Coffee Machine User Manual

Model: ECAM230.13.B

## 1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, setup, and maintenance of your De'Longhi Magnifica S Smart ECAM230.13.B automatic coffee machine. Please read all instructions carefully before using the appliance and retain this manual for future reference.



Figure 1.1: De'Longhi Magnifica S Smart ECAM230.13.B Automatic Coffee Machine.

This image displays the De'Longhi Magnifica S Smart ECAM230.13.B coffee machine in black, featuring its control panel, coffee spouts, and drip tray. Two glasses of espresso and one glass of latte macchiato are positioned next to the machine, showcasing its beverage capabilities.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Observe the following safety precautions to reduce the risk of fire, electric shock, and injury:

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Keep the appliance out of reach of children.

- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the water tank is filled to the appropriate level before operation.
- Avoid contact with moving parts.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your coffee machine:

1. **Control Panel:** Features backlit buttons and a rotary dial for selecting coffee type and strength.
2. **Coffee Bean Hopper:** Located at the top, for whole coffee beans.
3. **Ground Coffee Funnel:** For pre-ground coffee.
4. **Water Tank:** Removable, located at the side/rear.
5. **Steam Wand (Cappuccino System):** For frothing milk.
6. **Coffee Spouts:** Adjustable height for different cup sizes.
7. **Drip Tray & Grounds Container:** Collects excess water and used coffee grounds.
8. **Brew Group:** Internal, removable component for brewing coffee.



Figure 3.1: Control Panel Detail.

This image provides a close-up view of the De'Longhi Magnifica S Smart ECAM230.13.B's control panel, highlighting the backlit buttons for Espresso, 2x Espresso, Coffee, and Long, along with the central rotary dial for intensity adjustment. A finger is shown pressing the Espresso button.

## 4. INITIAL SETUP

### 4.1 Unpacking and Placement

- Remove all packaging materials.
- Place the machine on a stable, level surface, away from water splashes and heat sources.

### 4.2 Filling the Water Tank

- Remove the water tank from the machine.
- Fill it with fresh, cold tap water up to the MAX level.
- Replace the water tank securely.

### 4.3 Adding Coffee Beans

- Open the lid of the coffee bean hopper.
- Pour fresh coffee beans into the hopper. Do not overfill.
- Close the lid.



Figure 4.1: Adding Coffee Beans.

This image shows a hand lifting the lid of the coffee bean hopper on the De'Longhi Magnifica S Smart ECAM230.13.B, with a generous amount of coffee beans visible inside, ready for grinding.

#### 4.4 Adjusting the Grinder

The conical burr grinder has 13 adjustable settings. Adjust the grind fineness using the dial inside the bean hopper. Turn clockwise for a finer grind (stronger coffee) and counter-clockwise for a coarser grind (lighter coffee). Adjust only when the grinder is operating.

#### 4.5 First Use and Rinsing Cycle

After initial setup, the machine will perform an automatic rinsing cycle. Follow the on-screen prompts or indicator lights. This prepares the internal circuits for optimal coffee brewing.

### 5. OPERATING THE MACHINE

#### 5.1 Making Espresso or Coffee

1. Ensure the water tank is filled and the bean hopper contains coffee beans.
2. Place one or two cups under the coffee spouts.

3. Press the **Espresso** or **Coffee** button. The machine will grind the beans and dispense the coffee.
4. To adjust coffee strength, turn the rotary dial on the control panel before pressing the coffee button.

## 5.2 Using Pre-Ground Coffee

- Press the pre-ground coffee button (usually indicated by a spoon icon).
- Open the funnel for pre-ground coffee and add one level scoop of pre-ground coffee. Do not add more than one scoop.
- Place a cup under the spouts and press the desired coffee button (Espresso, Coffee, etc.).

## 5.3 Frothing Milk with the Steam Wand

1. Fill a pitcher with cold milk (dairy or non-dairy).
2. Position the steam wand into the milk, just below the surface.
3. Press the steam button (usually indicated by a steam icon). Wait for the machine to heat up.
4. Once steam is dispensed, move the pitcher up and down to create foam.
5. When desired foam and temperature are reached, press the steam button again to stop.
6. Clean the steam wand immediately after use.



Figure 5.1: Frothing Milk.

This image shows a hand holding a stainless steel milk frothing pitcher positioned under the steam wand of the De'Longhi Magnifica S Smart ECAM230.13.B, demonstrating the milk frothing process.



Figure 5.2: Detailed Milk Frothing.

A closer view of the milk frothing process, showing a hand holding a metal pitcher with milk under the steam wand of the De'Longhi Magnifica S Smart ECAM230.13.B, emphasizing the precise positioning for optimal frothing.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your machine.

### 6.1 Daily Cleaning

- **Drip Tray and Grounds Container:** Empty and rinse daily. The machine will indicate when the grounds container needs emptying (after 14 cups or 72 hours).
- **Steam Wand:** Wipe with a damp cloth immediately after each use to prevent milk residue buildup.

### 6.2 Brew Group Cleaning

- Turn off and unplug the machine.
- Remove the water tank and open the service door.
- Press the two release buttons and pull out the brew group.
- Rinse the brew group under running water. Do not use detergents.
- Clean the inside of the machine with a brush or cloth.
- Reinsert the brew group and close the service door.

### 6.3 Descaling

The machine will indicate when descaling is required. Use only De'Longhi descaling solution and follow the instructions provided with the descaler or in the machine's display/manual. This process is crucial for removing mineral deposits and maintaining machine efficiency.

### 6.4 Water Filter

If using a water filter, replace it approximately every two months, or as indicated by the machine.

## 7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty, coffee beans empty, brew group blocked.	Fill water tank, add coffee beans, clean the brew group.
Coffee is too weak or too strong.	Incorrect grind setting, insufficient coffee dose.	Adjust grind fineness (finer for stronger), increase coffee strength via rotary dial.
Milk does not froth properly.	Steam wand blocked, milk not cold enough, incorrect milk type.	Clean steam wand, use cold milk, try different milk types.
Red triangle error light (infusore).	Brew group stuck or dirty.	Turn off the machine, remove and thoroughly clean the brew group. Ensure it is correctly reinserted. If stuck, do not force it; contact customer support.
Machine requires descaling.	Mineral buildup in internal circuits.	Perform the descaling cycle as per the machine's instructions and using De'Longhi descaler.

## 8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	De'Longhi
Model Number	ECAM 230.13.B
Dimensions (L x W x H)	44 x 24 x 44 cm
Weight	9.2 Kilograms
Capacity (Water Tank)	1.8 Litres
Power	1450 Watts
Voltage	230 Volts
Material	Plastic
Special Feature	Programmable, Integrated Grinder, Milk Frother
Automatic Shut-off	Yes

## 9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official De'Longhi website. If you encounter any issues not covered in this manual or require further assistance, please contact De'Longhi customer support.

Keep your proof of purchase for warranty claims.

© 2023 De'Longhi. All rights reserved.