



Manuals.plus /

- › **Disney Princess** /
- › Disney Princess Fashion Doll Castle Instruction Manual (Model F09965L1)

Disney Princess F09965L1

Disney Princess Fashion Doll Castle Instruction Manual

Model: F09965L1

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Disney Princess Fashion Doll Castle. Designed for imaginative play, this dollhouse offers a detailed environment for Disney Princess Comfy Squad dolls. Please read these instructions carefully before assembly and use to ensure safe and enjoyable play.



Image 1: Front view of the Disney Princess Fashion Doll Castle, showcasing its multi-level design and various rooms. Dolls and additional accessories are not included.

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years. Adult supervision is recommended during assembly and play. Keep all packaging materials away from children.

WHAT'S INCLUDED

The Disney Princess Fashion Doll Castle includes the following components:

- One (1) Disney Princess Fashion Doll Castle structure (over 32 inches tall)
- Six (6) pieces of furniture:
 - Sofa
 - Vanity
 - Stool
 - Wardrobe (with opening door)
 - Shell-inspired chair
 - Bean bag chair
- Sixteen (16) accessories:
 - One (1) Chandelier (hangs from ceiling)
 - Three (3) hangers (for wardrobe)
 - One (1) pie accessory
 - One (1) piece of pie on a plate accessory
 - Four (4) drink cups
 - One (1) popcorn accessory
 - One (1) book accessory
 - One (1) chip bag accessory
 - One (1) knife accessory
 - One (1) fork accessory
 - One (1) bottle accessory

Note: Dolls are not included and are sold separately.





Image 2: Rear view of the assembled castle, showing various rooms and included furniture pieces. Dolls are for display purposes only.

SETUP AND ASSEMBLY

Assembly of the Disney Princess Fashion Doll Castle is required. Follow the included pictorial instructions carefully. No tools are typically required as pieces are designed to snap together.

- Unpack Components:** Carefully remove all castle pieces, furniture, and accessories from the packaging. Verify all parts are present against the included parts list.
- Base Assembly:** Connect the base sections of the castle. Ensure they securely snap into place.
- Wall and Floor Panels:** Attach the main wall and floor panels, working from the bottom up. Pay attention to the

alignment of connection points.

4. **Towers and Roof:** Assemble the various towers and roof sections. These often feature decorative elements that snap into designated slots.
5. **Staircase:** Attach the winding staircase to its designated position, ensuring it is stable.
6. **Furniture Placement:** Place the six furniture pieces (sofa, vanity, stool, wardrobe, shell chair, bean bag chair) within the castle rooms as desired.
7. **Accessory Arrangement:** Distribute the 16 accessories throughout the castle. The chandelier can be hung from the ceiling, and hangers can be placed in the wardrobe.
8. **Decorative Elements:** Apply any included stickers or decorative cardboard cutouts as per the assembly guide. It is recommended to apply these after the main structure is stable.

Tip: Some users find it helpful to organize all pieces by type or number before beginning assembly.

OPERATING INSTRUCTIONS

The Disney Princess Fashion Doll Castle is designed for imaginative play with fashion dolls (sold separately).

- **Interactive Play:** Encourage children to use their Disney Princess dolls to interact with the various rooms and furniture pieces.
- **Opening Doors:** The main double doors and the wardrobe door are functional and can be opened and closed.
- **Balcony Access:** Dolls can be placed on the upper balcony for scenic views within the play area.
- **Accessory Use:** The included accessories are designed to enhance storytelling and role-playing scenarios within the castle.



Image 3: A child engaging in imaginative play with dolls and furniture inside the castle.

CARE AND MAINTENANCE

- **Cleaning:** Wipe down the castle and accessories with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the castle in a dry, cool place away from direct sunlight to prevent material degradation.
- **Inspection:** Periodically inspect all parts for any signs of damage or wear. Replace any broken or worn parts to ensure continued safe play.
- **Disassembly (Optional):** For long-term storage or transport, the castle can be carefully disassembled by reversing the assembly steps.

TROUBLESHOOTING

Problem	Solution
Pieces do not snap together.	Ensure pieces are correctly oriented and aligned. Apply firm, even pressure. Refer to the pictorial assembly guide for correct positioning.
Castle feels unstable after assembly.	Re-check all connection points to ensure they are fully snapped into place. Verify that the base is on a flat, stable surface.
Missing parts or damaged components.	Contact Hasbro customer support for assistance. Refer to the "Warranty and Support" section for contact information.

SPECIFICATIONS

- **Model Number:** F09965L1
- **Brand:** Disney Princess (by Hasbro)
- **Product Dimensions:** 27 x 16 x 7.5 inches (assembled)
- **Item Weight:** 10.12 pounds
- **Height:** Over 32 inches tall
- **Recommended Age:** 5 years and up
- **Material:** Durable plastic
- **Included:** Castle structure, 6 furniture pieces, 16 accessories (Dolls not included)

OFFICIAL PRODUCT OVERVIEW

Your browser does not support the video tag.

Video 1: An official overview of the Disney Princess Comfy Castle Playset, demonstrating its features and play possibilities. This video is provided by Hasbro Toys - Domestic.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please contact Hasbro directly.

- **Manufacturer:** Hasbro
- **Website:** www.hasbro.com (Please visit the official Hasbro website for the most current contact information and support options.)

