



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny 12Ft Camping Tent 6-7 Person 4 Season with 8 Mesh Windows, Outdoor Teepee Tent with Waterproof Material for Family and Friends Camping

Outsunny USA20-136NU0131

Outsunny 12Ft Camping Tent Instruction Manual

Model: USA20-136NU0131

For 6-7 Person, 3-Season Use

INTRODUCTION

Thank you for choosing the Outsunny 12Ft Camping Tent. This spacious teepee-style tent is designed to provide a comfortable and enjoyable outdoor experience for families and groups of 6-7 people. Its robust construction and thoughtful features make it suitable for 3-season camping, offering protection and ventilation for various outdoor adventures.



Image: The Outsunny 12Ft Camping Tent, a large teepee-style tent with a blue top and grey body, pitched in a grassy area.

SAFETY INFORMATION

- **Weather Conditions:** This tent is designed for 3-season use (spring, summer, fall). It is **not designed to withstand extreme weather conditions** such as heavy snow, strong winds, or torrential rain. Avoid using the tent in such conditions to prevent damage and ensure safety.
- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent material is not fireproof.
- **Ventilation:** Ensure adequate ventilation, especially when using heating or cooking appliances inside or near the tent. Carbon monoxide can be deadly.
- **Site Selection:** Choose a level, clear area free of sharp objects, rocks, and debris. Avoid pitching under trees with dead branches or in areas prone to flash floods.
- **Staking:** Always properly stake down the tent and secure all guy lines to prevent the tent from blowing away in windy conditions.
- **Children:** Supervise children around the tent. Do not allow them to play with tent poles or stakes.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Tent Fabric (Main Body)
- Center Support Pole (Metal)
- Ground Stakes (16 pieces)
- Guy Ropes/Cords (8 pieces)
- Carrying Bag

SETUP INSTRUCTIONS

Setting up your Outsunny Teepee Tent is designed to be straightforward. It is recommended to have at least two people for easier assembly.

1. **Unpack and Lay Out:** Remove the tent from its carrying bag and lay the tent fabric flat on your chosen campsite. Ensure the floor is spread out evenly.
2. **Insert Center Pole:** Locate the central support pole. From inside the tent, extend the pole and insert its base into the designated pocket or grommet at the center of the tent floor. Extend the pole upwards until its top fits securely into the apex of the tent. This will raise the tent into its teepee shape.
3. **Stake Down the Base:** Once the tent is standing, walk around the perimeter and locate the staking loops at the base of the tent. Use the provided ground stakes to firmly secure each loop to the ground. Ensure the tent base is taut and evenly stretched.
4. **Attach and Secure Guy Ropes:** Locate the attachment points for the guy ropes on the tent's exterior. Attach the guy ropes and extend them outwards at an angle (approximately 45 degrees from the tent wall). Secure each guy rope with a ground stake, adjusting the tensioners to make the tent taut and stable. This is crucial for wind resistance.
5. **Adjust and Inspect:** Step back and inspect the tent from all angles. Ensure it is taut, stable, and all stakes and guy ropes are securely fastened. Adjust as necessary.



Image: Two individuals are shown in the process of setting up the large teepee tent, illustrating the initial stages of assembly.



Image: A detailed view highlighting the tent's solid structure, including the ground stakes, guy ropes, and the powder-coated steel frame base, ensuring high stability.

OPERATING INSTRUCTIONS


Your Outsunny tent is designed for ease of use and comfort during your camping trips.

- **Access:** The tent features a zippered door for easy entry and exit. Ensure zippers are fully closed when not in use to keep out insects and weather.
- **Ventilation:** The tent is equipped with 8 mesh windows and 4 mesh vents on the top. These can be opened or closed to control airflow and prevent condensation. For optimal ventilation, open multiple windows and top vents.
- **Privacy:** The windows include covers that can be rolled down and secured for privacy or to block out light.
- **Capacity:** This tent comfortably accommodates 6-7 adults, providing ample space for sleeping and gear.
- **Internal Storage:** Utilize the internal pockets for organizing small items and keeping them off the tent floor.



Image: The Outsunny tent pitched by a body of water, with several people standing nearby, illustrating its large size and suitability for group use.

DETAILS



A metal support bar
in the centre

Waterproof PE bottom

Image: A composite image showing detailed features of the tent: a zippered door for easy access, four PVC windows for clear views, four mesh windows for ventilation, and four mesh vents on the top for airflow.

MAINTENANCE

Proper care and maintenance will extend the life of your tent.

- **Cleaning:** After each use, clean the tent thoroughly. Use a soft brush or sponge with mild soap and water to remove dirt and debris. Do not use harsh detergents or bleach.
- **Drying:** Always ensure the tent is completely dry before packing it away. Lay it out or hang it in a well-ventilated area to **air dry**. Packing a damp tent can lead to mildew, mold, and fabric degradation.
- **Storage:** Store the tent in its carrying bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Zippers:** Keep zippers clean and free of sand or dirt. Lubricate them periodically with a silicone-based spray to ensure smooth operation.
- **Stakes and Poles:** Clean and dry stakes and poles before storage. Check for any bends or damage and replace

if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or sways in wind.	Improperly secured stakes or guy ropes; insufficient tension.	Ensure all 16 ground stakes are fully inserted and taut. Secure all 8 guy ropes and adjust tensioners to make the tent firm. Consider purchasing stronger, aftermarket stakes for very soft ground or high winds.
Water pooling inside the tent.	Tent not properly pitched; heavy rain exceeding water resistance; windows/doors not fully closed.	Ensure the tent is pitched on level ground with good drainage. Verify all zippers on doors and windows are completely closed. While the tent has 2000mm+ water resistance, it is not designed for extreme downpours. In heavy rain, ensure guy lines are taut to shed water effectively.
Poor airflow or stuffiness inside.	Windows or vents are closed; lack of cross-ventilation.	Open multiple mesh windows and the top mesh vents to create cross-ventilation. Ensure the tent is not pitched in a completely sheltered area that blocks natural airflow.
Difficulty inserting center pole.	Tent fabric not fully spread out; pole sections not fully connected.	Ensure the tent floor is completely flat and stretched before attempting to raise the pole. Verify all pole sections are securely locked together. Having a second person to hold the tent fabric can assist.

SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Name	A20-136NU
Product Dimensions (L x W x H)	143.7" x 143.7" x 102.4" (approx. 12ft x 12ft x 8.5ft)
Item Weight	15.4 Pounds
Occupancy	7 Person
Seasons	3 Season (Spring, Summer, Fall)
Material	Polyester, Metal (Pole), Polyethylene (Base)
Water Resistance Technology	2000mm+
Number of Windows	8 (with mesh and covers)

Feature	Detail
Number of Doors	1 (zippered)
Number of Poles	1 (Central Support Pole)
Included Components	Tent, Ground Stakes, Cords, Carrying Bag
Color	Blue / Grey
UPC	842525148399



Image: A diagram illustrating the key dimensions of the tent: 143.75 inches (approx. 12 feet) in width and 102.4 inches (approx. 8.5 feet) in height.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official

Outsunny website. If you require technical support or have questions regarding your tent, please contact Outsunny customer service through their official channels.

You can find more information and contact details on the [Outsunny Brand Store on Amazon](#).

© 2024 Outsunny. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.