

Xbox FST-00011

Xbox Elite Series 2 Wireless Controller Instruction Manual

Model: FST-00011 | Brand: Xbox

INTRODUCTION

This manual provides detailed instructions for the setup, operation, customization, and maintenance of your Xbox Elite Series 2 Wireless Controller. Designed for enhanced performance and adaptability, this controller offers a professional-grade gaming experience on Xbox One, Xbox Series X|S, and Windows 10 devices.

PACKAGE CONTENTS


- Xbox Elite Series 2 Wireless Controller
- Set of 6 thumbsticks (2 standard, 2 classic, 1 tall, 1 wide dome)
- Set of 4 paddles (2 medium, 2 mini)
- 2 D-pads (standard, faceted)
- Thumbstick-adjustment tool
- Charging dock
- USB-C cable
- Carrying case

SETUP

Initial Charging

Before first use, fully charge your controller. The controller features a built-in rechargeable battery with up to 40 hours of battery life, depending on usage and accessory attachment.

- **Using the Charging Dock:** Place the controller on the charging dock. The dock can be placed inside the carrying case or used externally.
- **Direct USB-C Connection:** Connect the included USB-C cable directly to the controller and a power source (e.g., Xbox console, PC, or USB wall adapter).

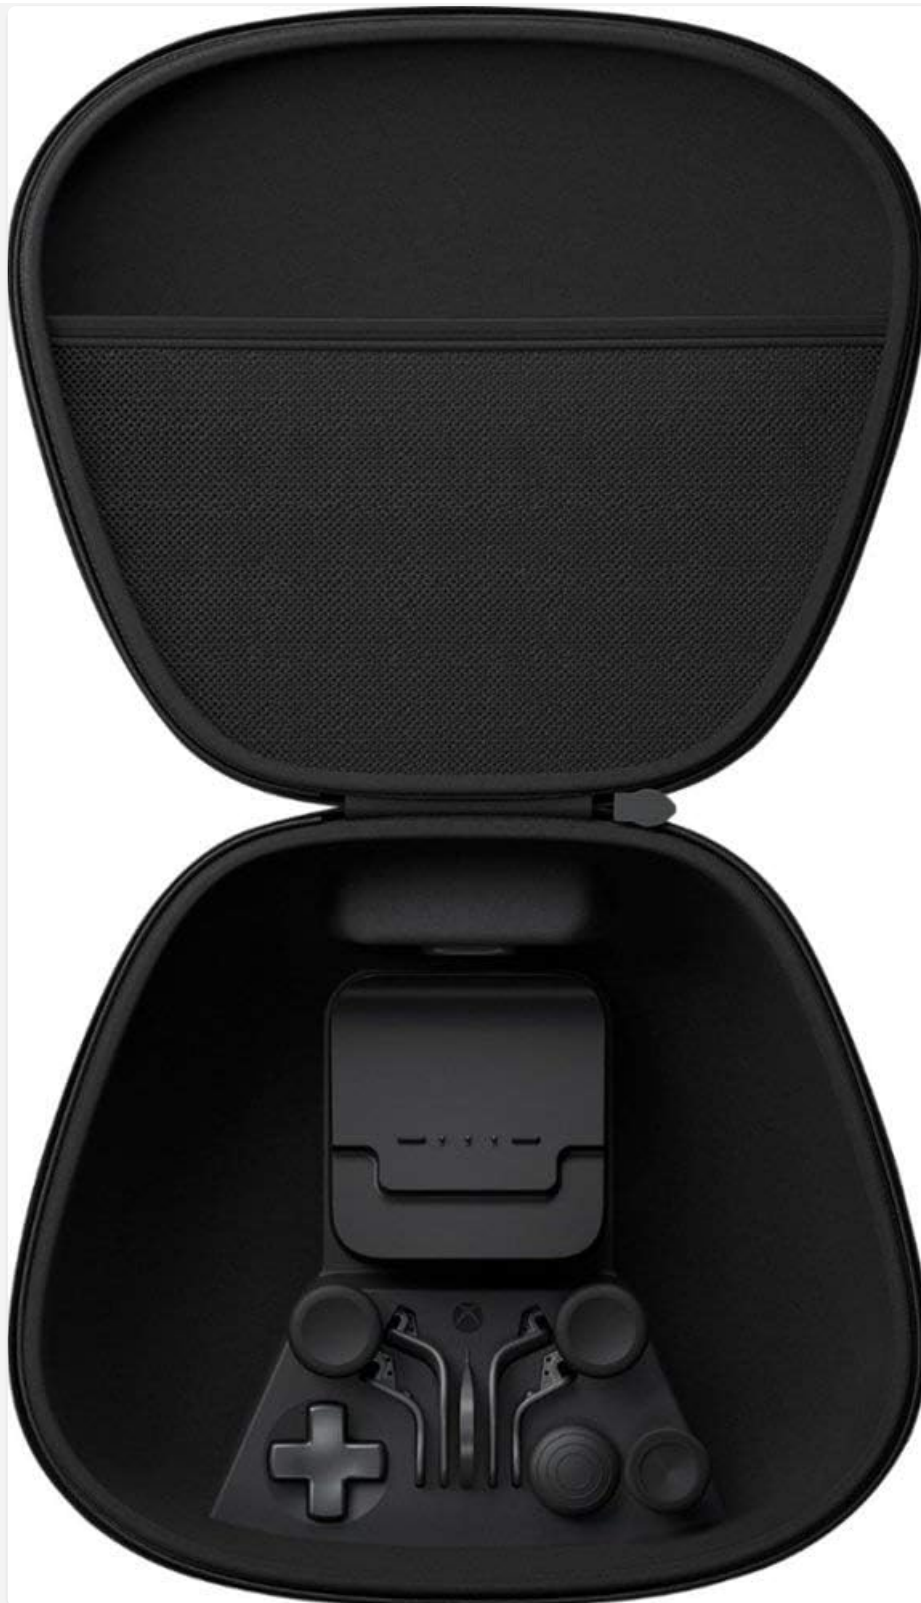

The Xbox Elite Series 2 Wireless Controller can be charged using the included charging dock or directly via the USB-C cable.

Connecting to Your Device

The Xbox Elite Series 2 controller supports multiple connection methods:

- **Xbox Wireless:** Press the Pair button on the controller and your Xbox console. The Xbox button on the controller will flash and then become solid when connected.
- **Bluetooth:** Hold the Pair button on the controller for 3 seconds to enter Bluetooth pairing mode. On your Windows 10 PC or other Bluetooth-enabled device, go to Bluetooth settings and select the controller to pair.
- **USB-C Cable:** Connect the controller directly to your Xbox console or PC using the included USB-C cable for a wired connection.

OPERATING THE CONTROLLER

Interchangeable Components

The Elite Series 2 controller features interchangeable components to adapt to your play style:

- **Thumbsticks:** Easily swap between different thumbstick shapes and heights (standard, classic, tall, wide dome) by pulling them off and snapping new ones into place.
- **D-pads:** Choose between the standard cross-shaped D-pad or the faceted D-pad for precise directional input.
- **Paddles:** Attach up to four paddles to the back of the controller. These paddles can be mapped to any button function, allowing for advanced inputs without removing your thumbs from the thumbsticks.



The controller's rear features four customizable paddles for additional input options.



A clear view of the back of the controller, showing where the paddles attach and the trigger lock switches.

Hair Trigger Locks

Activate the hair trigger locks on the back of the controller to reduce trigger travel, allowing for faster firing in games. There are three settings for each trigger (RT and LT).



The trigger locks offer three distinct positions to adjust the trigger pull distance.

CUSTOMIZATION AND PERSONALIZATION

The Xbox Accessories App (available on Xbox consoles and Windows 10) provides extensive customization options for your Elite Series 2 controller:

- **Button Mapping:** Remap any button, including the paddles, to suit your preferences.
- **Stick Sensitivity:** Adjust the sensitivity curves of the thumbsticks for precise control.
- **Trigger Dead Zones:** Fine-tune the activation and deactivation points of the triggers.
- **Vibration Control:** Adjust the intensity of the controller's vibration motors.
- **Profile Management:** Create and save multiple custom profiles for different games or play styles. You can store up to three profiles directly on the controller and switch between them using the Profile button.

Thumbstick Tension Adjustment

Use the included thumbstick-adjustment tool to change the tension of each thumbstick. There are three tension settings (low, medium, high) to provide varying levels of resistance.



The thumbstick tension can be adjusted to three distinct levels using the provided tool.



Thumbstick set to low tension.



Thumbstick set to medium tension.



Thumbstick set to high tension.



The tall thumbstick option provides increased precision for aiming.

MAINTENANCE

Proper care will extend the life and performance of your controller:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the controller and its components in the included carrying case to protect them from dust and damage.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge the controller regularly.



The included carrying case provides secure storage for the controller and its accessories.



The durable carrying case protects the controller during transport and storage.

TROUBLESHOOTING

Connectivity Issues

- Ensure the controller is charged.
- Verify that your Xbox console or PC's wireless/Bluetooth is enabled.
- Try re-pairing the controller with your device.
- If using a wired connection, ensure the USB-C cable is securely connected to both the controller and the device.

Button or Stick Responsiveness

- Ensure no debris is lodged around buttons or sticks.
- Check the controller's calibration in the Xbox Accessories App.
- Update the controller's firmware via the Xbox Accessories App.

Firmware Update

Regularly check for and install firmware updates for your controller using the Xbox Accessories App. Updates can improve performance, add features, and resolve issues.

SPECIFICATIONS


Feature	Detail
Model Number	FST-00011
Dimensions (L x W x H)	19.69 x 19.66 x 8.76 cm (7.75 x 7.74 x 3.45 inches)
Weight	800 g (1.76 lbs)
Connectivity	Xbox Wireless, Bluetooth, USB-C
Battery Life	Up to 40 hours (rechargeable)
Compatibility	Xbox One, Xbox Series X S, Windows 10
Release Date	April 30, 2020

WARRANTY AND SUPPORT

The Xbox Elite Series 2 Wireless Controller typically comes with a manufacturer's warranty. Based on common warranty periods, a **3-month warranty from Microsoft** is generally provided for this product. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty service, please visit the official Xbox Support website or contact Xbox customer service. Refer to the official Xbox website for the most current support information and contact details.

Related Documents

	<p>Xbox Wireless Elite Series 2 Controller Warranty Update</p> <p>Information regarding the extended warranty coverage for the Xbox Wireless Elite Series 2 Controller, including details on mechanical issues and refunds.</p>
---	---

<div data-bbox="118 96 312 304"> <p>①</p> <p>URL: https://we.kit-2yxSgd9Foc</p> <p>Enter URL</p> </div> <div data-bbox="118 304 312 461"> <p>②</p> <p>Download</p> <p>Download</p> </div> <div data-bbox="118 472 312 719"> <p>③</p> <p>Unzip</p> <p>Open the application: DemoSDK</p> <p>File Path: AdFullInstall -- bin -- DemoSDK.exe</p> </div> <div data-bbox="118 719 312 909"> <p>④</p> <p>Step 1: Connect the cable to the computer Step 2: Press and hold the 'Y' key Step 3: Plug in the USB-C cable</p> </div> <div data-bbox="118 920 312 1290"> <p>⑤</p> <p>The controller is successfully connected to the computer, click to download</p> <p>The program can not be recognized, first double-click "AdFullInstall.exe", and then upgrade!</p> <p>Upgrade Successful</p> <p>Note!!!</p> <p>After upgrading, first connect the Xbox console with cable before you can subsequently connect to the Xbox console wirelessly normally!</p> </div>	<div data-bbox="343 678 1043 707" data-label="Section-Header"> <h3>Guide to Upgrading Xbox Controller Firmware with DemoSDK</h3> </div> <div data-bbox="343 719 1422 790" data-label="Text"> <p>Step-by-step instructions for downloading and using the DemoSDK application to upgrade your wireless Xbox controller firmware. Includes connection steps and troubleshooting tips.</p> </div>
<div data-bbox="118 1413 312 1671"> <p>Offre exclusive</p> <p>Jusqu'au 29 septembre 2025</p> <p>40€ offerts*</p> <p>Comment en profiter ?</p> <ol style="list-style-type: none"> 1. Ajoutez votre Pack manette Xbox + Game Pass Ultimate 3 mois au panier Code : J28229 2. Ajoutez votre Xbox Serie S ou panier Code : J27450 3. La remise s'appliquera automatiquement au panier </div>	<div data-bbox="343 1471 1390 1500" data-label="Section-Header"> <h3>Offre Exclusive : 40€ de remise sur Pack Manette Xbox Robot White et Game Pass Ultimate</h3> </div> <div data-bbox="343 1512 1431 1624" data-label="Text"> <p>Profitez d'une offre exclusive avec 40€ de remise sur l'achat d'une console Xbox Serie S et d'un pack manette Robot White avec 3 mois de Game Pass Ultimate. Offre valable jusqu'au 29 septembre 2025.</p> </div>



[Xbox One Accessory Regulatory and Warranty Guide](#)

Comprehensive guide covering safety, warranty, software license, and regulatory information for Xbox One accessories from Microsoft.

Regulatory and Warranty Guide
Guide réglementaire et de garantie
Guia regulamentaria y garantía
Guia de normae e garantia
Guide de réglementation et de garantie
Sicherheit- und Garantiehinweise
Guida alla normativa e la garanzia
Informacje o wymogach prawnych i gwarancji
Guia de Regulamentação e Garantia
מידע על דרישות חוקיות וגרנטיות