

PERLESMITH PSTVMC06

PERLESMITH Mobile TV Stand User Manual

Model: PSTVMC06

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your PERLESMITH Mobile TV Stand (Model: PSTVMC06). Please read this manual thoroughly before installation and use to ensure safe and correct operation. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING:

- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- Ensure the TV size is between 23 and 60 inches and VESA patterns are compatible (100x100mm to 400x400mm).
- Always use two people for assembly and mounting the TV to prevent injury or damage.
- Lock the wheels when the stand is stationary to prevent accidental movement.
- Do not allow children to climb on or play with the TV stand.
- Place the stand on a flat, stable surface. Avoid uneven ground.
- Check all connections and fasteners regularly to ensure they remain secure.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact PERLESMITH customer service.

- 1x TV cart (main frame)
- All necessary hardware (screws, washers, spacers)
- Assembly tools (Allen keys, wrench)
- Instruction Manual

Note: Specific screw sizes and quantities are detailed in the assembly steps.

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your PERLESMITH Mobile TV Stand.

Step 1: Assemble the Base

Attach the support legs to the central base pole. Ensure all screws are tightened securely. The wheels should be attached to the ends of the support legs.





Image: Fully assembled PERLESMITH Mobile TV Stand, illustrating the base with wheels, central pole, laptop shelf, and TV mounting bracket.

Step 2: Install the Central Pole and Shelf

Connect the pole sections and secure them. Install the adjustable storage shelf onto the central pole at your desired height. This shelf can hold devices like laptops, streaming boxes, or game consoles.



Image: Diagram illustrating the adjustable storage shelf and its movement along the central pole.

Step 3: Attach TV Brackets to Your TV

Identify the correct screws and spacers for your TV's VESA mounting holes. Attach the TV brackets to the back of your television. Ensure they are level and securely fastened.

Wide TV Compatibility

23"-60"



88 lbs

VESA Patterns

400x400mm | 400x300mm
400x200mm | 300x300mm
300x200mm | 200x300mm
200x200mm | 200x100mm
100x200mm | 100x100mm

Image: Visual representation of wide TV compatibility (23"-60") and VESA patterns (100x100mm to 400x400mm) with a maximum weight of 88 lbs.

Step 4: Mount the TV onto the Stand

With assistance, carefully lift the TV and hook the brackets onto the TV plate on the stand. Secure the TV using the safety screws provided to prevent accidental dislodgement.

3 Bracket Height Settings



Image: Illustration demonstrating the three available bracket height settings for mounting the TV, indicating a maximum height of 51.22 inches.

OPERATING INSTRUCTIONS

Adjusting TV Height

The TV plate can be adjusted to different heights by repositioning the mounting brackets on the central pole. Refer to the assembly instructions for detailed steps on adjusting the TV plate height.

2 Cable Clips



Image: Comparison of two TV plate height options, demonstrating the difference between using three pole sections (51.22 inches) and two pole sections (33.9 inches).

Tilting the TV

The TV mounting bracket allows for a 15° upward angle adjustment. Loosen the tilt knobs on the side of the TV brackets, adjust the TV to your desired viewing angle, and then securely tighten the knobs.

Tilt for Optimal Viewing

Tilt Down **-5°**

Tilt UP **+10°**



Image: Illustration of the TV tilt function, showing the ability to tilt the screen up by +10 degrees and down by -5 degrees for optimal viewing.

Moving the TV Stand

The stand is equipped with rolling wheels for easy mobility. To move the stand, unlock all four wheels. Guide the stand carefully to its new location. Always ensure the path is clear of obstacles.

Mobile TV Flexibility



Image: Depiction of the TV stand's mobile flexibility, showing it being moved between rooms with an emphasis on the 360-degree swivel wheels.

Locking the Wheels

To secure the TV stand in a stationary position, press down on the locking mechanism on each wheel until it clicks into place. Ensure all wheels are locked before leaving the stand unattended.

Cable Management

Utilize the integrated cable clips on the central pole to organize and conceal cables, maintaining a tidy appearance and preventing tripping hazards.



Image: Illustration of the two cable clips integrated into the central pole for organized cable management.

MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Inspections:** Periodically check all screws and connections to ensure they are tight and secure. Retighten if necessary.
- **Wheel Care:** Keep the wheels free of debris to ensure smooth movement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is unstable or wobbles.	Loose connections; uneven surface; overloaded.	Ensure all screws are tightened. Move to a flat, level surface. Verify TV weight is within limits.
Wheels do not roll smoothly.	Debris in wheels; wheels locked.	Clear any debris from the wheels. Ensure all wheels are unlocked.
TV cannot be tilted.	Tilt knobs are too tight.	Loosen the tilt knobs, adjust the angle, then re-tighten.
Missing parts during assembly.	Packaging error.	Contact PERLESMITH customer service immediately for replacement parts.

SPECIFICATIONS

- **Model:** PSTVMC06
- **Compatible TV Sizes:** 23 - 60 inches
- **Maximum Weight Capacity:** 88 lbs (40 kg)
- **VESA Compatibility:** 100x100mm to 400x400mm
- **Tilt Angle:** Up to 15 degrees (Up +10°, Down -5°)
- **Material:** Alloy Steel
- **Product Dimensions:** 17.44 x 12.83 x 4.8 inches (packaged)
- **Item Weight:** 14.56 pounds

- **Color:** Black

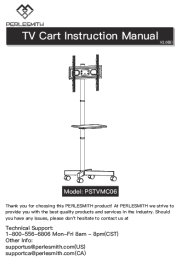 
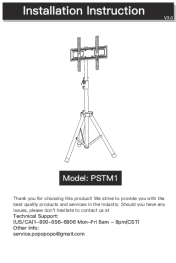 
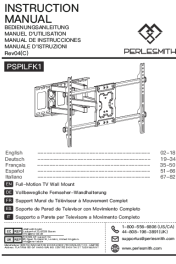 
WARRANTY AND CUSTOMER SUPPORT


 

PERLESMITH provides a limited warranty for this product. For detailed warranty information, product support, or to report missing/damaged parts, please contact PERLESMITH customer service. You can often find contact information on the manufacturer's website or through your purchase platform.

For further assistance, please visit the official PERLESMITH website or refer to the contact details provided with your purchase documentation.

© 2025 PERLESMITH. All rights reserved.

Related Documents - PSTVMC06

 <p>TV Cart Instruction Manual</p> <p>Model: PSTVMC06</p> <p>Thank you for choosing this PERLESMITH product. We strive to provide you with the best quality products and services. Please refer to the user manual and safety instructions for proper use. For more information, please contact our customer support team.</p> <p>Technical Support: Email: support@perlesmith.com Phone: 1-800-555-1234 Other info: support.perlesmith.com</p>	<p>PERLESMITH PSTVMC06 TV Cart Instruction Manual</p> <p>Comprehensive instruction manual for the PERLESMITH PSTVMC06 TV Cart. This guide provides detailed steps for assembly, safety precautions, VESA compatibility checks, and adjustments for a rolling TV stand with an adjustable shelf.</p>
 <p>Installation Instruction</p> <p>Model: PSTM1</p> <p>Thank you for choosing this product. We strive to provide you with the best quality products and services. Please refer to the user manual and safety instructions for proper use. For more information, please contact our customer support team.</p> <p>Technical Support: Email: support@perlesmith.com Phone: 1-800-555-1234 Other info: support.perlesmith.com</p>	<p>PERLESMITH PSTM1 TV Tripod Stand Installation Guide</p> <p>Detailed installation instructions for the PERLESMITH PSTM1 TV Tripod Stand, a portable and height-adjustable floor stand for 23-55 inch LED, LCD, and OLED flat-screen TVs with VESA 400x400mm compatibility and an 88 lbs weight capacity.</p>
 <p>INSTRUCTION MANUAL</p> <p>PERLESMITH</p> <p>Model: PSPILFK1</p> <p>English 01-10 Chinese 11-20 French 21-30 German 31-40 Italian 41-50 Japanese 51-60 Korean 61-70 Spanish 71-80 Russian 81-90 Portuguese 91-100 Dutch 101-110 Polish 111-120 Czech 121-130 Slovak 131-140 Hungarian 141-150 Croatian 151-160 Slovenian 161-170 Bosnian 171-180 Serbian 181-190 Macedonian 191-200 Bulgarian 201-210 Romanian 211-220 Greek 221-230 Turkish 231-240 Ukrainian 241-250 Belarusian 251-260 Lithuanian 261-270 Latvian 271-280 Estonian 281-290 Finnish 291-300 Swedish 301-310 Norwegian 311-320 Danish 321-330 Faroese 331-340 Icelandic 341-350 Maltese 351-360 Malay 361-370 Indonesian 371-380 Vietnamese 381-390 Thai 391-400 Filipino 401-410 Tagalog 411-420 Hindi 421-430 Urdu 431-440 Punjabi 441-450 Gujarati 451-460 Marathi 461-470 Kannada 471-480 Tamil 481-490 Telugu 491-500 Malayalam 501-510 Sinhala 511-520 Burmese 521-530 Khmer 531-540 Vietnamese 541-550 Laotian 551-560 Cambodian 561-570 Thai 571-580 Lao 581-590 Khmer 591-600 Vietnamese 601-610 Laotian 611-620 Cambodian 621-630 Thai 631-640 Lao 641-650 Khmer 651-660 Vietnamese 661-670 Laotian 671-680 Cambodian 681-690 Thai 691-700 Lao 701-710 Khmer 711-720 Vietnamese 721-730 Laotian 731-740 Cambodian 741-750 Thai 751-760 Lao 761-770 Khmer 771-780 Vietnamese 781-790 Laotian 791-800 Cambodian 801-810 Thai 811-820 Lao 821-830 Khmer 831-840 Vietnamese 841-850 Laotian 851-860 Cambodian 861-870 Thai 871-880 Lao 881-890 Khmer 891-900 Vietnamese 901-910 Laotian 911-920 Cambodian 921-930 Thai 931-940 Lao 941-950 Khmer 951-960 Vietnamese 961-970 Laotian 971-980 Cambodian 981-990 Thai 991-1000</p>	<p>PERLESMITH PSPILFK1 Full-Motion TV Wall Mount Installation Guide</p> <p>PERLESMITH PSPILFK1 instruction manual for a full-motion TV wall mount. This guide details safe installation for TVs up to 132 lbs (60kg) on wood studs, concrete, and brick walls. Covers VESA compatibility, parts, and step-by-step assembly for optimal viewing.</p>

<div data-bbox="124 107 300 353"><p>TV Tripod Stand Instruction Manual</p><p>Model: PSTM2</p><p><small>Thank you for choosing this product. We strive to provide you with the best quality products and services. For more information, please visit our website. Please don't hesitate to contact us if you need technical support. 800-247-4939 (Mon-Fri 9am-5pm CST) Other info: sales@perle-smith.com</small></p></div>	<p>PERLESMITH PSTM2 TV Tripod Stand Instruction Manual</p> <p>Instruction manual for the PERLESMITH PSTM2 TV Tripod Stand, detailing assembly, safety instructions, and adjustments for mounting TVs up to 75 inches.</p>
<div data-bbox="124 560 300 817"><p>INSTRUCTION MANUAL</p><p>Model: PIXSF2</p><p>Full-Motion TV Wall Mount</p><p><small>1-800-247-4939 (Mon-Fri 9am-5pm CST) sales@perle-smith.com</small></p></div>	<p>PIXSF2 Full-Motion TV Wall Mount Installation Manual</p> <p>This manual provides instructions for installing the PIXSF2 Full-Motion TV Wall Mount. It covers safety information, compatibility checks, and step-by-step assembly for various wall types, including wood studs and solid concrete.</p>
<div data-bbox="124 873 300 1131"><p>INSTRUCTION MANUAL</p><p>PERLESMITH</p><p>Model: PSTVS13</p><p><small>Table Top TV Stand Instrucciones de instalación Manuale di installazione Manual de instalación Инструкция по монтажу</small></p><p><small>800-247-4939 (Mon-Fri 9am-5pm CST) sales@perle-smith.com</small></p></div>	<p>PERLESMITH PSTVS13 Table Top TV Stand Instruction Manual</p> <p>This instruction manual provides detailed assembly steps, safety guidelines, and compatibility checks for the PERLESMITH PSTVS13 table top TV stand, designed for TVs up to 88 lbs. It covers VESA compatibility, parts identification, and step-by-step assembly for various TV back types.</p>