

[manuals.plus](#) /› [Electrohome](#) /› [Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System User Manual](#)

Electrohome RR75BBCC

Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System

Model: RR75BBCC

INTRODUCTION

The Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System is designed to be the central hub for all your audio needs. This system seamlessly blends classic design with modern functionality, allowing you to enjoy music from various sources including vinyl records, CDs, AM/FM radio, Bluetooth-enabled devices, and USB drives. It also offers the convenience of digitizing your vinyl and CD collections to MP3 format.

Key features include:

- **7-in-1 System:** Plays all your favorite songs from vinyl records, Bluetooth, Aux in, AM/FM Radio, CD Player, and USB.
- **Warm Room-Filling Vinyl Experience:** Features a 3-speed belt-drive turntable and sapphire needle for authentic analog sound.
- **Hand-Crafted Wood Cabinet:** Acoustically tuned for optimal sound performance and a vintage aesthetic.
- **Vinyl-to-MP3 Recording:** Digitize your vinyl records or CDs directly to a USB drive.
- **Wireless Bluetooth Streaming:** Connect your smartphone or tablet to stream music wirelessly.

WHAT'S IN THE BOX

Upon unpacking your Electrohome Kingston system, please ensure all the following components are present:

- Electrohome Kingston 7-in-1 Stereo System
- 45 RPM Record Adaptor
- Remote Control
- Power Cord
- 2 AAA Batteries (for remote control)
- 2 Bonus Replacement Needles
- User Manual (this document)

- Quick Start Guide



Image: The Electrohome Kingston 7-in-1 Stereo System in black, showcasing its open lid revealing the turntable and the front control panel.

SETUP

1. **Unpacking:** Carefully remove the unit and all accessories from the packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the system on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the power cord to the AC inlet on the back of the unit and then plug it into a standard wall outlet.
4. **Remote Control Batteries:** Insert the included 2 AAA batteries into the remote control, observing the

correct polarity.

5. **Turntable Setup:** Remove any protective shipping materials from the turntable platter and tonearm. Ensure the tonearm is unlocked from its rest.

OPERATING INSTRUCTIONS

General Operation

To power on the unit, rotate the STANDBY/VOLUME knob clockwise. The display will illuminate. To adjust the volume, continue rotating this knob. Use the SOURCE button on the unit or remote control to cycle through the different playback modes (Phono, CD, AM, FM, Aux, Bluetooth, USB).

Video: Official product video demonstrating the features and various playback modes of the Electrohome Kingston 7-in-1 Vintage Stereo System.

Playing Vinyl Records (Phono Mode)

1. Lift the turntable lid.
2. Select 'Phono' as the source.
3. Place a vinyl record on the turntable platter. Ensure the correct speed (33 1/3, 45, or 78 RPM) is selected using the speed selector switch. Use the 45 RPM adaptor for singles with a large center hole.
4. Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record. Lower the cueing lever to allow the stylus to descend onto the record.
5. At the end of the record, the tonearm will automatically return to its rest.

Plays 33, 45 and 78rpm vinyl records

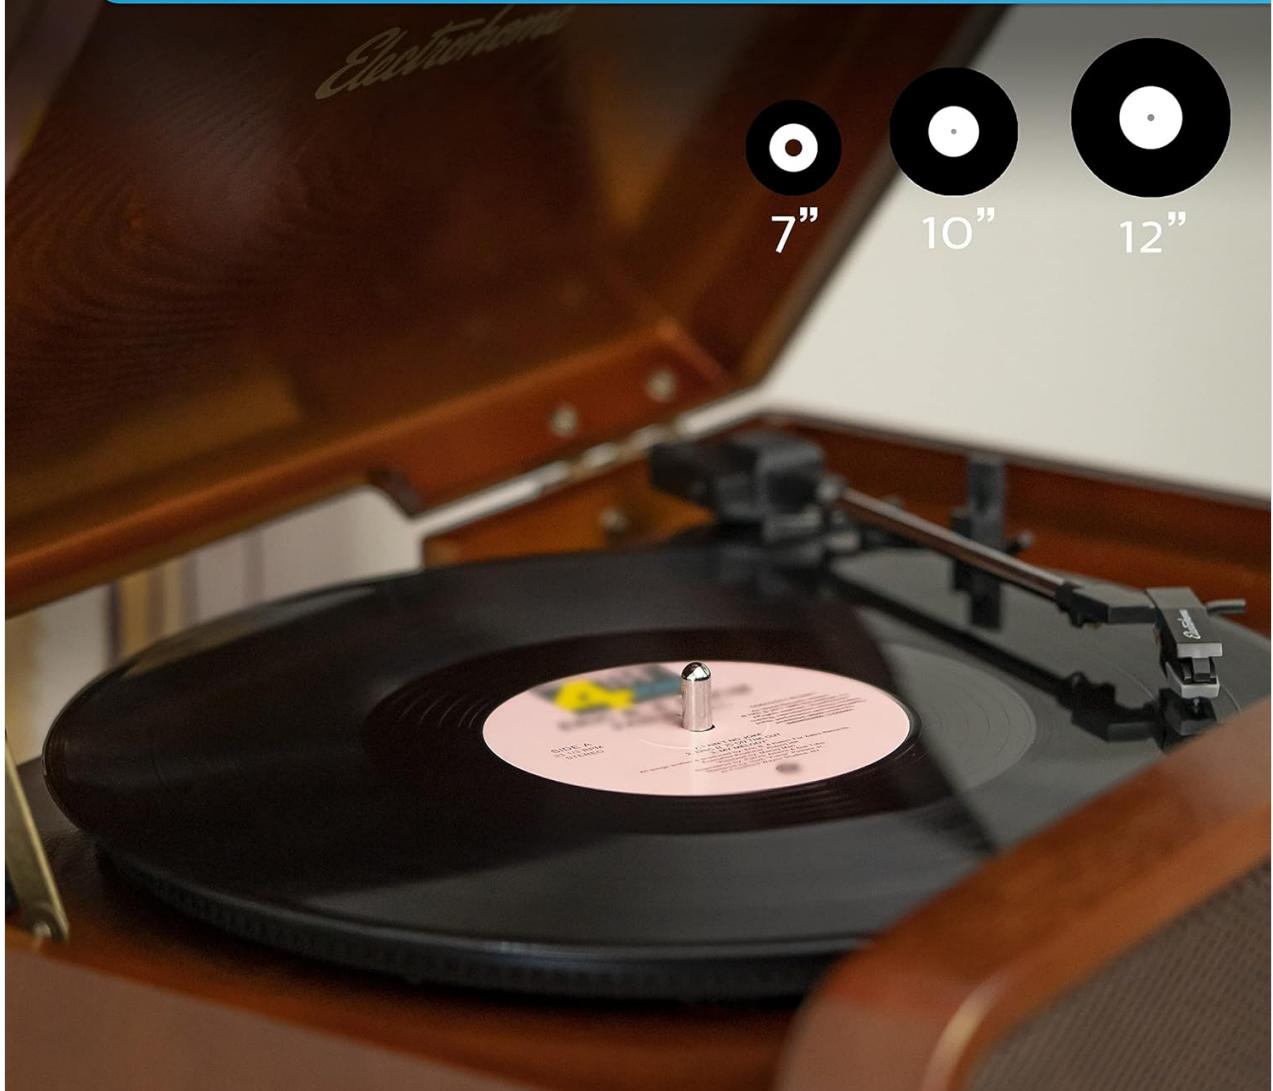


Image: A close-up view of the Electrohome Kingston turntable, showing a vinyl record spinning on the platter. Text overlays indicate compatibility with 7, 10, and 12-inch records.

Bluetooth Playback

1. Select 'BT' (Bluetooth) as the source. The display will show 'BT' and flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet), enable Bluetooth and search for 'Electrohome RR75'.
3. Select 'Electrohome RR75' to pair. Once connected, the 'BT' indicator on the system will stop flashing.
4. You can now play music from your device through the Kingston system.

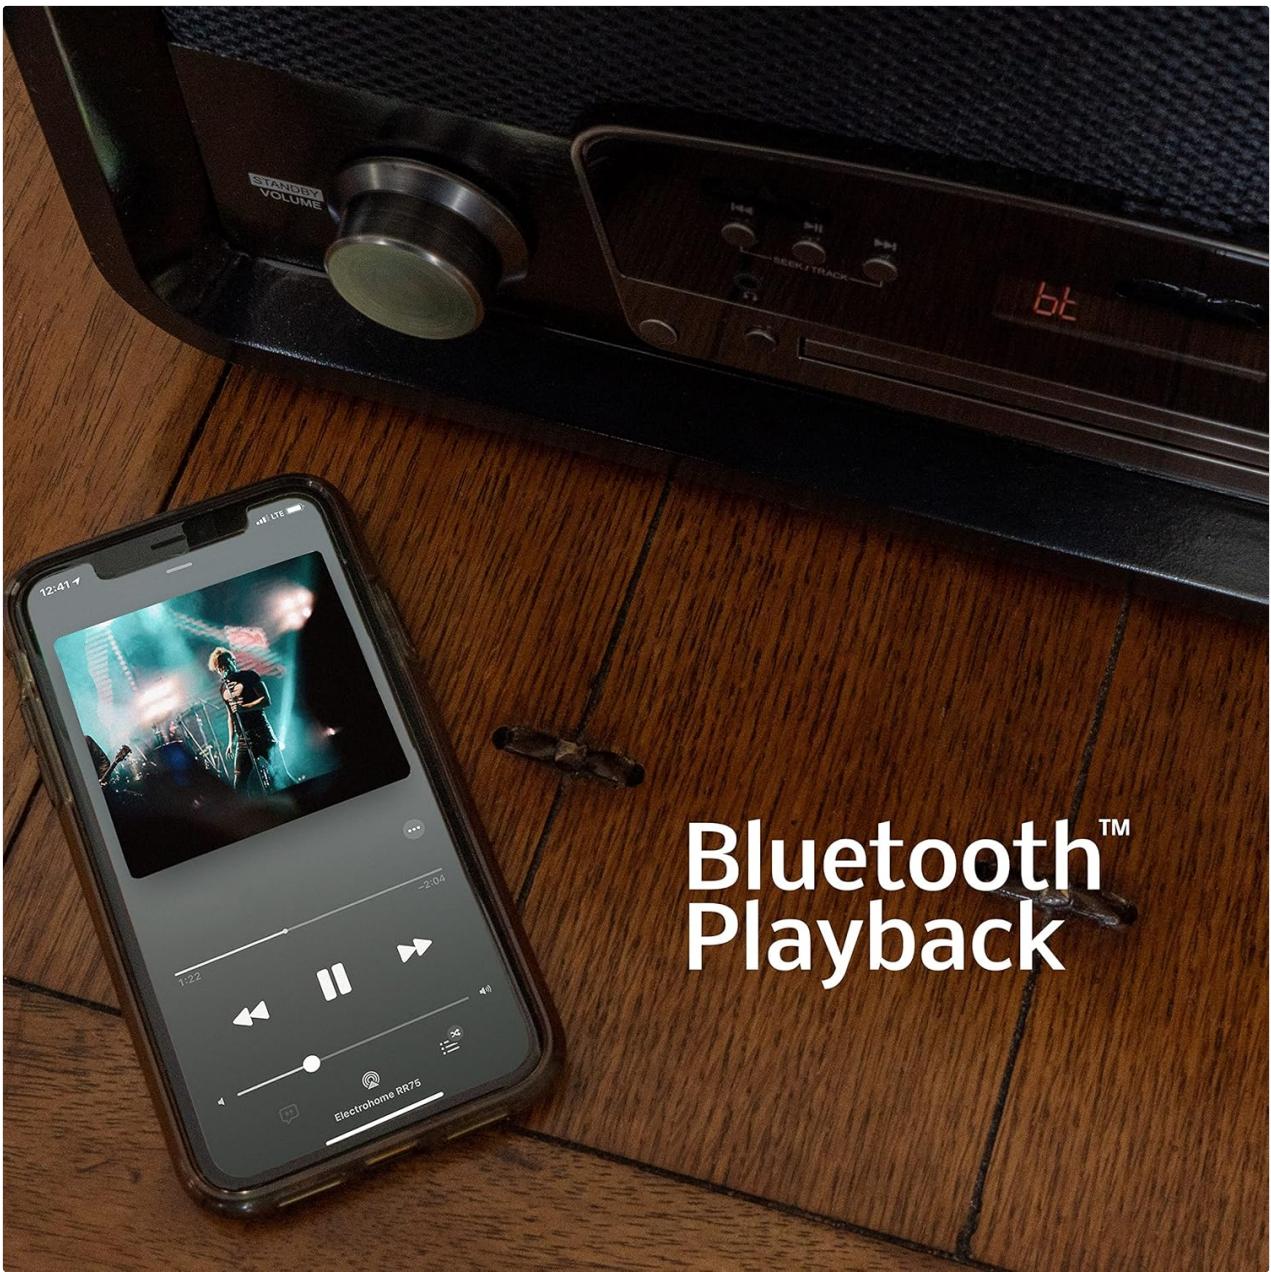


Image: A smartphone screen showing a music playback interface, positioned next to the Electrohome Kingston system, with the words 'Bluetooth Playback' highlighting the wireless audio feature.

CD Playback

1. Select 'CD' as the source.
2. Press the EJECT button to open the CD tray.
3. Place a CD with the label side facing up into the tray and press EJECT again to close the tray.
4. The system will read the CD and begin playback automatically. Use the SEEK/TRACK buttons to skip tracks.



Image: The Electrohome Kingston stereo system in a cherry wood finish, surrounded by icons illustrating its diverse input capabilities: Vinyl, Bluetooth, USB, CD, Aux, and AM/FM radio.

USB Playback & Recording

- Playback:** Insert a USB drive into the USB port. Select 'USB' as the source. The system will automatically detect and play compatible audio files (MP3).
- Recording:** While playing a vinyl record or CD, press the RECORD button. The system will begin recording the audio to the connected USB drive in MP3 format. Press RECORD again to stop recording.

Play and Preserve your records with Vinyl-to-MP3 Recording



Image: A detailed shot of the Electrohome Kingston's front panel, featuring a USB drive plugged into the port. The accompanying text highlights the 'Play and Preserve your records with Vinyl-to-MP3 Recording' function.

AM/FM Radio

1. Select 'AM' or 'FM' as the source.
2. Use the TUNING knob to manually tune to your desired radio station.
3. For FM reception, extend the FM wire antenna located at the back of the unit for optimal signal.

Auxiliary Input (Aux In)

Connect external audio devices (e.g., MP3 players, smartphones) to the AUX IN port on the back of the unit using a 3.5mm audio cable (not included). Select 'AUX' as the source to play audio from the connected device.

Aux In

To connect a smartphone, tablet, or external media player

RCA Out

For optional external speakers



Image: A view of the rear panel of the Electrohome Kingston stereo system, clearly showing the 'Aux In' jack for connecting external audio sources and the 'Audio Out' RCA ports for optional external speakers.

Remote Control

The included remote control provides convenient access to various functions, including power, source selection, volume control, track skipping, and EQ settings.



Remote Control

Full control to switch sources, pair Bluetooth devices, and customize EQ Settings



Image: The remote control for the Electrohome Kingston stereo system is displayed on a wooden surface, emphasizing its role in controlling various system functions.

MAINTENANCE

- Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Stylus Care:** Regularly clean the turntable stylus with a soft brush designed for stylus cleaning. Replace the stylus approximately every 400 hours of playback or if sound quality deteriorates.
- Dust Cover:** Keep the dust cover closed when not in use to protect the turntable from dust and debris.
- CD Tray:** Avoid forcing the CD tray. Ensure CDs are properly seated before closing the tray.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active	Ensure power cord is securely plugged in; try a different outlet.
No sound	Volume too low; incorrect source selected; headphones connected	Increase volume; select correct source; disconnect headphones.
Turntable not spinning or erratic speed	Shipping materials not removed; belt dislodged; incorrect speed selected	Remove all packing materials; check turntable belt; select correct RPM.
Bluetooth not connecting	Device too far; not in pairing mode; previously paired device connected	Move device closer; ensure system is in BT pairing mode; disconnect from other devices.
CD not playing	CD inserted incorrectly; CD scratched/dirty; incompatible disc format	Reinsert CD label side up; clean CD; ensure it's an audio CD.

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.5 x 17.3 x 12.25 inches
Item Weight	23.8 pounds
Model Number	RR75BBCC
Batteries	2 AAA batteries (included)
Brand	Electrohome
Connectivity Technology	Wireless, Wired
Maximum Rotational Speed	78 RPM
Material	MDF Wood
Color	Black
Model Name	Kingston
Compatible Devices	Tablet, Headphone, Smartphone, Speaker


WARRANTY AND SUPPORT


Your Electrohome Kingston 7-in-1 Vintage Vinyl Record Player Stereo System comes with a **1 Year Manufacturer's Warranty**. Electrohome also provides **Lifetime Customer Support** for this product.

For technical assistance, troubleshooting, or warranty claims, please refer to the contact information provided in your Quick Start Guide or visit the official Electrohome support website.

© 2024 Electrohome. All rights reserved.

Related Documents - RR75BBCC

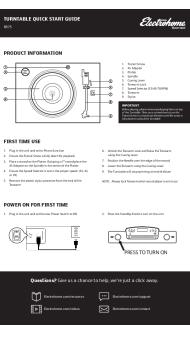 User Manual v1.0	<p>Electrohome RR75 7-in-1 Vinyl Record Player User Manual</p> <p>Comprehensive user manual for the Electrohome RR75 7-in-1 Vinyl Record Player, detailing setup, operation of all features including vinyl playback, CD, USB, Bluetooth, radio, and recording, along with care, maintenance, troubleshooting, and safety information.</p>
 User Manual v1.0	<p>Electrohome RR75 7-in-1 Vinyl Record Player User Manual</p> <p>Comprehensive user manual for the Electrohome RR75 7-in-1 Vinyl Record Player, detailing setup, operation of various sources (vinyl, CD, Bluetooth, USB, Radio, AUX), recording features, maintenance, troubleshooting, specifications, safety instructions, and warranty information.</p>
 User Manual v1.0	<p>Electrohome RR75 7-in-1 Vinyl Record Player User Manual</p> <p>Comprehensive user manual for the Electrohome RR75 7-in-1 Vinyl Record Player. Learn about setup, operation of the turntable, CD player, Bluetooth, radio, USB functions, recording, maintenance, troubleshooting, specifications, and warranty.</p>
 Quick Start Guide	<p>Electrohome RR75 Turntable Quick Start Guide</p> <p>A quick start guide for the Electrohome RR75 turntable, covering product information, first-time use instructions, and power-on procedures.</p>

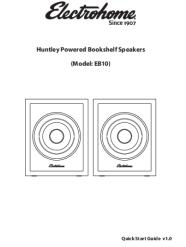 <p>ELECTROHOME KARAOKE CD+G PLAYER SPEAKER SYSTEM LECTEUR KARAOKE CD+G ET SYSTÈME DE HAUT-PARLEURS EAKAR300 INSTRUCTION MANUAL LIVRE D'INSTRUCTIONS</p> <p>EAKAR300 Thank you for your purchase of this Electrohome product. Please read this instruction manual carefully before using your product. Best Enjoy Singing! www.electrohome.com</p>	<p><u>Electrohome EAKAR300 Karaoke CD+G Player Speaker System Instruction Manual</u></p> <p>This manual provides comprehensive instructions for the Electrohome EAKAR300 Karaoke CD+G Player Speaker System, covering setup, operation, maintenance, troubleshooting, and specifications. Learn how to connect, use features like Echo and AVC, and care for your device.</p>
 <p>Electrohome Huntley Powered Bookshelf Speakers (Model: EB10)</p> <p>EB10 Quick Start Guide v1.0</p>	<p><u>Electrohome Huntley Powered Bookshelf Speakers EB10 Quick Start Guide</u></p> <p>Quick start guide for Electrohome Huntley Powered Bookshelf Speakers (Model: EB10), covering setup, product information, connections, and safety instructions.</p>