

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER Bug Zapper Mosquito Killer Instruction Manual, Model 1

BLACK+DECKER 1

BLACK+DECKER Bug Zapper Mosquito Killer Instruction Manual

Model: 1

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before operating this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **FOR OUTDOOR USE ONLY.** Do not use this product indoors unless specifically instructed.
- Keep out of reach of children and pets.
- Do not insert foreign objects into the zapper grid.
- Always unplug the unit before cleaning or performing any maintenance.
- Do not operate near flammable liquids or gases.
- Do not immerse the unit in water or any other liquid.
- Inspect the unit and cord for damage before each use. Do not use if damaged.

PACKAGE CONTENTS

Verify that all items are present in your package:

- BLACK+DECKER Bug Zapper Unit
- UV Light Bulb (pre-installed or separate)
- Hanging Chain
- Cleaning Brush
- Removable Collection Tray



Image: The bug zapper unit displayed alongside its accessories, including a replacement UV bulb, a cleaning brush, a hanging chain, and the power plug.

SETUP AND INSTALLATION

The BLACK+DECKER Bug Zapper offers versatile placement options for optimal insect control.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage if desired.
2. **Placement Options:**

- **Hanging:** Attach the provided hanging chain to the loop at the top of the zapper unit. Hang the unit from a secure hook, tree branch, awning, or other suitable structure. Ensure it is hung at a height where it is out of reach of children and pets, and away from direct contact with people or food preparation areas.
 - **Freestanding:** Place the zapper on a stable, flat surface such as a table or patio floor. Ensure the surface is level to prevent the unit from tipping over.
3. **Power Connection:** Plug the power cord into a standard outdoor-rated electrical outlet. Ensure the outlet is protected by a Ground Fault Circuit Interrupter (GFCI) for outdoor safety.



Image: The bug zapper is shown hanging above an outdoor patio, illustrating a common installation method for effective area coverage.

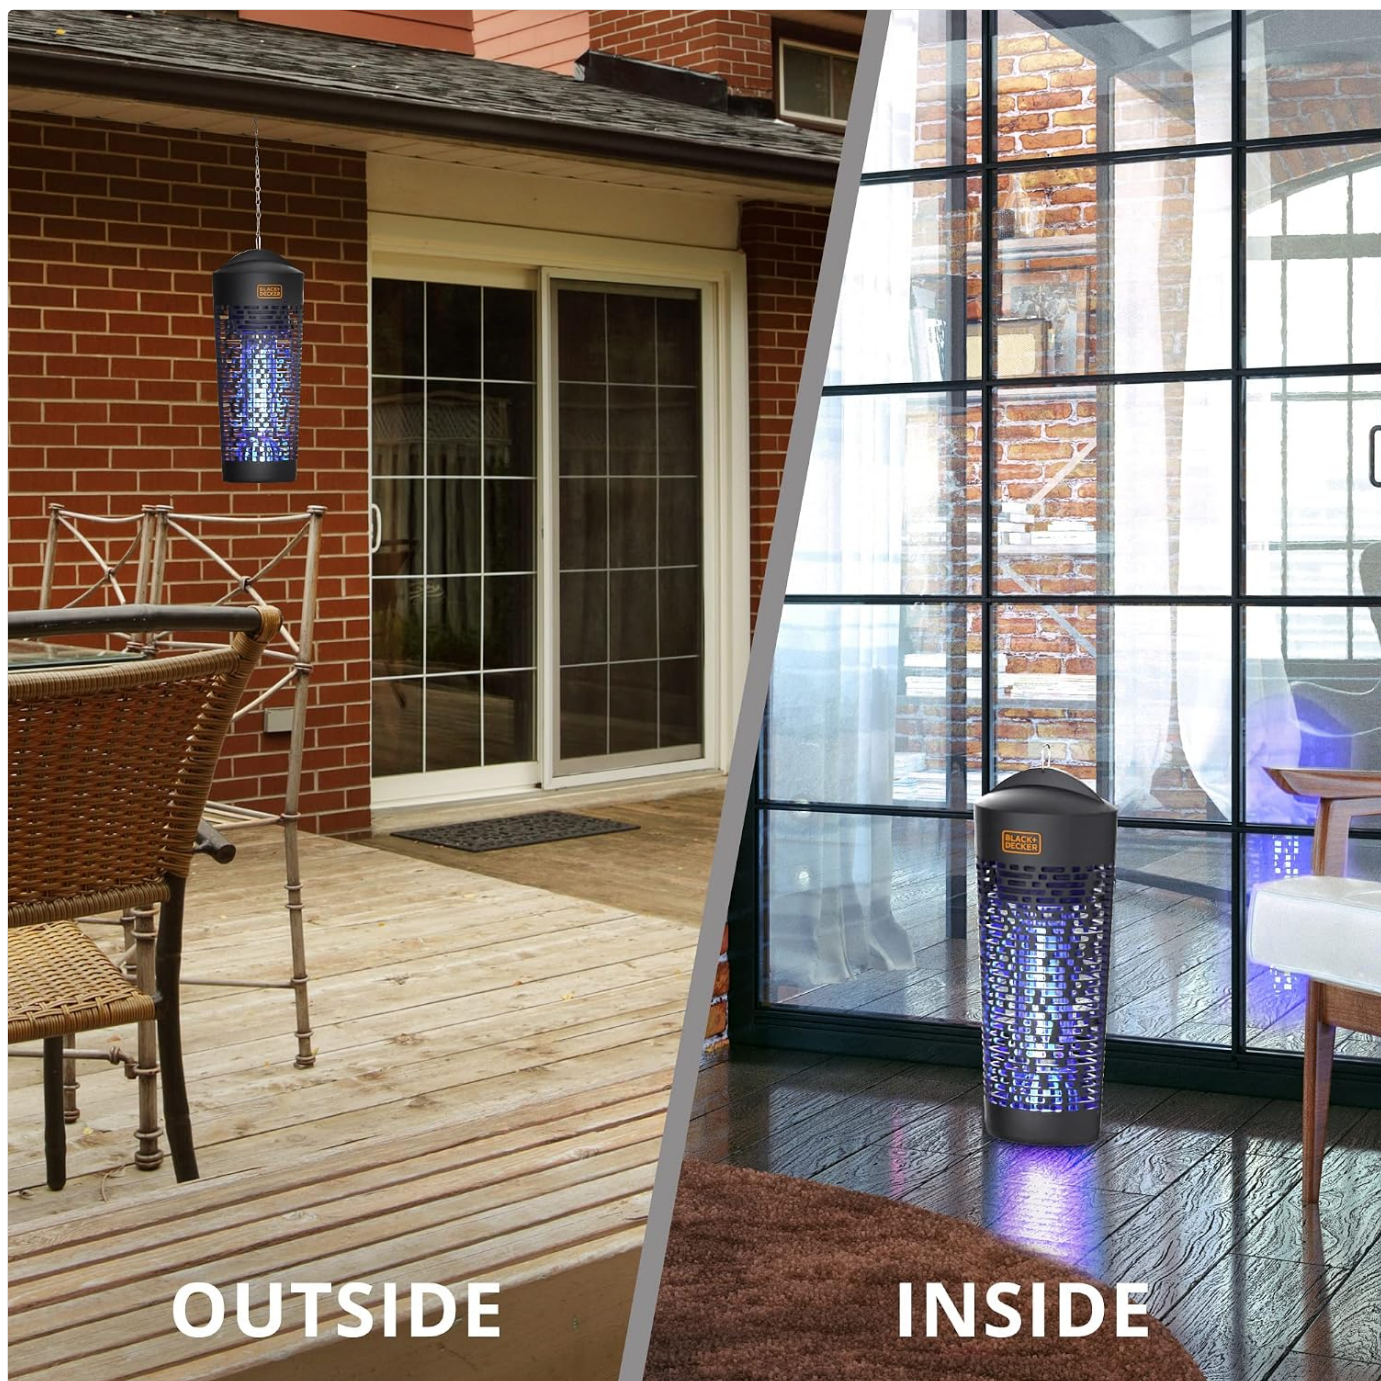


Image: A split image demonstrating the bug zapper's use both outdoors on a patio and indoors near a window, highlighting its versatile application.

OPERATING INSTRUCTIONS

The bug zapper is designed for simple operation.

1. **Power On:** Once plugged into a suitable electrical outlet, the UV light will illuminate, attracting flying insects. There is no separate on/off switch; the unit operates when plugged in.
2. **Insect Attraction:** The ultraviolet light attracts flies, mosquitoes, gnats, wasps, moths, and other flying insects.
3. **Zapping Mechanism:** Insects are drawn to the light and come into contact with the electrified grid, resulting in a quick and effective zap.
4. **Coverage Area:** The unit provides effective coverage for areas up to approximately 0.5 acre.







Image: The bug zapper actively attracting and eliminating flying insects, depicted by insects near the glowing blue UV light and electric arcs.

FLY IN, ZAP OUT!

Whether your yard is taken over by black flies, mosquitoes, gnats, greenheads, wasps or other biting pests, this high-voltage Outdoor Bug Zapper provides effortless extermination from dusk to dawn.

COVERAGE
AREA
**1/2
ACRE**



Image: A visual representation of the bug zapper's operational principle, showing its effective coverage area and how insects are drawn to and eliminated by the device.

MAINTENANCE

Regular cleaning and bulb replacement ensure optimal performance of your bug zapper.

Cleaning the Collection Tray and Grid

1. **Unplug the Unit:** Always disconnect the power cord from the electrical outlet before cleaning.
2. **Remove Collection Tray:** The removable collection tray is located at the bottom of the unit. Gently slide or twist it to remove.
3. **Empty and Clean Tray:** Dispose of collected insect debris. Wash the tray with mild soap and water, then rinse thoroughly and allow it to dry completely before reinserting.
4. **Clean the Grid:** Use the provided cleaning brush to gently brush away any insect remains from the electrified grid. Do not use water or wet cloths on the grid.
5. **Reassemble:** Once the tray is dry and the grid is clean, reinsert the collection tray securely into the bottom of the unit.

COLLECTION TRAY

No more taking apart the entire unit to empty your kill; bugs collect in the easy-clean tray (remove so they fall directly to ground).



DURABLE DESIGN

Resilient waterproof casing protects against everyday weather, while the replaceable bulb provides many years of relief.



PET AND KIDS SAFE

Provides fast, reliable pest control with maximum coverage up to 1/2 acre and is Safe for Use Around Children and Pets



Image: This image illustrates the easy-clean collection tray being emptied of insect debris, and also depicts the unit's durable design and safety features for use around children and pets.

Bulb Replacement

The UV light bulb may need replacement over time to maintain effectiveness.

1. **Unplug the Unit:** Ensure the zapper is unplugged and completely cool before attempting bulb replacement.
2. **Access Bulb:** Refer to the specific instructions provided with your replacement bulb or consult the full user manual for detailed steps on accessing and removing the old bulb. Typically, this involves carefully opening a section of the unit.
3. **Install New Bulb:** Insert the new UV replacement bulb, ensuring it is securely seated.
4. **Reassemble:** Close and secure any opened sections of the unit.
5. **Test:** Plug the unit back in to confirm the new bulb is working.

TROUBLESHOOTING

If your bug zapper is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in securely. Power outlet is not active. UV bulb is burned out or loose. Internal wiring issue.	Ensure the power cord is fully inserted into a working outlet. Test the outlet with another appliance. Check GFCI. Replace the UV bulb (see "Bulb Replacement"). Contact customer support if the issue persists after checking the above.

Problem	Possible Cause	Solution
Zapping sound is weak or absent.	Grid is dirty with insect debris. Low insect activity.	Clean the electrified grid thoroughly with the provided brush (see "Cleaning the Collection Tray and Grid"). Ensure the unit is placed in an area with active flying insects.
Fewer insects are being zapped.	UV bulb is old and losing effectiveness. Unit placement is not optimal.	Replace the UV bulb. Relocate the zapper to a darker area or closer to insect breeding grounds, away from competing light sources.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Number	1
Product Dimensions	17.98"L x 12"W x 8"H (approximately 45.67 cm L x 30.48 cm W x 20.32 cm H)
Item Weight	3.7 Pounds (approximately 1.68 kg)
Material	Metal
Coverage Area	Up to 0.5 Acre
Power Source	Electric (Plug-in)
Target Species	Fly, Gnat, Mosquito, Moth, Wasp



Image: A visual representation of the bug zapper's height, measured at 19.1 inches (48.5 cm), providing a clear understanding of its physical size.

WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or technical assistance, please refer to the official BLACK+DECKER website or contact their customer support directly.

Online Support: Visit the official BLACK+DECKER website for FAQs, product manuals, and contact options.

Contact Information: Refer to the product packaging or the official website for the most current customer service contact details, including phone numbers and email addresses.

Please have your model number (Model 1) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question