

[manuals.plus](#) /› [Logitech](#) /› [Logitech Pebble M350 Wireless Mouse Instruction Manual](#)

Logitech M350


Logitech Pebble M350 Wireless Mouse Instruction Manual

Model: M350

INTRODUCTION

The Logitech Pebble M350 is a slim, silent, and portable wireless mouse designed for convenience and efficiency. It offers dual connectivity options, allowing seamless switching between Bluetooth wireless technology and a USB receiver. This manual provides essential information for setting up, operating, and maintaining your Pebble M350 mouse.

PRODUCT OVERVIEW

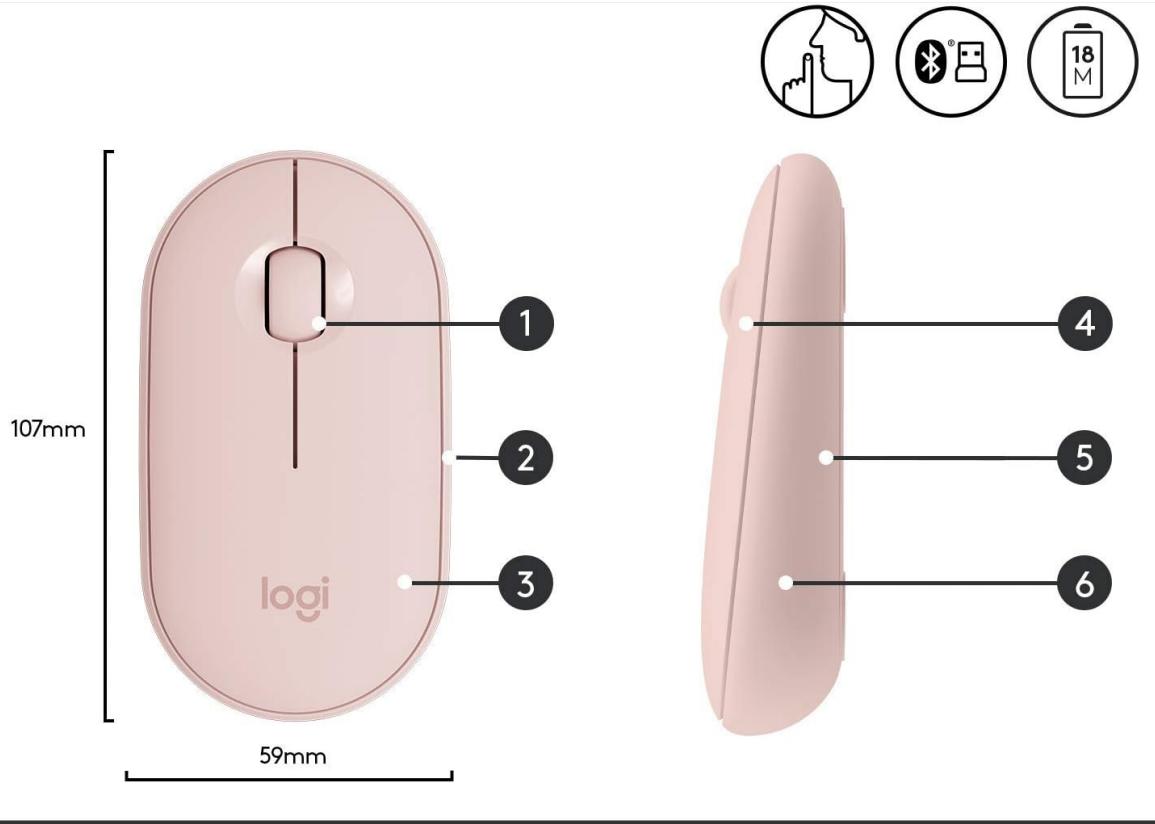

- 1. Silent wide rubber wheel
- 2. Ambidextrous pebble shape
- 3. Bluetooth+USB receiver
- 4. Magnetic keyplate
- 5. High precision tracking
- 6. 18-month battery life

Image: Diagram illustrating the key components of the Logitech Pebble M350 mouse, including the silent scroll wheel, ambidextrous pebble shape, Bluetooth+USB receiver, magnetic keyplate, high precision tracking, and 18-month battery life.

- **Modern, Slim Design:** The Pebble M350 features a sleek, minimalist design that is comfortable to hold and easy to carry.
- **Silent Clicks and Ultra-Quiet Scrolling:** Experience the same click feel with over 90% noise reduction, ideal for quiet environments.
- **Dual Connectivity:** Connect via Bluetooth wireless technology or the included tiny USB receiver.
- **Long Battery Life:** Enjoy up to 18 months of use on a single AA battery.
- **High-Precision Optical Tracking:** Ensures accurate and responsive cursor control.

SETUP AND CONNECTIVITY

1. Battery Installation

The Logitech Pebble M350 requires one AA battery. The battery compartment is located under the magnetic top cover of the mouse.

1. Gently lift the magnetic top cover from the mouse.
2. Insert one AA battery into the compartment, ensuring correct polarity (+/-).
3. Replace the magnetic top cover, ensuring it snaps securely into place.



Image: The Logitech Pebble M350 mouse with its magnetic top cover detached, revealing the single AA battery and the storage slot for the USB receiver.

2. Connecting via USB Receiver

For a stable 2.4 GHz wireless connection, use the included USB receiver.

1. Lift the magnetic top cover of the mouse.
2. Remove the tiny USB receiver from its storage slot.
3. Plug the USB receiver into an available USB port on your computer.
4. Turn on the mouse using the On/Off switch located on the bottom. The LED indicator will show green for USB connection.
5. Your computer should automatically detect the mouse.

Your browser does not support the video tag.

Video: Demonstrates the installation of the AA battery, removal and insertion of the USB receiver, and the quiet clicking sound of the Logitech Pebble M350 mouse.

3. Connecting via Bluetooth

For a cable-free connection, pair your mouse via Bluetooth.

1. Turn on the mouse using the On/Off switch on the bottom.
2. Press and hold the connectivity button on the bottom of the mouse until the LED indicator starts blinking blue. This indicates pairing mode.
3. On your computer or device, navigate to Bluetooth settings and select "Logitech Pebble" from the list of available devices to pair.

4. Once connected, the LED indicator will show a steady blue light.



Image: The underside of the Logitech Pebble M350 mouse, highlighting the On/Off switch and the button used to switch between USB receiver and Bluetooth connections, indicated by a small LED light.


Your browser does not support the video tag.

Video: Shows the slim profile of the Logitech Pebble M350 mouse and demonstrates its dual connectivity feature, allowing users to switch between USB and Bluetooth connections.

OPERATING THE MOUSE

Basic Functions

- **Left Click:** Primary action, selection.
- **Right Click:** Secondary action, context menus.
- **Scroll Wheel:** Scroll up or down through documents and web pages. The scroll wheel also functions as a middle click button.

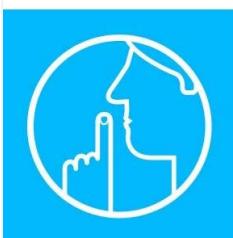

CLICK AND SCROLL SILENTLY

Image: A hand demonstrating the use of the Logitech Pebble M350 mouse, emphasizing its quiet click and ultra-quiet scrolling capabilities.

MAINTENANCE

Cleaning

To ensure optimal performance and longevity, keep your mouse clean.

- Use a soft, lint-free cloth to wipe the exterior of the mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution.
- Avoid using harsh chemicals or abrasive materials.
- Periodically check the optical sensor on the bottom for dust or debris and clean gently if necessary.

Battery Replacement

When the battery is low, the LED indicator on the bottom of the mouse may blink red. Replace the AA battery as described in the "Battery Installation" section.

TROUBLESHOOTING

- **Mouse not responding:**

- Ensure the mouse is turned on.
- Check the battery level and replace if necessary.
- If using the USB receiver, ensure it is securely plugged into a working USB port. Try a different port.
- If using Bluetooth, ensure Bluetooth is enabled on your device and the mouse is correctly paired. Try re-pairing the mouse.

- **Intermittent connection:**

- Move the mouse closer to your computer.
- Avoid using the mouse on metallic surfaces, which can interfere with wireless signals.
- Minimize interference from other wireless devices.

- **Cursor erratic or not moving smoothly:**

- Clean the optical sensor on the bottom of the mouse.
- Use the mouse on a clean, non-reflective surface or a mouse pad.

SPECIFICATIONS

Product Dimensions	4.21 x 2.32 x 1.04 inches
Item Weight	3.53 ounces
Item Model Number	910-005769-cr
Batteries	1 Lithium Metal battery required (AA)
Connectivity Technology	USB, Bluetooth Wireless Technology
Movement Detection Technology	Optical
Color	Rose
Manufacturer	Logitech

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Logitech website or contact Logitech customer service. Keep your purchase receipt for warranty claims.