

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [WMF](#) /
- › [WMF Lono Electric Table Grill User Manual](#)

## WMF 415430011

# WMF Lono Electric Table Grill User Manual

Model: 415430011

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, maintenance, and care of your WMF Lono Electric Table Grill with Glass Lid. Please read these instructions carefully before first use and keep them for future reference.

The WMF Lono Electric Table Grill is designed for indoor use, offering a convenient way to grill various foods with its non-stick coated grill plate and protective glass lid. Its robust stainless steel construction ensures durability and easy cleaning.

## SAFETY INSTRUCTIONS

---

- Always ensure the grill is placed on a stable, heat-resistant surface.
- Do not immerse the electrical unit (power cord and temperature control) in water or other liquids.
- Keep out of reach of children.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the grill if the power cord or plug is damaged.
- Allow the grill to cool completely before handling or cleaning removable parts.
- Use only original WMF accessories and spare parts.

## PRODUCT OVERVIEW

---

The WMF Lono Electric Table Grill consists of several key components designed for optimal grilling performance and ease of use.



Figure 1: WMF Lono Electric Table Grill with the glass lid in the closed position, showing the sleek stainless steel and black design.



Figure 2: The grill with its glass lid opened, revealing the non-stick grill plate ready for use.



Figure 3: An exploded view illustrating the main components: the base unit, grill plate, glass lid, and removable drip tray.



Figure 4: A hand demonstrating the easy removal of the integrated drip tray for cleaning.

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and inspect the grill for any damage. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the grill plate and drip tray with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Assembly:**
  - Place the base unit on a flat, stable, and heat-resistant surface.
  - Insert the drip tray into its designated slot at the front of the base unit.
  - Carefully place the grill plate onto the heating element within the base unit, ensuring it sits securely.
  - Attach the glass lid to the hinges on the base unit.
  - Connect the temperature control unit to the side of the grill plate, ensuring it clicks firmly into place.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your grill (100 Volts).

## OPERATING INSTRUCTIONS

---

### Preheating

1. Ensure the grill is properly assembled and plugged in.
2. Turn the temperature control dial to your desired setting. The indicator light will illuminate, signaling that the grill is heating.
3. Allow the grill to preheat for approximately 5-10 minutes, or until the indicator light turns off, indicating the desired temperature has been reached.

### Grilling

1. Carefully place food onto the preheated grill plate. Avoid overcrowding the grill to ensure even cooking.
2. For best results and to retain moisture, you may close the glass lid during grilling. The lid also helps to reduce splattering.
3. Turn food periodically to ensure even cooking and desired grill marks.
4. Cooking times will vary depending on the type and thickness of the food. Refer to standard grilling guidelines for

specific items.

## After Use

1. Once grilling is complete, turn the temperature control dial to the "OFF" position.
2. Unplug the power cord from the electrical outlet.
3. Allow the grill to cool completely before disassembling or cleaning.



Figure 5: The WMF Lono Electric Table Grill actively grilling various foods, demonstrating its capacity and effectiveness.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your WMF Lono Electric Table Grill and ensure optimal performance.

1. **Cool Down:** Always ensure the grill is unplugged and completely cool before cleaning.
2. **Disassembly:** Remove the grill plate, glass lid, and drip tray from the base unit. Detach the temperature control unit.
3. **Cleaning Grill Plate and Drip Tray:**
  - The non-stick grill plate and drip tray are dishwasher safe for convenient cleaning.
  - Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
  - Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
4. **Cleaning Glass Lid:** Wash the glass lid with warm, soapy water or place it in the dishwasher. Dry thoroughly.
5. **Cleaning Base Unit:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water. Ensure no water enters the electrical components.
6. **Storage:** Store the clean and dry grill in a cool, dry place.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; temperature control not connected properly; power outlet malfunction.	Ensure power cord is securely plugged into a working outlet. Check if the temperature control unit is firmly attached. Test the outlet with another appliance.
Food sticks to the grill plate.	Grill not preheated sufficiently; insufficient oil/fat; damaged non-stick coating.	Allow grill to preheat fully. Apply a small amount of cooking oil or fat to the grill plate before adding food. If coating is damaged, contact customer support.
Excessive smoke during grilling.	Too much fat on food; accumulated grease in drip tray; high temperature setting.	Trim excess fat from food. Empty and clean the drip tray regularly. Reduce temperature setting if smoke persists. Ensure proper ventilation.
Temperature control light not working.	Unit not powered; faulty indicator light.	Check power connection. If grill heats but light doesn't work, the light may be faulty; contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	WMF
Model Number	415430011
Special Feature	Non-Stick Coating
Color	Stainless Steel Matte
Material	Stainless Steel
Product Dimensions (D x W x H)	4.33" x 23.62" x 1.18"
Wattage	2200 Watts
Item Weight	8.8 Kilograms (19.36 pounds)
Included Components	Grill, Drip Tray
Voltage	100 Volts
Manufacturer	WMF CONSUMER ELECTRIC
Date First Available	April 28, 2020



Figure 6: Visual representation of the grill's dimensions, indicating its compact yet spacious design.

## WARRANTY AND SUPPORT

---

Your WMF Lono Electric Table Grill comes with **alimited warranty**. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and limitations.

For technical support, spare parts, or warranty claims, please contact WMF Customer Service. Contact information can typically be found on the WMF official website or on the product packaging.

*Note:* Unauthorized repairs or modifications will void the warranty.