

Mugast ZY-418

User Manual for Mugast ZY-418 Music Player

Model: ZY-418

1. INTRODUCTION

The Mugast ZY-418 is a compact and versatile portable music player designed for ease of use and portability. It supports various media formats and includes features such as music playback, video playback, recording, e-book reading, and a built-in stopwatch function. Its frosted material body provides an anti-slip grip, making it comfortable to handle.

This manual provides detailed instructions on how to set up, operate, and maintain your ZY-418 music player.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Mugast ZY-418 Music Player
- 1 x Earphone
- 1 x Charging Cable (USB)



Figure 2.1: Music Player and Accessories. This image displays the blue ZY-418 music player alongside its white wired earphones and a black USB charging cable.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your ZY-418 music player.

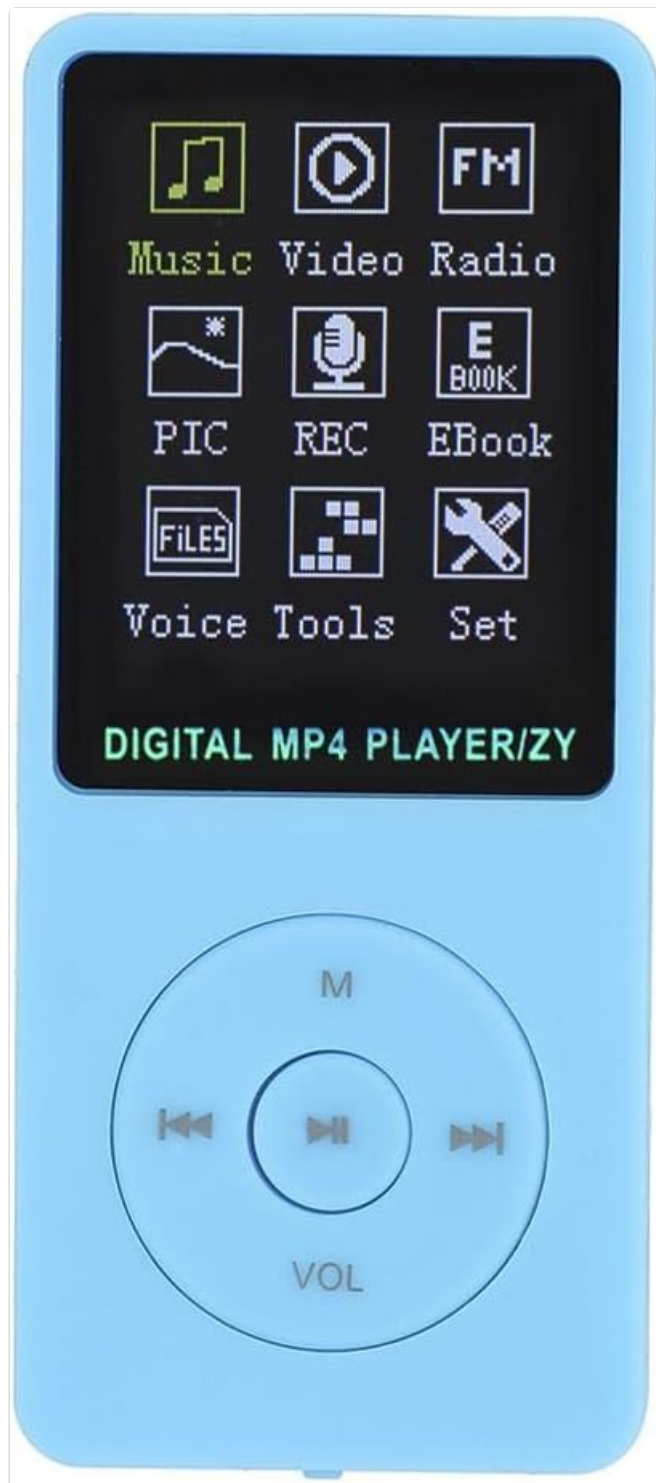


Figure 3.1: Front View of the Music Player. The image shows the front of the blue ZY-418 player, highlighting its color screen displaying menu icons for Music, Video, Radio, PIC, REC, EBook, Files, Voice, Tools, and Set. Below the screen are circular navigation buttons, including a central play/pause button, skip forward/backward, and volume controls.

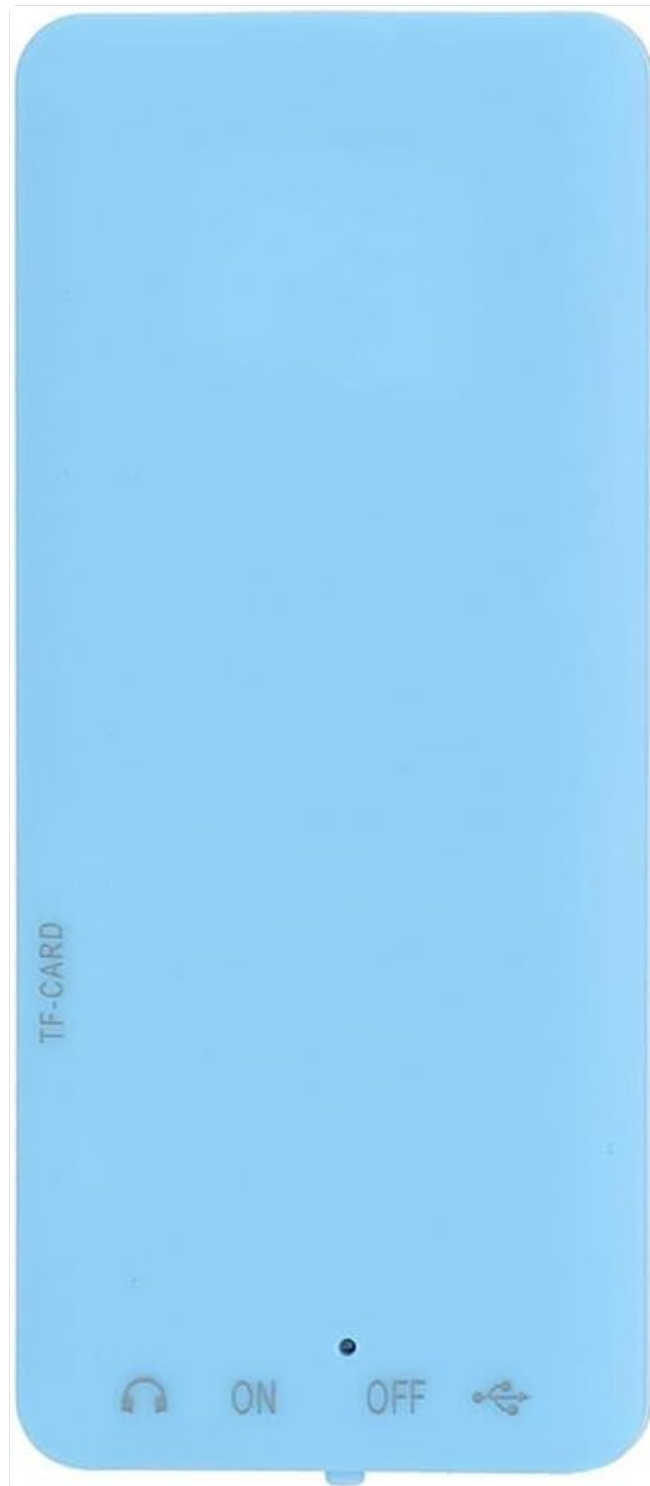


Figure 3.2: Bottom View of the Music Player. This image displays the bottom edge of the blue ZY-418 player, showing the headphone jack, an ON/OFF slide switch, and the USB charging port.

Key Features:

- **Frosted Material Body:** Provides an anti-slip hand feeling.
- **Expandable Memory:** Supports up to 32GB memory card (body has no internal memory).
- **Multi-functional:** Supports music, recording, video, e-books, and built-in stopwatch.
- **Wide Format Support:** Plays MP3 music format and AMV video format.
- **Compact and Lightweight:** Easy to carry and store.

4. SETUP

4.1 Charging the Device

1. Locate the USB charging port at the bottom of the device.
2. Connect the provided USB charging cable to the player and then to a USB power source (e.g., computer USB port, USB wall adapter).
3. When the MP4 switch is set to **ON**, the status light will start flashing, indicating that charging is in progress.
4. A full charge takes approximately 90 minutes.

4.2 Inserting a Memory Card

The ZY-418 requires a memory card (up to 32GB, not included) to store media files.

1. Locate the TF-CARD slot on the side of the device.
2. Gently insert a compatible memory card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove the card, gently push it in until it clicks, then release, and it will spring out.



Figure 4.1: Front and Back View with TF-CARD Slot. This image shows both the front and back of the blue ZY-418 player. The back view clearly indicates the "TF-CARD" slot, highlighting where the memory card is inserted.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- To power on, slide the **ON/OFF** switch (located at the bottom) to the **ON** position.
- To power off, slide the **ON/OFF** switch to the **OFF** position.

5.2 Basic Navigation

Use the circular buttons on the front of the device for navigation:

- **Central Button:** Play/Pause, Confirm selection.
- **Left/Right Buttons:** Navigate through menus, skip tracks (during playback).
- **Up/Down Buttons (M/VOL):** Adjust volume (when in playback mode), navigate up/down in menus.

- **M Button:** Menu button, typically used to go back or access options within an application.

5.3 Music Playback

1. From the main menu, select the **Music** icon.
2. Navigate to your desired song or album.
3. Press the central button to play.
4. To pause, press the central button again.
5. Use the left/right buttons to skip to the previous/next song.
6. Adjust volume using the **VOL** button (down arrow) and the **M** button (up arrow, when acting as volume up).



**MP3 comes with card slot,
plug card and play**

Supports MP3 music format and
AMV video format

Figure 5.1: Music Playback Interface. This image shows the ZY-418 player's screen with the "Music" icon highlighted, indicating the music playback function. Text overlay states: "MP3 comes with card slot, plug card and play, Supports MP3 music format and AMV video format."

5.4 Video Playback

The player supports AMV video format.

1. From the main menu, select the **Video** icon.
2. Browse and select your video file.
3. Press the central button to start playback.

5.5 E-Book Reading

1. From the main menu, select the **EBook** icon.
2. Select the text file you wish to read.
3. Use the navigation buttons to scroll through pages.

5.6 Recording

1. From the main menu, select the **REC** (Recording) icon.
2. Follow the on-screen prompts to start, pause, and save recordings.

5.7 Settings Menu

Access various device settings through the **Set** icon on the main menu.



Figure 5.2: Settings Menu. This image shows the ZY-418 player's screen displaying the settings menu, with options such as Replay, Backlight, Power Off, Language, About, and Reset Settings.

- **Replay:** Adjust playback modes.
- **Backlight:** Control screen brightness and backlight timeout.
- **Power Off:** Set auto power-off timer.
- **Language:** Change the device language.
- **About:** View device information.
- **Reset Settings:** Restore factory default settings.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Drops:** The frosted material provides grip, but avoid dropping the device to prevent internal damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device for at least 90 minutes.
No music/video playback.	No memory card inserted or files not supported.	Ensure a memory card is inserted and files are in MP3 (music) or AMV (video) format.
Screen is unresponsive.	Temporary software glitch.	Power off the device, then power it back on. If issue persists, try a factory reset via settings.
Cannot transfer files.	Incorrect USB connection or driver issue.	Ensure the USB cable is securely connected. Try a different USB port or computer.

8. SPECIFICATIONS

Feature	Detail
Model	ZY-418
Shell Material	ABS
Screen Size	1.8 Inches
Screen Type	Color Screen (LCD/LED)
Battery Type	Lithium Battery (200mAh)
Music Service Time	6 Hours
Video Service Time	2 Hours
Charging Time	90 Minutes

Feature	Detail
Maximum Memory Support	32GB Storage Card (TF-Card)
Supported Music Format	MP3
Supported Video Format	AMV
Weight	Approx. 70g
Connectivity	Aux, USB

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Mugast customer service directly.

Please retain your proof of purchase for warranty claims.

© 2023 Mugast. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question