

# Haier 20L Solo Microwave Oven (HIL2001MWPH) User Manual

Model: HIL2001MWPH

## 1. INTRODUCTION

Thank you for choosing the Haier 20L Solo Microwave Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before operation and retain it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Clean the oven regularly and remove any food deposits.

## 3. PRODUCT OVERVIEW AND COMPONENTS

The Haier 20L Solo Microwave Oven is designed for efficient heating, reheating, and defrosting of various food items. It features a compact design and user-friendly controls.



Image 3.1: Front view of the Haier 20L Solo Microwave Oven, showcasing its sleek black finish and control panel.

# HAIER'S SOLO MICROWAVE OVENS

## YOUR FOOD'S PERFECT COMPANION



Image 3.2: Side view of the microwave oven, highlighting its compact dimensions.

### Included Components:

- 1 x Microwave Oven Unit
- 1 x Glass Turntable Tray
- 1 x Turntable Ring Assembly
- 1 x Instruction Manual

### Control Panel:

The control panel consists of two rotary dials:

- **Power Level Dial:** Used to select the desired microwave power output (Low, Med, High).
- **Timer/Defrost Dial:** Used to set cooking time or select defrost by weight.



Image 3.3: Close-up of the Multi Power Level dial, indicating various power settings.



Image 3.4: Close-up of the Timer dial, showing time settings up to 35 minutes.

## 4. SETUP

### Unpacking and Placement:

1. Remove all packaging materials from inside and outside the oven.
2. Place the oven on a flat, stable surface strong enough to hold the oven and the food you will be cooking.
3. Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides for proper airflow.



Image 4.1: Illustration showing the compact size and dimensions (259mm height, 440mm width, 340mm depth) of the microwave oven, useful for placement planning.

## Turtable Assembly:

1. Place the turntable ring assembly in the center of the oven cavity.
2. Position the glass turntable tray securely on top of the ring assembly. Ensure it sits correctly in the center support.



Image 4.2: View of the turntable inside the microwave, demonstrating its 255mm diameter for even cooking.

## Power Connection:

Plug the power cord into a standard 230V, 50Hz grounded electrical outlet. Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

---

### Basic Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power Level Dial** to select the desired power setting (e.g., High for fast cooking, Med for general reheating, Low for simmering).
4. Turn the **Timer Dial** to set the desired cooking time (up to 35 minutes). The oven will start automatically once the timer is set.
5. When the cooking time is complete, the oven will emit an audible signal and turn off. Carefully remove the food.

### Defrost Function:

The defrost function allows for even and quicker thawing of frozen foods.

1. Place the frozen food on the glass turntable.
2. Turn the **Timer/Defrost Dial** to the desired defrost weight setting (e.g., 0.2 kg, 0.4 kg, 0.6 kg). The oven will automatically adjust the defrost time and power.
3. Midway through defrosting, it is recommended to turn the food over for more even thawing.
4. Once defrosting is complete, remove the food.



Image 5.1: Example of frozen vegetables, illustrating the use of the defrost function for even thawing.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

### Exterior Cleaning:

- Wipe the exterior with a damp cloth and mild detergent.
- Avoid abrasive cleaners or scouring pads.

### Interior Cleaning:

- For light spills, wipe the interior with a damp cloth immediately.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe clean.
- Ensure the oven cavity is dry before next use.

### Turntable and Ring Assembly:

- The glass turntable and ring assembly can be removed for cleaning.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

## 7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Food not suitable for microwave; Utensil not microwave-safe.	Adjust cooking time and power level; Use microwave-safe dishes; Refer to food packaging for microwave suitability.
Turntable not rotating	Turntable not properly placed; Obstruction under turntable; Turntable motor malfunction.	Ensure turntable and ring assembly are correctly positioned; Remove any obstructions; Contact customer service if issue persists.

Problem	Possible Cause	Solution
Excessive steam inside oven	High moisture content in food.	This is normal for foods with high moisture. Wipe the interior after use.

If the problem persists after trying these solutions, please contact Haier customer service.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Haier
Model	HIL2001MWPH
Capacity	20 litres
Installation Type	Countertop
Special Features	Programmable, Timer, Turntable
Oven Cooking Mode	Solo
Colour	Black
Voltage	230 Volts
Wattage	800 Watts
Fuel Type	Electric
Defrost System	Defrost
Door Orientation	Left
Material	Iron
Item Weight	10 kg 400 g
Item Dimensions (LxWxH)	34 x 44 x 25.9 Centimeters

## 9. WARRANTY AND SUPPORT

### Warranty Information:

- 1 Year Comprehensive Warranty:** Covers manufacturing defects and functional issues for one year from the date of purchase.
- 3 Year Warranty on Magnetron:** The magnetron component is covered by an extended warranty of three years.

To avail warranty services, please retain your Amazon invoice as proof of purchase.

### Customer Support:

For any queries, service requests, or technical assistance, please contact Haier customer service. Refer to the contact information provided with your purchase or visit the official Haier website for support details.

---

© 2026 Haier. All rights reserved.