

[Manuals.plus](#) /

> [Epson](#) /

> Epson EcoTank Pro ET-5800 Wireless All-in-One Supertank Printer User Manual

Epson ET-5800

Epson EcoTank Pro ET-5800 Wireless All-in-One Supertank Printer User Manual

1. PRODUCT OVERVIEW

The Epson EcoTank Pro ET-5800 is a wireless all-in-one supertank printer designed for high-volume printing needs in office and home environments. It integrates printing, scanning, copying, and faxing functionalities into a single, efficient device. Utilizing supersized, easy-to-fill ink tanks, this printer offers a cartridge-free printing experience, significantly reducing the cost and waste associated with traditional ink cartridges.

Key Features:

- **Cartridge-Free Printing:** Features large, refillable ink tanks for cost-effective and eco-friendly operation.
- **High-Volume Output:** Capable of printing up to 25 ISO ppm (black) with PrecisionCore Heat-Free Technology.
- **Vibrant Prints:** Delivers sharp text and vivid colors for borderless prints up to 8.5" x 14".
- **Extended Page Yield:** Each replacement ink set provides enough ink to print up to 6,000 pages.
- **Versatile Paper Handling:** Includes two 250-sheet front paper trays and a rear specialty-paper feed.
- **Intuitive Touchscreen:** Equipped with a 4.3" color touchscreen for easy navigation and control.
- **Multiple Connectivity Options:** Supports wireless (802.11ac), USB, Ethernet, and hands-free voice-activated printing.

EcoTank® Pro ET-5800 All-in-One Cartridge-Free Supertank Printer



***SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.**

Figure 1: Epson EcoTank Pro ET-5800 highlighting key features like touchscreen, ADF, and connectivity.

2. WHAT'S IN THE BOX

Upon unboxing your Epson EcoTank Pro ET-5800, please ensure all the following components are present:

- Epson EcoTank Pro ET-5800 All-in-One Printer
- Power Cord
- 2 bottles of 542 Black Ink (127 mL each)
- 2 bottles each of 542 Cyan, Magenta, and Yellow Ink (70 mL each)
- CD-ROM for Product Setup (contains drivers and software)

In the box

EcoTank® Pro ET-5800 All-in-One Cartridge-Free Supertank Printer



All-in-One Supertank Printer



*The NPD Group, Inc., Total Channel Tracking Service, U.S. & Canada, Printers, Refillable ink tank included, based on units, August 2017 – July 2018. Supertank printers are defined as refillable ink tank printers.



EcoTank 542 Ink Bottles

We recommend genuine Epson® ink for the best print quality and performance.



Power Cord

(USB cable not included)



CD and Documentation

Figure 2: All components included in the Epson EcoTank Pro ET-5800 packaging.

3. SETUP GUIDE

3.1 Initial Ink Filling

The EcoTank Pro ET-5800 uses a cartridge-free ink system. Follow these steps to fill the ink tanks:

1. Open the ink tank unit cover on the side of the printer.
2. Open the cap for the black ink tank.
3. Uncap the black ink bottle (542 Black). The bottles are uniquely keyed to fit only the correct color tank, preventing accidental filling errors.
4. Insert the ink bottle into the filling port. The ink will automatically flow into the tank. Do not squeeze the bottle.
5. Once the tank is full, the ink flow will stop automatically. Remove the bottle and securely close the tank cap.
6. Repeat the process for the Cyan, Magenta, and Yellow ink tanks using their respective 542 ink bottles.
7. Close the ink tank unit cover.

Your browser does not support the video tag.

Video 1: Demonstrates the mess-free ink filling process with uniquely keyed bottles for the Epson EcoTank Pro series.

Epson® Genuine Ink Promise

Epson is committed to delivering the highest quality and most reliable inks for your printing experience. Epson's Promise is backed by our outstanding Service & Support and Warranty Programs.



Epson strongly recommends the use of Genuine Epson Inks for a quality printing experience. Non-Epson inks and inks not formulated for your specific printer may cause damage that is not covered by the Epson warranty.

SCROLL DOWN TO "FROM THE MANUFACTURER" TO LEARN MORE.

Figure 3: Epson's commitment to quality and reliable inks for optimal printing performance.

3.2 Power Connection

Connect the provided power cord to the printer's power input and then to a wall outlet. Press the power button to turn on the printer.

3.3 Software Installation

Insert the included CD-ROM into your computer's drive. Follow the on-screen instructions to install the necessary drivers and software. Alternatively, you can download the latest drivers and utilities from the official Epson support website for your specific model.

4. OPERATING THE PRINTER

4.1 Control Panel and Touchscreen

The 4.3" color touchscreen provides access to all printer functions. Navigate through menus by tapping icons and swiping. The home screen displays quick access to Copy, Scan, Fax, and Presets.

4.2 Printing

The ET-5800 supports various printing methods:

- **Wireless Printing:** Connect the printer to your Wi-Fi network (802.11ac) for printing from computers, smartphones, and tablets.
- **USB Connection:** Connect directly to a computer using a USB cable (not included).
- **Ethernet Connection:** For wired network connectivity, connect an Ethernet cable to your router or network switch.
- **Voice-Activated Printing:** Set up voice commands through compatible smart home devices for hands-free printing.
- **Borderless Printing:** Supports borderless prints up to 8.5" x 14" for professional-looking documents and photos.
- **Duplex Printing:** Automatic two-sided printing is available to save paper.

4.3 Scanning

Documents can be scanned using the Automatic Document Feeder (ADF) for multi-page documents or the flatbed scanner for single pages, books, or delicate items. Scanned files can be saved to a computer, cloud services, or sent via email.

4.4 Copying

Use the control panel to select copy functions. You can adjust settings such as number of copies, paper size, and quality directly from the touchscreen.

4.5 Faxing

The printer includes full fax capabilities. Connect a phone line to the printer and follow the on-screen prompts to send and receive faxes.

4.6 Paper Handling

The ET-5800 features two 250-sheet front paper trays for standard paper sizes and a rear specialty-paper feed for thicker media, envelopes, or custom sizes. Ensure paper guides are adjusted correctly for the loaded paper size.

5. MAINTENANCE

5.1 Ink Refilling

Monitor ink levels through the transparent ink tanks on the front of the printer. When an ink tank is low, refill it using genuine Epson 542 ink bottles as described in the "Initial Ink Filling" section (Section 3.1). Only use genuine Epson ink to ensure optimal performance and prevent damage.

5.2 Cleaning

- **Print Head Cleaning:** If print quality declines (e.g., missing lines, streaking), perform a print head cleaning from the printer's maintenance menu on the touchscreen.
- **Scanner Glass Cleaning:** Regularly clean the scanner glass and the ADF rollers with a soft, lint-free cloth dampened with a mild glass cleaner to prevent streaks on scanned documents.

6. TROUBLESHOOTING

If you encounter issues with your printer, try the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely connected to both the printer and a working electrical outlet.
- **Connectivity Issues:** Verify Wi-Fi connection status on the printer's touchscreen and your device. For wired connections, check Ethernet cable. Restarting the printer and router can often resolve network problems.
- **Paper Jams:** Follow the on-screen instructions to clear any paper jams. Always remove jammed paper carefully to avoid tearing.
- **Poor Print Quality:** Perform a print head nozzle check and cleaning cycle from the maintenance menu. Ensure genuine Epson ink is used and that paper settings match the loaded paper type.
- **Scanner Not Working:** Check that the scanner lid is fully closed and that the printer is properly connected to your computer or network.

For more detailed troubleshooting, refer to the comprehensive user guide on the Epson support website or the digital manual on the included CD-ROM.

7. SPECIFICATIONS

Feature	Detail
Model Name	ET-5800
Product Dimensions	32.4"D x 16.7"W x 18.1"H
Item Weight	39.2 pounds
Printing Technology	Inkjet
Printer Output	Color
Max Print Speed (Black)	25 ppm (ISO)
Max Print Speed (Color)	12 ppm (ISO)
Print Resolution	Up to 4800 x 2400 dpi
Scanner Type	Sheetfed
Max Input Sheet Capacity	500 sheets (2x250 trays)
Connectivity Technology	Wi-Fi (802.11ac), USB, Ethernet
Display Type	4.3" Color Touchscreen
Power Consumption	19 Watts (On-mode)
Duplex Printing	Automatic

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

The Epson EcoTank Pro ET-5800 comes with a 12-month standard limited warranty or 80,000 plain paper sheets, whichever occurs first. For an additional 12-month extended service plan (total of 24 months or 80,000 plain paper sheets, whichever occurs first), you must register your product and use genuine Epson ink bottles. Please refer to the detailed Limited Warranty documentation included with your product or visit the official Epson website for full terms and conditions.

8.2 Customer Support

For further assistance, technical support, or to access additional resources, please visit the official Epson support website. You can find FAQs, driver downloads, and contact information for customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084TV6BVM>

More documents and user manuals: <https://manuals.plus/>