

Daytech CC02 1-1 UK

Daytech Wireless Caregiver Call Button System

Model: CC02 1-1 UK User Manual

INTRODUCTION

Thank you for choosing the Daytech Wireless Caregiver Call Button System. This system is designed to provide peace of mind and quick assistance for caregivers and those in need of care, such as the elderly, patients, or individuals with limited mobility. The system includes one portable battery-operated receiver and one wireless call button, allowing for easy communication and prompt response within the home or care unit.



Figure 1: The Daytech Wireless Caregiver Call Button System, showing the portable receiver and the call button. The receiver has a sleek, modern design with indicator lights, and the call button is compact with a prominent red call button and lanyard attachment.

PRODUCT FEATURES AND BENEFITS

- **Wireless Care Pager System:** This system includes a portable battery-operated receiver and a wireless call button, enabling caregivers to attend to other tasks while remaining alert to calls for assistance from residents or loved ones.
- **Easy to Use:** Designed for simplicity, a single press of the call button sends an alert to the caregiver, making it ideal for urgent situations, especially during the night.
- **Customizable Alerts:** The receiver offers 55 distinct ringtones and 5 adjustable volume levels, ranging from 0 dB (silent with flashing light) to 110 dB, ensuring an alert suitable for any environment.
- **Extended Range:** The wireless signal boasts an operating range of up to 500 feet (approximately 150 meters) in open areas, ensuring reliable communication within a typical home or care unit.

- **Versatile Application:** Suitable for seniors, patients, individuals with special needs, pregnant women, and children, providing an effective and compact remote control for requesting assistance.

Wer braucht einen Notrufknopf?



Figure 2: Illustrates various individuals who can benefit from the Daytech Wireless Caregiver Call Button System, including those requiring elderly care, disabled care, patient care, and bedridden individuals.

55 Klingeltöne & 5 einstellbare Lautstärkestufen

Unterschiedliche Klingeltöne für verschiedene Notruftasten einstellen



Figure 3: Demonstrates the system's flexibility with 55 ringtones and 5 adjustable volume levels. It shows how different call buttons can be set to distinct ringtones for specific locations, such as a bedroom or bathroom, and highlights the range of volume options.

Hausnotruf bis zu 150 Meter

Stabiles drahtloses Signal, verpassen Sie keinen Anruf



Figure 4: Visual representation of the system's impressive wireless range, capable of transmitting signals up to 150 meters (500 feet) within a home, ensuring reliable alerts across multiple rooms and floors.

Einfache Bedienung, für mehr Sicherheit



Figure 5: Highlights the ease of operation and enhanced safety features, including its IP55 waterproof rating for use in wet environments like showers, and its suitability for attachment to wheelchairs for convenient access.

Mehr Seelenfrieden und Freiheit für Sie



Figure 6: Illustrates how the system provides caregivers with greater peace of mind and freedom, allowing them to perform other tasks around the house while remaining confident that they will be alerted if assistance is needed.

SETUP GUIDE

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure you have the portable receiver, the call button, and any included accessories. Inspect all items for any signs of damage.

2. Battery Installation (Receiver)

1. Locate the battery compartment on the back of the portable receiver.
2. Open the battery compartment cover.
3. Insert 2 AAA alkaline batteries (included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Figure 7: Rear view of the receiver, illustrating the battery compartment where 2 AAA batteries are to be inserted. Note: The image shows 3 batteries, but the product specifications state 2 AAA batteries are required for this model.

3. Call Button Battery

The call button comes with a pre-installed battery. Please remove any protective tab if present before first use. If the battery needs replacement in the future, refer to the Maintenance section.

4. Pairing (Pre-Paired)

Your Daytech Wireless Caregiver Call Button System is typically pre-paired at the factory. To test, simply press the call button, and the receiver should sound an alert. If the units do not respond, or if you wish to pair additional buttons (sold separately), please refer to the troubleshooting section or the full manual for pairing instructions.

5. Placement

- **Receiver:** Place the receiver in a central location where the caregiver can easily hear or see the alerts. Consider placing it in a bedroom, living room, or kitchen.
- **Call Button:** The call button can be worn around the neck using the included lanyard, placed on a bedside table, or mounted in a convenient location such as a bathroom or near a bed. Its IP55 waterproof rating allows for safe use in wet environments like showers.

OPERATING INSTRUCTIONS

1. Initiating a Call

To request assistance, simply press the large red 'CALL' button on the wireless call button. The button will send a signal to the receiver.

2. Receiving an Alert

Upon receiving a signal from the call button, the portable receiver will:

- Sound the selected ringtone.
- Flash its indicator lights.

The alert will continue for approximately 10 seconds or until the caregiver responds.

3. Adjusting Volume and Ringtones

The receiver has buttons on its side to adjust settings:

- **Volume Control:** Use the volume buttons (usually indicated by speaker icons or up/down arrows) on the side of the receiver to cycle through the 5 volume levels (0 dB to 110 dB). The 0 dB setting provides a silent alert with only flashing lights.
- **Ringtone Selection:** Use the ringtone selection button (often indicated by a music note or similar icon) to cycle through the 55 available melodies. Press the button repeatedly until you find your preferred ringtone.

MAINTENANCE

1. Battery Replacement

- **Receiver:** When the receiver's batteries are low, it will emit a

