

[Manuals.plus](#) /

› [Mixpresso](#) /

› Mixpresso Electric Milk Frother MF-VV02-BK User Manual

Mixpresso MF-VV02-BK

Mixpresso Electric Milk Frother MF-VV02-BK User Manual

Model: MF-VV02-BK

INTRODUCTION

Thank you for purchasing the Mixpresso Electric Milk Frother. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.



Image: The Mixpresso Electric Milk Frother in black, shown next to a glass of frothed milk, highlighting its primary function.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the frother base or power cord in water or other liquids.
- This appliance is for household use only.
- Always ensure the frother is placed on a stable, flat, heat-resistant surface.
- Do not operate the appliance with a damaged cord or plug.
- Keep out of reach of children.
- Unplug from outlet when not in use and before cleaning.

- Do not touch hot surfaces. Use handles or knobs.

PRODUCT COMPONENTS

The Mixpresso Electric Milk Frother consists of the following parts:

- Frother Jug (with non-stick interior)
- Lid
- Frothing Whisk (removable)
- Power Base (with cord)
- Power Button (with indicator light)



Image: An overhead view of the frother's interior, clearly showing the 'MAX' fill line for heating, 'MAX' fill line for frothing, and the 'MIN' liquid level. The frothing whisk is visible at the bottom.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the frother for any damage.
2. **Clean:** Before first use, clean the frother jug and whisk according to the "Maintenance and Cleaning" section. Wipe the power base with a damp cloth.
3. **Placement:** Place the power base on a dry, level, and stable surface.
4. **Connect:** Plug the power cord into a standard electrical outlet (120V).

OPERATING INSTRUCTIONS

The Mixpresso Electric Milk Frother offers two main functions: frothing hot milk and heating milk without frothing.

1. Frothing Hot Milk

1. **Insert Whisk:** Ensure the frothing whisk is securely placed at the bottom of the frother jug.
2. **Add Milk:** Pour cold milk into the frother jug. Do not exceed the "**MAX Froth**" fill line (lower MAX line) indicated inside the jug. Ensure the milk level is above the "**MIN**" line.
3. **Secure Lid:** Place the lid firmly on the frother jug.
4. **Start Frothing:** Place the jug onto the power base. Press the power button once. The indicator light will illuminate, and the frother will begin operating.
5. **Automatic Shut-off:** The frother will automatically stop when the milk reaches the optimal temperature and froth consistency.
6. **Serve:** Carefully remove the jug from the base and pour the frothed milk into your beverage.



Image: The Mixpresso Milk Frother filled with frothed milk, positioned next to a clear glass of coffee topped with frothed milk, demonstrating the end result.

2. Heating Milk (without frothing)

1. **Remove Whisk:** Remove the frothing whisk from the bottom of the frother jug.
2. **Add Milk:** Pour cold milk into the frother jug. Do not exceed the "**MAX Heat**" fill line (upper MAX line) indicated inside the jug. Ensure the milk level is above the "**MIN**" line.
3. **Secure Lid:** Place the lid firmly on the frother jug.
4. **Start Heating:** Place the jug onto the power base. Press the power button once. The indicator light will illuminate, and the frother will begin operating.
5. **Automatic Shut-off:** The frother will automatically stop when the milk reaches the optimal heating temperature.
6. **Serve:** Carefully remove the jug from the base and pour the heated milk.

Note: For best results, use fresh, cold milk. Different types of milk (dairy, almond, oat, soy) may produce varying frothing results.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your frother. Always unplug the appliance before cleaning.

1. **Immediate Cleaning:** Clean the frother jug and whisk immediately after each use to prevent milk residue from drying.
2. **Remove Whisk:** Carefully remove the whisk from the bottom of the jug.
3. **Hand Wash Jug:** Wash the interior of the frother jug and the whisk with warm, soapy water and a soft sponge or cloth. The non-stick coating makes cleaning easy.
4. **Rinse and Dry:** Rinse thoroughly with clean water and dry all parts completely.
5. **Exterior Cleaning:** Wipe the exterior of the frother jug and the power base with a damp cloth. Do not immerse the power base in water.
6. **Storage:** Store the frother in a clean, dry place.

Caution: Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the non-stick coating and exterior finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power button not pressed; frother not correctly seated on base.	Ensure plug is securely in outlet. Press power button. Ensure jug is properly placed on the power base.
Milk is not frothing or frothing poorly.	Incorrect whisk used; milk level too high/low; type of milk; whisk not properly installed.	Ensure frothing whisk is installed. Check milk levels are between MIN and MAX Froth lines. Use fresh, cold milk. Reinstall whisk securely.
Milk is not heating sufficiently.	Milk level too high; frothing whisk still installed (if heating only).	Ensure milk level is below MAX Heat line. Remove frothing whisk for heating only.
Burnt milk residue at the bottom.	Milk left in frother too long after use; insufficient cleaning.	Clean immediately after each use. Ensure thorough cleaning of the bottom heating element area.

SPECIFICATIONS

- Model:** MF-VV02-BK
- Brand:** Mixpresso
- Color:** Black
- Material:** Plastic, Stainless Steel
- Product Dimensions:** 10.2W x 20.3H centimetres
- Capacity:** 266 g
- Power Source:** Corded Electric
- Wattage:** 800 watts
- Voltage:** 120 volts

Special Feature: Auto Shut-Off
Included Components: Stand, Whisk

WARRANTY AND CUSTOMER SUPPORT

The Mixpresso Electric Milk Frother is covered by a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical assistance, or any questions regarding your product, please contact Mixpresso customer support. Please have your model number (MF-VV02-BK) and proof of purchase ready when contacting support.

Manufacturer Contact Information: Dayton, NJ 08810, US

For further assistance, visit the official Mixpresso website or contact your retailer.

© 2024 Mixpresso. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question