

Manuals.plus /

> [KAFF](#) /

> KAFF OV81 GIKF 81 Litre Multi-Functional Built-in Oven User Manual

KAFF OV81 GIKF

KAFF OV81 GIKF 81 Litre Multi-Functional Built-in Oven User Manual

Model: OV81 GIKF | Brand: KAFF

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your KAFF OV81 GIKF 81 Litre Multi-Functional Built-in Oven. Please read these instructions thoroughly before using the appliance and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Electrical Safety:** Ensure the oven is correctly earthed and connected to a suitable power supply. Do not use extension cords.
- Hot Surfaces:** The oven and its accessible parts become hot during use. Exercise caution to avoid touching heating elements. Keep children away.
- Ventilation:** Ensure adequate ventilation around the oven as specified in the installation guidelines.
- Cleaning:** Always disconnect the power supply before cleaning. Use non-abrasive cleaners.
- Supervision:** Do not leave the oven unattended during operation, especially when using high heat settings or the grill function.
- Flammable Materials:** Do not store flammable materials in or near the oven.
- Repairs:** All repairs must be carried out by qualified service personnel.

3. PRODUCT OVERVIEW

The KAFF OV81 GIKF is an 81-litre multi-functional built-in electric oven designed for various cooking needs. It features a black reflective glass fascia and rotary electronic controls.

Key Features:

- 81 Litre Extra-Large Cavity
- Black Reflective Glass Fascia
- Rotary Electronic Controls with Digital Display
- 3-Layer Glass Door for improved insulation and safety

- Matt Black Steel Handle
- Multiple Cooking Functions: Oven Light, Top + Bottom Element, Top + Bottom Element + Fan, Bottom Element, Full Grill + Rotisserie, Full Grill + Fan + Rotisserie
- Convection Fan for even heat distribution
- Mechanical Timer

Included Components:

- 1x Oven Drip Tray
- 1x Grill Wire Shelf
- 1x Rotisserie Wire Shelf
- 1x User Manual
- 1x Warranty Card



Image: Oven interior showing the grill wire shelf, rotisserie, and drip tray.

Image: Close-up view of the oven's rotary electronic controls, digital display, and matt black steel handle.

4. INSTALLATION

The KAFF OV81 GIKF is a built-in oven. Proper installation is crucial for safety and performance. It should be installed into a suitable cabinet opening by a qualified technician.

Dimensions:

- **Item Dimensions (LxWxH):** 71.1 x 71.1 x 68.6 Centimeters
- **Cut-out Dimensions (approximate):** 564 mm (Width) x 585 mm (Height) x 580 mm (Depth)



Image: Front view of the oven with indicated width (564 mm) and height (585 mm) for installation.

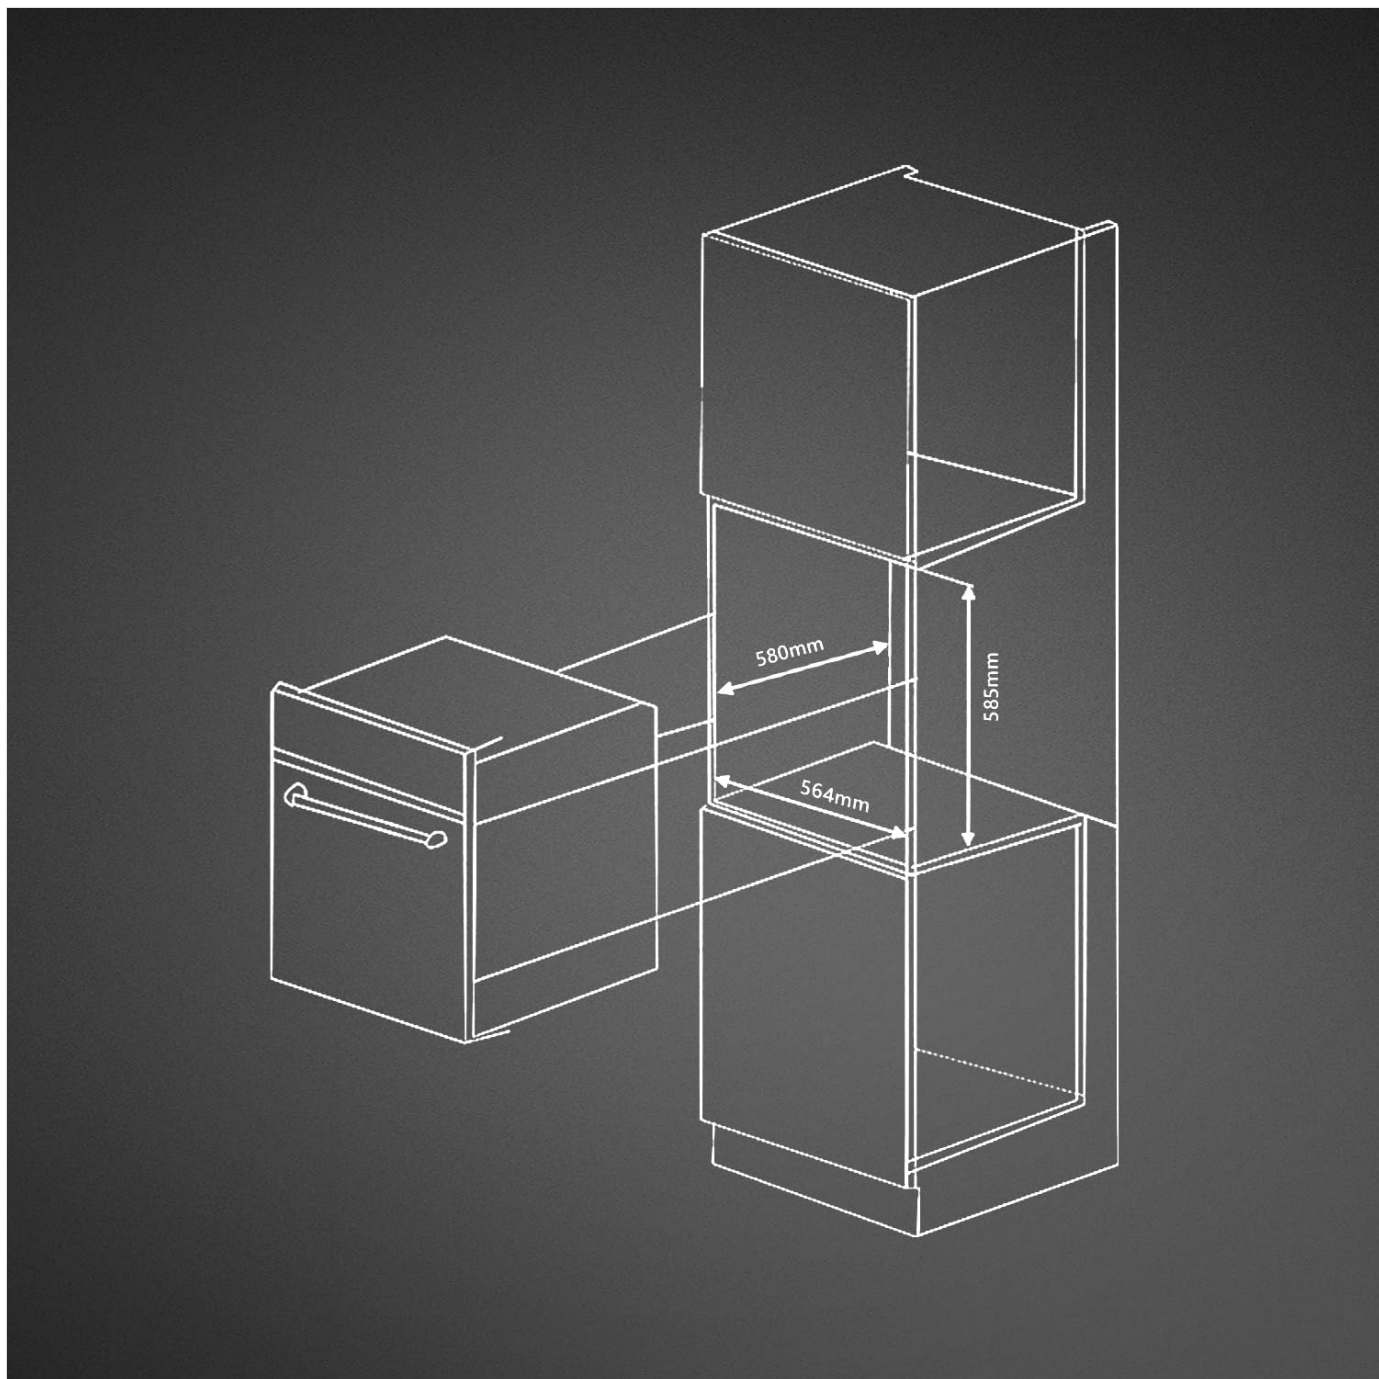


Image: Diagram illustrating the required cabinet dimensions for built-in installation, including width, height, and depth.

5. OPERATING INSTRUCTIONS

Your oven is equipped with rotary electronic controls and a digital display for precise cooking. Familiarize yourself with the control panel before use.

Control Panel:

The control panel consists of two rotary knobs and a central digital display. One knob typically controls the cooking function, and the other controls temperature or time, depending on the selected mode. The digital display shows the current time, temperature, or timer settings.

Cooking Functions:

Rotate the function selector knob to choose your desired cooking mode:

- **Oven Light:** Illuminates the oven interior.

- **Top + Bottom Element:** Standard baking and roasting.
- **Top + Bottom Element + Fan:** Convection baking for even heat distribution, ideal for multiple dishes.
- **Bottom Element:** For browning the base of dishes or slow cooking.
- **Full Grill + Rotisserie:** For grilling larger items and using the rotisserie spit.
- **Full Grill + Fan + Rotisserie:** Combines grilling, fan-assisted cooking, and rotisserie for faster, more even grilling.

Setting the Temperature and Timer:

After selecting a cooking function, use the temperature/time knob to set the desired temperature. The mechanical timer can be set for cooking duration. Refer to the specific symbols on the control panel for detailed timer operation.

Your browser does not support the video tag.

Video: Demonstration of the KAFF Built-in Oven OV81 GIKF, showcasing its features and operation, including the rotisserie function.

Your browser does not support the video tag.

Video: A brief overview highlighting key features of the KAFF OV81 GIKF Electric Oven, including rotary electronic controls and accessories.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your oven.

General Cleaning:

- **Interior:** Clean the oven interior after each use once it has cooled down. Use a damp cloth and mild detergent. For stubborn stains, use a specialized oven cleaner, following the product instructions carefully.
- **Exterior:** Wipe the exterior surfaces, including the glass door and control panel, with a soft, damp cloth. Avoid abrasive cleaners or scouring pads that can scratch the finish.
- **Accessories:** The oven drip tray, grill wire shelf, and rotisserie wire shelf can be washed with warm soapy water.

Light Bulb Replacement:

To replace the oven light bulb, ensure the oven is cool and disconnected from the power supply. Unscrew the protective cover, replace the bulb with a suitable high-temperature resistant bulb, and reattach the cover.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect function/temperature setting; faulty heating element.	Check power connection and circuit breaker. Verify function and temperature settings. If problem persists, contact service.
Fan not working in convection mode.	Fan motor issue; incorrect mode selection.	Ensure 'Top + Bottom Element + Fan' or 'Full Grill + Fan + Rotisserie' mode is selected. If fan remains inactive, contact service.
Food not cooking evenly.	Incorrect temperature/time; improper rack position; oven overloaded.	Adjust temperature/time. Use appropriate rack level. Avoid overcrowding the oven. Utilize convection mode for better heat distribution.

Problem	Possible Cause	Solution
Digital display shows only time, not temperature.	This model's digital display primarily shows time. Temperature is set via the rotary knob.	This is normal operation for this model. Ensure the rotary knob is set to the desired temperature.

8. SPECIFICATIONS

Feature	Detail
Brand	KAFF
Model	OV81 GIKF
Capacity	81 Litres
Installation Type	Built-In
Special Features	Rotisserie
Oven Cooking Mode	Convection
Colour	Black
Fuel Type	Electric
Defrost System	Auto Defrost
Door Orientation	Front
Material	Stainless Steel
Item Weight	33 kg
Item Dimensions (LxWxH)	71.1 x 71.1 x 68.6 Centimeters
Heating Method	Convection
Finish Type	Polished

9. WARRANTY AND SUPPORT

Your KAFF OV81 GIKF oven comes with a warranty. Please refer to the included Warranty Card for detailed terms and conditions. For technical assistance, service requests, or further inquiries, please contact KAFF customer support.

Manufacturer: KAFF APPLIANCES INDIA PVT. LTD.

Toll-Free Support: 18001802221

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084VNDZRR>

More documents and user manuals: **<https://manuals.plus/>**