

Timberland TBL14645JYS.03MAS

Timberland Men's Quartz Analog Watch TBL14645JYS.03MAS User Manual

INTRODUCTION

This manual provides essential instructions for the proper use and care of your Timberland Men's Quartz Analog Watch, model TBL14645JYS.03MAS. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.



Image 1: Front view of the Timberland TBL14645JYS.03MAS watch. It features a silver-toned metal case and bracelet, a deep blue dial with white Arabic numerals

at 12, 3, 6, and 9 o'clock, and white stick hour markers. The date window is visible at the 3 o'clock position. The Timberland logo is centered below the 12 o'clock marker.

SETUP

1. Setting the Time

- Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) to the outermost position. You might feel a slight click.
- Adjust the hands:** Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
- Push in the crown:** Once the correct time is set, push the crown back into its normal operating position.

2. Setting the Date

Your watch features a date display. To set the date:

- Pull out the crown:** Gently pull the crown to the first click position (intermediate position).
- Adjust the date:** Turn the crown clockwise or counter-clockwise to change the date. Avoid setting the date between 9 PM and 3 AM, as this is when the date change mechanism is active and could be damaged.
- Push in the crown:** Once the correct date is set, push the crown back into its normal operating position.

3. Adjusting the Metal Bracelet

The metal bracelet can be adjusted by removing or adding links. This procedure typically requires specialized tools and is best performed by a qualified jeweler or watch technician to avoid damage.

OPERATING THE WATCH

Your Timberland watch is a quartz analog timepiece, designed for reliable timekeeping. Once the time and date are set, the watch operates continuously, powered by its internal battery.

- Time Display:** The hour, minute, and second hands indicate the current time.
- Date Display:** The window at the 3 o'clock position displays the current date.

MAINTENANCE AND CARE

1. Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and metal bracelet regularly with a soft, dry cloth.
- For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

2. Water Resistance

This watch has a water resistance rating of 5 bars (5 ATM). This means it is suitable for everyday use, such as accidental splashes, rain, and showering. It is **not** suitable for swimming, diving, or prolonged water immersion. Always ensure the crown is fully pushed in to maintain water resistance.

3. Battery Replacement

The watch is powered by a quartz movement requiring a battery. When the watch stops or the second hand begins to jump erratically (indicating a low battery), the battery needs to be replaced. Battery replacement should be performed by a qualified watch technician to prevent damage to the movement and ensure water resistance is maintained.

4. Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Low or depleted battery.	Replace the battery (recommended by a professional).
Time is incorrect.	Crown is not fully pushed in, or time needs to be reset.	Ensure the crown is fully pushed in. Reset the time as per "Setting the Time" instructions.
Date is incorrect.	Date needs to be reset.	Reset the date as per "Setting the Date" instructions.
Condensation under the crystal.	Exposure to extreme temperature changes or compromised water resistance.	Consult a watch technician immediately to prevent internal damage.

SPECIFICATIONS

- Model Number:** TBL14645JYS.03MAS
- Movement:** Quartz Analog
- Case Material:** Metal (Silver-toned)
- Case Diameter:** Approximately 46 mm
- Crystal:** Mineral Glass
- Dial Color:** Blue
- Bracelet Material:** Metal (Silver-toned)
- Bracelet Width:** 22 mm
- Clasp Type:** Deployment Buckle
- Water Resistance:** 5 Bars (5 ATM)
- Gender:** Men's
- Battery:** 1 Specific product battery required
- Package Dimensions:** 14 x 9.9 x 7.7 cm; 360 grams

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Timberland website. Specific warranty terms and conditions may vary by region and retailer.

For service or repairs, it is recommended to contact an authorized Timberland service center or a reputable watch repair specialist.

