



Manuals.plus /

- › ZURU SMASHERS /
- › ZURU SMASHERS Dino Ice Age Ice Rex Playset Series 3 - Instruction Manual

ZURU SMASHERS 7467

ZURU SMASHERS Dino Ice Age Ice Rex Playset Series 3

Model: 7467 - Instruction Manual

1. INTRODUCTION

Welcome to the exciting world of ZURU SMASHERS Dino Ice Age! This manual provides essential information for the setup, operation, and maintenance of your Ice Rex Playset. Prepare for endless icy smashing fun as you discover hidden Dino Ice Age Smashers.

What's in the Box:

- 1x Ice Age Ice Rex Figure
- 1x Smash Egg Rebuilder
- 2x Exclusive Smashers
- 1x Smash Egg
- 1x Collector's Guide



Image 1.1: ZURU SMASHERS Dino Ice Age Ice Rex Playset components.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during play.
- Keep small parts away from infants and young children to prevent choking.
- Do not put any toy parts in the mouth.

3. SETUP

1. **Unpack the Playset:** Carefully remove all components from the packaging. Ensure all listed items from the "What's in the Box" section are present.
2. **Battery Installation:** The Ice Rex requires 3 LR44 batteries (not included). Locate the battery compartment on the underside of the Ice Rex, open it with a small screwdriver, insert the batteries according to polarity markings, and secure the cover.
3. **Familiarize Components:** Take a moment to identify the Ice Rex figure, Smash Egg Rebuilder, Smash Eggs, Exclusive Smashers, and Collector's Guide.



Image 3.1: The Ice Rex figure ready for play.

4. OPERATING INSTRUCTIONS

4.1. Smashing Action with Ice Rex

1. **Prepare the Ice Rex:** Ensure the Ice Rex is standing upright on a flat surface.
2. **Feed the Egg:** Lift the Ice Rex's icy tail. This will open its mouth. Place one Smash Egg into the Ice Rex's mouth.
3. **Smash and Reveal:** Press down firmly on the egg shell located on the Ice Rex's back. The Ice Rex will bite down, smashing the egg and blasting out the Dino Ice Age Smashers inside. Listen for the roaring sounds during this action!
4. **Collect Smashers:** Retrieve the revealed Smashers and add them to your collection.



Image 4.1: Ice Rex Smashing Action Steps.



Image 4.2: Child demonstrating the smashing action.

4.2. Rebuilding Smash Eggs

The Smash Egg Rebuilder allows you to reassemble your Smash Eggs for continuous smashing fun.

1. **Gather Egg Pieces:** Collect all the pieces of a smashed egg.
2. **Use Rebuilder:** Place the egg pieces into the Smash Egg Rebuilder, ensuring they fit snugly.
3. **Assemble:** Press the rebuilder together to click the egg pieces back into place, forming a complete Smash Egg.



Image 4.3: Smash Egg in Rebuilder.



Image 4.4: Child rebuilding a Smash Egg.

4.3. Collecting Smashers

The Dino Ice Age series features over 50 unique characters to collect, including rare and ultra-rare glow-in-the-dark Dinosaurs. Use the included Collector's Guide to keep track of your discoveries and complete your collection.



Image 4.5: Discovering Smashers.

4.4. Official Product Videos

Product Overview Video

Video 4.1: This video provides a comprehensive overview of the ZURU SMASHERS Dino Ice Age Ice Rex Playset, demonstrating its features and how to play. It highlights the Ice Rex figure, Smash Egg Rebuilder, and the smashing action.

Smashers S3 Ice Age Epic Egg

Video 4.2: This video showcases the Smashers Series 3 Ice Age Epic Egg, demonstrating the excitement of discovering the hidden creatures and the various types of surprises found within the eggs.

5. MAINTENANCE

- **Cleaning:** Wipe the Ice Rex figure and other plastic components with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not immerse the electronic parts in water.
- **Storage:** Store the playset and its accessories in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice Rex not making sounds.	Batteries are low or incorrectly installed.	Check battery installation. Replace with fresh LR44 batteries.
Smash Egg not smashing properly.	Egg not positioned correctly or mechanism not fully engaged.	Ensure the Smash Egg is fully seated in the Ice Rex's mouth and the tail is lifted before pressing down on the back mechanism.
Smash Egg difficult to rebuild.	Pieces are not aligned correctly in the rebuilder.	Carefully align all egg pieces within the Smash Egg Rebuilder before pressing them together. Refer to the rebuilder's specific instructions if available.

7. SPECIFICATIONS

- **Product Dimensions:** 11.18 x 5.71 x 7.36 inches
- **Item Weight:** 1.35 pounds
- **Item Model Number:** 7467
- **Manufacturer Recommended Age:** 5 - 15 years
- **Batteries:** 3 LR44 batteries required (not included)
- **Manufacturer:** Zuru
- **Release Date:** June 23, 2020

8. WARRANTY INFORMATION

This ZURU SMASHERS product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific details regarding warranty coverage, duration, and how to make a claim, please refer to the product packaging or visit the official ZURU SMASHERS website. Please retain your proof of purchase for warranty purposes.

9. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your ZURU SMASHERS Dino Ice Age Ice Rex Playset, please contact ZURU SMASHERS customer support. You can typically find contact information on the product packaging or by visiting the official ZURU SMASHERS website:

www.zuru.com