

KITCHEN MOVE BAT-25A

KITCHEN MOVE BAT-25A 6.4L Air Fryer Instruction Manual

Model: BAT-25A

INTRODUCTION

This instruction manual provides important information for the safe and efficient operation of your KITCHEN MOVE BAT-25A 6.4L Air Fryer. Please read this manual thoroughly before first use and keep it for future reference. This appliance uses hot air circulation technology to cook, fry, grill, roast, dry, and reheat food with minimal to no oil, preserving taste and nutritional value.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off",

then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your KITCHEN MOVE BAT-25A Air Fryer:

- Main Unit with Digital LED Display
- Control Panel (Touch Screen)
- Handle
- Frying Basket (non-stick)
- Outer Pot (non-stick)
- Air Inlet
- Air Outlet
- Power Cord



Image: The KITCHEN MOVE BAT-25A Air Fryer main unit shown alongside its removable non-stick frying basket and outer pot.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Before first use, clean the frying basket and outer pot with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it near walls or other appliances.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket beyond the MAX indication.

2. **Insert Basket:** Slide the frying basket with the outer pot back into the main unit until it clicks into place.
3. **Power On:** Press the power button on the digital display to turn on the appliance.
4. **Select Program or Manual Settings:**
 - **Pre-programmed Settings:** The LED display features 8 intelligent pre-programmed settings for common foods such as fries, chicken, meat, snacks, cakes, fish, bacon, and pizza. Select the desired program via the touch screen.
 - **Manual Settings:** You can manually adjust the temperature (80-200°C) and preparation time (up to 60 minutes) using the touch controls.
5. **Start Cooking:** Press the start button to begin the cooking process.
6. **Shaking Food (Optional):** For even cooking, especially for items like fries, you can pull out the basket during cooking to shake the food. The air fryer will automatically pause and resume once the basket is reinserted.
7. **Completion:** The air fryer will beep when the cooking time is complete and automatically shut off.
8. **Remove Food:** Carefully pull out the basket using the handle. Press the separation button to detach the frying basket from the outer pot. Empty the cooked food into a serving dish.



Image: The KITCHEN MOVE BAT-25A Air Fryer in use, surrounded by various dishes like fries, chicken, shrimp, and vegetables, demonstrating its versatility.



- 90 % d'huile
en moins



80 - 200 °



0-60 min



Chaleur
tournante



Image: Diagram illustrating the 360-degree hot air circulation technology within the KITCHEN MOVE BAT-25A Air Fryer, with indicators for 90% less oil, 80-200°C temperature range, and 0-60 minute timer.



Panier
et grille

6.4 L (5L Panier)

Image: Close-up of the KITCHEN MOVE BAT-25A Air Fryer's digital display, showing various cooking icons representing different food types and functions.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Basket and Outer Pot:** The non-stick frying basket and outer pot are dishwasher safe. Alternatively, wash them with warm water, a mild detergent, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Clean Heating Element:** Use a soft brush to remove any food residue from the heating element inside the appliance.
5. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance.
Food is not cooked evenly.	Basket is overloaded. Food was not shaken during cooking.	Reduce the amount of food in the basket. Shake the basket halfway through the cooking time.
White smoke comes from the appliance.	Grease from previous use. Fatty ingredients are being cooked.	Clean the outer pot and basket thoroughly after each use. This is normal for fatty foods; ensure proper ventilation.
Food is not crispy.	Too much moisture in food. Not enough oil (if desired).	Pat food dry before cooking. Lightly brush or spray food with oil for extra crispiness.

SPECIFICATIONS

- **Model Number:** BAT-25A
- **Capacity:** 6.4 Liters (Outer Pot), 5 Liters (Frying Basket)
- **Power:** 2000 Watts
- **Voltage:** 220-240V, 50/60Hz
- **Temperature Range:** 80-200°C
- **Timer:** Up to 60 minutes
- **Dimensions (L x W x H):** 37 x 37 x 37 cm
- **Weight:** 6.3 kg
- **Material:** Plastic, Aluminum
- **Color:** Black
- **Features:** Digital LED display, Touch screen controls, 8 pre-programmed settings, Automatic shut-off, Overheat protection, Memory function.

WARRANTY AND SUPPORT

KITCHEN MOVE products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact KITCHEN MOVE customer service. Keep your proof of purchase for warranty claims.

For further assistance, please visit the official KITCHEN MOVE website or contact their customer support line.