

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER BXFF53001GB 2-in-1 High Velocity Circulator Fan Instruction Manual](#)

## BLACK+DECKER BXFF53001GB

# BLACK+DECKER BXFF53001GB 2-in-1 High Velocity Circulator Fan

Model: BXFF53001GB

### INTRODUCTION

Thank you for choosing the BLACK+DECKER BXFF53001GB 2-in-1 High Velocity Circulator Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fan. Please read these instructions thoroughly before use and retain them for future reference.

This versatile fan is designed to provide powerful air circulation, suitable for various spaces in your home or office. Its 2-in-1 design allows for both free-standing floor use and convenient wall mounting, offering flexible cooling solutions.

### PRODUCT OVERVIEW AND COMPONENTS

The BLACK+DECKER BXFF53001GB is a robust 20-inch circulator fan engineered for high velocity airflow. It features a durable construction and intuitive controls for ease of use.



Image: Front view of the BLACK+DECKER BXFF53001GB 2-in-1 High Velocity Circulator Fan, showcasing its robust design and protective grille.

### Key Features:

- **2-in-1 Design:** Can be used as a free-standing floor fan or wall-mounted.
- **Powerful 70W Motor:** Delivers high velocity air circulation.
- **3 Speed Settings:** Low, Medium, and High for customized airflow.
- **8-Hour Timer:** Programmable auto shut-off function.
- **Remote Control:** Convenient operation from a distance.

### Components:

- Fan Unit (with blades and grille)
- Sturdy Base/Stand
- Control Panel (on fan unit)
- Remote Control
- Power Cord

## SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using this fan.
- Ensure the power supply matches the voltage specified on the fan's rating label.
- Do not operate any fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan from the power outlet when not in use, when moving it from one location to another, and before cleaning.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This fan is not intended for use in wet or damp locations. Never locate a fan where it may fall into a bathtub or other water container.
- Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty.

## SETUP

### Unboxing:

Carefully remove the fan and all components from the packaging. Inspect for any damage during transit. Retain packaging for future storage or transport.

### Placement Options:

Your BLACK+DECKER circulator fan offers two primary placement options:



## 2-in-1 Velocity Fan



# High velocity circulator fan can be used free standing or wall mounted for a space-saving cooling solution

Image: The fan demonstrating its versatility, shown both as a free-standing unit on the floor and securely mounted on a wall, highlighting its space-saving capabilities.

- **Free-Standing:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for optimal air circulation and to prevent obstruction of air inlets/outlets.
- **Wall-Mounted:** The fan can be mounted to a wall using appropriate hardware (not included) and following local building codes. Ensure the mounting surface is strong enough to support the fan's weight and that the fan is securely fastened to prevent falling. Always consult a qualified professional if unsure about wall mounting.

### Connecting to Power:

Once placed, plug the power cord into a standard electrical outlet. Ensure the outlet is easily accessible for quick disconnection if needed.

## OPERATING INSTRUCTIONS

### Powering On/Off:

Press the **Power** button on the fan's control panel or on the remote control to turn the fan on or off.

### Adjusting Speed Settings:

The fan features three speed settings: Low, Medium, and High. You can adjust the speed using the controls on the fan or the remote control.



**Choose between high, medium or low airflow settings for maximum comfort**

Image: A close-up view of the fan's control panel, clearly displaying the three speed settings (1, 2, 3) for adjusting airflow intensity.

- Press the **Speed** button repeatedly to cycle through the settings: Low (1), Medium (2), High (3).
- Select the desired speed for optimal comfort and air circulation.

### Using the Timer Function:

The integrated timer allows you to set the fan to automatically shut off after a specified period, up to 8 hours.



## 7 Hour Timer



# Set the timer to auto shut off both manually or with the remote control

Image: A detailed view of the fan's control panel and the remote control, highlighting the timer settings (1hr, 2hr, 4hr) for convenient auto shut-off.

- Press the **Timer** button on the fan's control panel or the remote control.
- Each press will cycle through the available timer settings (e.g., 1 hour, 2 hours, 4 hours, 8 hours).
- The corresponding indicator light on the control panel will illuminate to show the selected timer duration.
- The fan will automatically turn off once the set time has elapsed.

### Remote Control Operation:

The included remote control provides convenient access to all fan functions from a distance. Ensure the remote has working batteries and is pointed towards the fan's control panel for effective operation.

- **Power Button:** Turns the fan On/Off.
- **Speed Button:** Cycles through fan speeds (Low, Medium, High).
- **Timer Button:** Sets the auto shut-off timer.

## MAINTENANCE

Regular cleaning and proper storage will help maintain the performance and longevity of your fan.

### Cleaning:

- **Always unplug the fan before cleaning.**
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- Do not use abrasive cleaners, waxes, or solvents as these may damage the finish.
- For cleaning the fan blades and inside the grille, use a vacuum cleaner with a brush attachment to remove dust. Do not attempt to disassemble the fan for cleaning.
- Ensure the fan is completely dry before plugging it back in.

### Storage:

When not in use for extended periods, store the fan in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

## TROUBLESHOOTING

If you experience issues with your fan, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power cord not securely plugged in. Remote control batteries are dead.	Check if the power outlet is working. Ensure the power cord is firmly plugged into the fan and the outlet. Replace remote control batteries.
Weak or no airflow.	Fan speed set too low. Air inlets/outlets are blocked.	Increase the fan speed setting. Ensure nothing is obstructing the front grille or rear air intake.
Fan is unusually noisy.	Fan not on a level surface. Loose parts or debris inside.	Place the fan on a flat, stable surface. Unplug the fan and gently check for any visible debris or loose components. Do not attempt to open the fan.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries, ensuring correct polarity. Ensure a clear line of sight between the remote and the fan's control panel.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	BXFF53001GB
Power Source	Corded Electric
Wattage	70 watts
Speed Settings	3 (Low, Medium, High)
Timer	Up to 8 hours
Control Type	Manual (on-unit) and Remote Control
Product Dimensions	58D x 17W x 58H centimetres
Item Weight	3.22 Kilograms
Finish Type	Smooth Plastic
Included Components	Remote Control

## WARRANTY AND SUPPORT

### Warranty Information:

This BLACK+DECKER product comes with a standard 1-year manufacturer's guarantee. An extended 2-year guarantee is available upon product registration online. Please refer to the product packaging or the official BLACK+DECKER website for details on how to register your product and the full terms and conditions of the guarantee.



Image: A graphic indicating the 2-year guarantee for the product, highlighting the extended warranty period available.

### Customer Support:

For technical assistance, warranty claims, or general inquiries, please visit the official BLACK+DECKER website or contact their customer service department. Contact details can typically be found on the product packaging or the brand's official website.

