

Kärcher 1.512-461.0

Kärcher EasyFix Steam Cleaner SC 4 EasyFix Iron User Manual

Model: 1.512-461.0 | Brand: Kärcher

1. PRODUCT OVERVIEW

The Kärcher SC 4 EasyFix Iron steam cleaner is designed for thorough cleaning and effective dirt removal using steam pressure. This versatile appliance includes a floor nozzle with EasyFix system and a steam pressure iron for efficient cleaning and ironing tasks. Its permanently refillable, removable water tank ensures uninterrupted operation.

Key Features:

- Removable, permanently refillable water tank for continuous steam.
- EasyFix floor cleaning set with flexible joint and Velcro fixing for floor cloths.
- Steam pressure iron EasyFinish, designed to save up to 50% time when ironing.
- Suitable for various applications, ensuring thorough cleaning and effective dirt loosening.
- Comprehensive box contents: steam cleaner, hand nozzle, spot jet nozzle, small round brush, iron, microfibre floor cloth, microfibre cover for hand nozzle, descaler powder, and steam hose with gun.



Figure 1.1: Kärcher EasyFix Steam Cleaner and its complete set of accessories.

2. SETUP

Before first use, ensure all packaging materials are removed. The steam cleaner requires water for operation. Follow these steps to prepare your device:

1. Locate the removable water tank.
2. Fill the water tank with clean tap water. The tank is designed for permanent refilling during operation.
3. Place the filled water tank back into the steam cleaner.
4. Connect the power plug to a suitable electrical outlet (220 Volts AC, 2000 Watts).

5. Allow the device to heat up. The indicator light will change to signal readiness for use.



Figure 2.1: Filling the removable water tank.

3. OPERATING INSTRUCTIONS

The Kärcher SC 4 EasyFix Iron offers various cleaning applications. Always ensure the steam cleaner is heated and ready before beginning any task.

3.1. General Steam Cleaning

Attach the desired accessory (e.g., hand nozzle with microfibre cover, spot jet nozzle, or round brush) to the steam gun. Direct the steam towards the surface to be cleaned. For optimal results, move the accessory slowly over the surface, allowing the steam to penetrate and loosen dirt. The steam effectively cleans without chemicals, killing up to 99.999% of viruses and bacteria.

 


Figure 3.1: Cleaning a kitchen surface with the hand nozzle.



Figure 3.2: Cleaning bathroom fixtures with the spot jet nozzle.

3.2. Floor Cleaning (EasyFix System)

Assemble the extension tubes and attach the EasyFix floor nozzle. Secure the microfibre floor cloth to the nozzle using the Velcro fastening. Apply steam and glide the floor nozzle over hard floors. The flexible joint allows for easy cleaning under furniture. For best results, ensure the cloth is clean and properly attached.



Figure 3.3: Cleaning floors with the EasyFix floor nozzle.

3.3. Steam Ironing (EasyFinish Iron)

Connect the steam pressure iron to the steam cleaner. The EasyFinish iron provides powerful steam for efficient wrinkle removal, potentially reducing ironing time by up to 50%. Use on appropriate fabrics and follow garment care instructions.



Figure 3.4: Ironing with the included steam iron.

3.4. Official Product Video

For a visual demonstration of the Kärcher EasyFix Steam Cleaner in action, including setup and various cleaning applications, please watch the official product video below.

Your browser does not support the video tag.

Video 3.1: Official Kärcher EasyFix Steam Cleaner demonstration, showcasing its features and versatility in various cleaning scenarios.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Kärcher steam cleaner.

4.1. Descaling

Over time, mineral deposits from water can build up inside the steam cleaner. Use the provided descaler powder as directed in the full instruction manual to remove these deposits. Regular descaling prevents blockages and maintains steam output.

4.2. Cleaning Accessories

After each use, clean the microfibre cloths and covers. They can typically be machine washed. Rinse nozzles and brushes under running water to remove any dirt or debris. Ensure all accessories are dry before storage.

5. TROUBLESHOOTING

If you encounter issues with your Kärcher steam cleaner, refer to the following common troubleshooting tips:

- **No Steam Output:** Check if the device is properly plugged in and powered on. Ensure the water tank is filled and the device has had sufficient time to heat up.
- **Low Steam Pressure:** This can be caused by mineral buildup. Perform a descaling procedure as described in the maintenance section.
- **Water Leaking:** Ensure all attachments are securely fastened. Check for any cracks or damage to the water tank or hoses.

For more detailed troubleshooting or persistent issues, please contact Kärcher customer support or refer to the comprehensive manual provided with your product.

6. SPECIFICATIONS

Specification	Detail
Brand	Kärcher
Model Name	SC 4 EasyFix Iron
Model Number	1.512-461.0
Special Feature	Steam Pressure Iron EasyFinish
Surface Recommendation	Floor
Wattage	2000 watts
Voltage	220 Volts (AC)
Item Weight	7.06 Kilograms (15.53 pounds)
Tank Volume	0.5 Liters
Product Dimensions	15.55 x 11.61 x 17.01 inches
Power Source	Corded Electric
Material	Microfibre, Iron

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Kärcher website. Kärcher offers various protection plans for extended coverage. For customer support, technical assistance, or spare parts, please contact Kärcher directly or visit their official store page: [Kärcher Store on Amazon](#).