

## Smoby 7600180800

# Smoby Kidcorder Instruction Manual

Model: 7600180800

## 1. INTRODUCTION

---

The Smoby Kidcorder is an intuitive and durable recording device designed to encourage creativity and curiosity in young children from 12 months of age. It allows toddlers to record voices, sounds, and songs, and play them back independently. This manual provides essential information for safe and effective use of your Kidcorder.

## 2. SAFETY INFORMATION

---

- Always supervise children during use.
- Do not immerse the device in water or other liquids.
- Keep away from extreme temperatures and direct sunlight.
- Batteries should be installed and replaced by an adult. Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries responsibly according to local regulations.
- Regularly inspect the device for any damage. Discontinue use if damaged.

## 3. WHAT'S IN THE BOX

---

- 1 x Smoby Kidcorder (Model: 7600180800)

*Note: Batteries are not included.*

## 4. SETUP

---

### 4.1 Battery Installation

1. Locate the battery compartment on the back or bottom of the Kidcorder.
2. Using a small screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 x LR6 (AA) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.



Image 1: Front view of the Smoby Kidcorder, showing the nine assignable buttons and the large red record button. This image illustrates the device's compact design and user-friendly interface for young children.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Recording

1. Press and hold the large red **REC** button for approximately 3 seconds until the indicator light flashes.
2. Select one of the 9 numbered buttons (1-9) to assign your recording to that track.
3. Speak clearly into the microphone or place the Kidcorder near the sound source you wish to record.
4. To stop recording, press the large red **REC** button again. The indicator light will stop flashing.
5. *Tip:* For optimal sound quality, ensure the microphone is not covered and the sound source is within a reasonable distance.

### 5.2 Playback

1. Press the numbered button (1-9) corresponding to the track you wish to play back.
2. The Kidcorder will play the recorded sound from that track.
3. To stop playback, press the same numbered button again or the **REC** button.
4. *Note:* The Kidcorder allows for repeated playback, enabling children to listen to their creations multiple times.

### 5.3 Protecting Recordings

To prevent accidental deletion of a recording, press and hold button 9 for 5 seconds. This will protect all current recordings. To disable protection, locate the hidden switch underneath the device and toggle it. Be aware that

disabling this switch will remove all recording protections.

## 5.4 Continuous Playback

To play all recorded tracks sequentially, press and hold button 1 for 5 seconds. The Kidcorder will cycle through all recorded messages.



Image 2: Two young children interacting with the Smoby Kidcorder outdoors, demonstrating its portability and suitability for shared play and learning experiences.

## 6. MAINTENANCE

- Clean the Kidcorder with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the device becomes dirty, a slightly damp cloth can be used, but ensure no moisture enters the electronic components.
- Store the Kidcorder in a cool, dry place away from direct sunlight when not in use.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new LR6 (AA) batteries.
Poor recording quality.	Microphone covered, too far from sound source, or background noise.	Ensure microphone is clear. Speak closer to the device. Record in a quiet environment.

Problem	Possible Cause	Solution
Cannot record or playback.	Recording protection is active.	Toggle the hidden switch underneath the device to disable recording protection.
No sound during playback.	Volume too low or no recording on selected track.	Ensure volume is adjusted. Verify a recording exists on the selected track.

## 8. SPECIFICATIONS


- Model Number:** 7600180800
- Product Dimensions:** 5.91 x 1.38 x 3.94 inches (15 x 3.5 x 10 cm)
- Item Weight:** 10.6 ounces (approx. 300g)
- Recommended Age:** 12 months and up
- Batteries Required:** 3 x LR6 (AA) (not included)
- Manufacturer:** Smoby Toys
- Release Date:** February 28, 2020


## 9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided at the point of purchase or visit the official Smoby Toys website. Keep your proof of purchase for warranty claims.

© 2025 Smoby Toys. All rights reserved.

### Related Documents

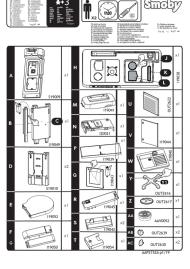	<p><a href="#"><u>Smoby Pushchair + Pram Assembly Instructions</u></a></p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>
	<p><a href="#"><u>Smoby Landau Calin Baby Doll Stroller Assembly Instructions</u></a></p> <p>This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.</p>
	<p><a href="#"><u>Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual</u></a></p> <p>Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.</p>

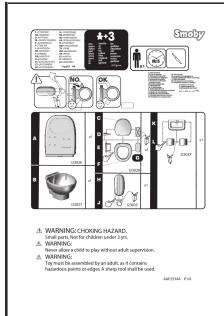

## [Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide](#)

Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.