

[Manuals.plus](#) /

› [N-Gear](#) /

› N-GEAR Flash 1205 Karaoke Machine User Manual

N-Gear Flash 1205

N-GEAR Flash 1205 Karaoke Machine User Manual

Model: Flash 1205

Brand: N-Gear

1. INTRODUCTION

The N-GEAR Flash 1205 is a portable karaoke machine designed to deliver powerful sound and vibrant lighting effects for various entertainment settings. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity.



Image 1.1: The N-GEAR Flash 1205 Karaoke Machine, including the main speaker unit, one wireless microphone, one wired microphone, and a remote control.

2. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- 1 x N-GEAR Flash 1205 Speaker Unit
- 1 x Wireless Microphone
- 1 x Wired Microphone
- 1 x Remote Control
- 1 x Power Adapter (not explicitly listed but implied for charging)



Image 2.1: Front and rear views of the speaker, along with the included microphones and remote control.

3. KEY FEATURES

- **Built-in Lighting Effects:** Dynamic LED lights integrated into the speaker for a party atmosphere.
- **Portability:** Equipped with a carrying handle and wheels for easy transport.
- **Bluetooth Connectivity:** Seamless wireless audio streaming from compatible devices.
- **Multiple Input Options:** Supports USB, Micro SD, and AUX inputs.
- **Karaoke Function:** Includes two microphones (one wireless, one wired) for duets and vocal performances.
- **Powerbank Function:** Ability to charge external devices (details not specified, refer to product description).
- **Powerful Audio Output:** Features a 12-inch woofer and 1-inch tweeter for clear and robust sound.

4. SETUP

4.1 Charging the Unit

Before first use, fully charge the N-GEAR Flash 1205. Connect the power adapter to the DC 5V/1A input port on the rear panel of the speaker and plug it into a power outlet. The charging indicator will illuminate to show the charging status. A full charge provides up to 360 minutes of battery runtime.

4.2 Connecting Microphones

- **Wired Microphone:** Insert the 6.35mm jack of the wired microphone into the 'MIC IN' port on the rear control panel.
- **Wireless Microphone:** Ensure the wireless microphone has fresh batteries and is powered on. It should automatically connect to the speaker.





Image 4.1: Detailed view of the rear control panel, indicating volume, echo, microphone inputs, and various connectivity ports.



Image 4.2: The wireless microphone, featuring a power switch and battery indicator.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button on the control panel to turn the unit ON or OFF.

5.2 Bluetooth Connection

1. Turn on the N-GEAR Flash 1205.
2. Press the 'MODE' button on the unit or remote control until 'Bluetooth' mode is selected. You will hear an audible prompt.
3. Enable Bluetooth on your smartphone, tablet, or other audio device.
4. Search for 'N-GEAR Flash 1205' in your device's Bluetooth settings and select it to pair.
5. Once connected, you can stream audio wirelessly to the speaker.

5.3 USB/Micro SD Playback

Insert a USB flash drive or Micro SD card (with compatible audio files) into the respective slot on the control panel. The unit will automatically switch to USB or Micro SD playback mode and begin playing music. Use the playback controls on the unit or remote to navigate tracks.

5.4 AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the 'AUX' input port on the speaker using a 3.5mm audio cable. Press the 'MODE' button until 'AUX' mode is selected. Audio will now play through the speaker from your connected device.

5.5 Karaoke Function

With microphones connected (as per Section 4.2), play your desired music through any input mode. Adjust the 'MIC VOL' knob to control the microphone volume and the 'ECHO' knob to add an echo effect to your vocals. Sing into the microphones while the music plays.

5.6 Lighting Effects

The built-in lighting effects will activate automatically when the unit is powered on. Specific controls for lighting modes may be available via the remote control or a dedicated button on the unit (refer to the control panel diagram for details).

5.7 Remote Control Usage

The included remote control provides convenient access to various functions:

- **Power Button:** Turn the unit on/off.
- **MODE:** Switch between input modes (Bluetooth, USB, Micro SD, AUX).
- **VOL+/VOL-:** Adjust the main volume.
- **Previous/Next Track:** Navigate through tracks (in USB/Micro SD/Bluetooth modes).
- **Play/Pause:** Control media playback.
- **RPT:** Repeat function.
- **EQ:** Equalizer settings (if available).
- **Number Buttons:** Direct track selection (in USB/Micro SD modes).

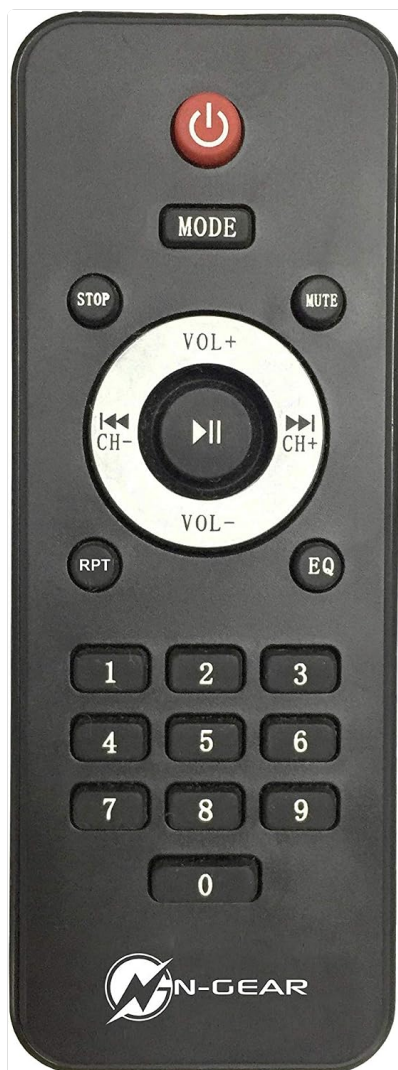


Image 5.1: The remote control for the N-GEAR Flash 1205, showing various function buttons.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners, solvents, or strong chemicals, as they may damage the surface.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the unit regularly, even if not in active use.

7. TROUBLESHOOTING

If you encounter any issues with your N-GEAR Flash 1205, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not power on.	Low battery or no power connection.	Ensure the unit is fully charged or connected to a power outlet. Check the power switch.
No sound output.	Volume too low, incorrect input mode, or faulty connection.	Increase the volume on both the speaker and the connected device. Press 'MODE' to select the correct input. Check all cable connections.
Microphone cuts out or has delay.	Low microphone battery, interference, or inherent design characteristic.	Replace batteries in the wireless microphone. Ensure no obstructions between microphone and speaker. Note that some delay or cut-out may be present due to the microphone's design to prevent feedback.
Bluetooth pairing fails.	Unit not in pairing mode, Bluetooth disabled on device, or too far apart.	Ensure the speaker is in Bluetooth mode. Enable Bluetooth on your device. Move your device closer to the speaker (within 10 meters).
USB/Micro SD not playing.	Unsupported file format, corrupted files, or improper insertion.	Ensure audio files are in a compatible format. Try a different USB drive/Micro SD card. Reinsert the storage device firmly.

8. SPECIFICATIONS

Feature	Detail
Model Number	Flash 1205
Dimensions (L x W x H)	28 x 35 x 55 cm
Item Weight	5 kg
Material	Plastic
Output Wattage (Max)	300 Watts
RMS Power	10 Watts
Speaker Crossover	Two-way
Woofer Diameter	12 inch
Tweeter Dimensions	1 inch
Connectivity Technology	Bluetooth, USB, AUX
Connector Type	USB, Aux

Feature	Detail
Power Source	Battery Powered
Battery Type	Lead Acid
Battery Capacity	2000 mAh
Battery Runtime	Up to 360 minutes
Input	DC 5V/1A
Manufacturer Recommended Age	14 years and up



Flash 1205



Image 8.1: Technical drawing showing the dimensions of the N-GEAR Flash 1205 speaker (in mm).

9. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure safe operation and prevent damage to the unit or injury:

- Do not expose the unit to water, rain, or excessive moisture.
- Do not attempt to disassemble, modify, or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the unit away from heat sources, direct sunlight, and open flames.

- Use only the specified power adapter for charging.
- Ensure proper ventilation around the unit during operation. Do not block any ventilation openings.
- Keep out of reach of young children.
- Dispose of the product and its components responsibly according to local regulations.

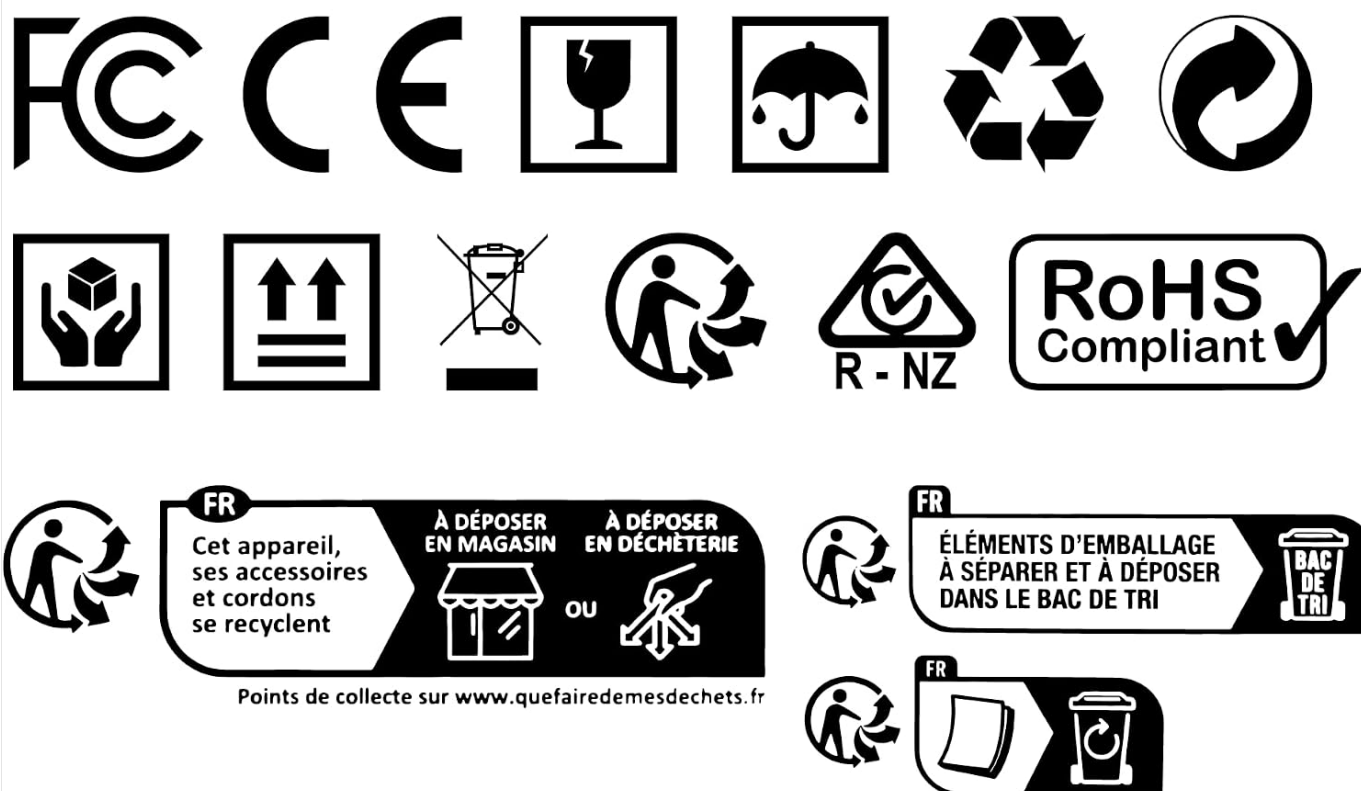


Image 9.1: Various compliance and recycling symbols, indicating adherence to safety and environmental standards.

10. WARRANTY AND SUPPORT

Warranty information for the N-GEAR Flash 1205 is not provided within this manual. For details regarding warranty coverage, returns, or technical support, please contact your original retailer or the manufacturer directly. Please retain your proof of purchase for any warranty claims.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question