

[Manuals.plus](#) /

› [Power Rangers](#) /

› Power Rangers Lightning Collection Mighty Morphin Dragon Dagger (Model E8162) Instruction Manual

## Power Rangers E8162

# Power Rangers Lightning Collection Mighty Morphin Dragon Dagger (Model E8162) Instruction Manual

Brand: Power Rangers | Model: E8162

## INTRODUCTION

The Power Rangers Lightning Collection Mighty Morphin Dragon Dagger is a detailed replica designed for collectors and fans. This electronic roleplay toy features lights, sounds, and musical functions inspired by the iconic Mighty Morphin Power Rangers series. This manual provides essential information for the safe and proper use, setup, and maintenance of your Dragon Dagger.

## SAFETY INFORMATION

**WARNING: Small parts may be generated. Not for children under 3 years.**

- This product is intended for ages 18 years and up.
- Keep batteries out of reach of small children.
- Do not aim or swing the dagger at people or animals.
- Avoid exposing the product to extreme temperatures or moisture.
- Do not attempt to disassemble or modify the product, as this may cause damage or injury and void the warranty.

## WHAT'S IN THE BOX

Your Power Rangers Lightning Collection Mighty Morphin Dragon Dagger package should contain the following items:

- 1 x Mighty Morphin Dragon Dagger Roleplay Toy
- 1 x Display Stand
- Instruction Manual (this document)

*Note: Batteries are required but may not be included. Please check packaging for details.*

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the handle of the Dragon Dagger.
2. Using a small Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 1 x 'A' battery (as specified in product details) into the compartment, ensuring correct polarity (+/-).

4. Replace the battery compartment cover and secure it with the screw.

## 2. Assembling the Display Stand

The display stand typically consists of a base and two support pieces. Carefully insert the support pieces into the designated slots on the base until they click securely into place. The Dragon Dagger can then be rested on these supports for display.



Figure 1: The Mighty Morphin Dragon Dagger on its included display stand.

## OPERATING THE DRAGON DAGGER

### 1. Powering On/Off

Locate the power switch, usually found near the base of the dagger's handle. Slide the switch to the "ON" position to activate the dagger's electronic features. Slide to "OFF" to conserve battery life.

### 2. Sound and Light Modes

The Dragon Dagger features multiple buttons on its handle that activate various sounds and light effects. These buttons typically correspond to musical notes or specific sound effects from the series.





Figure 2: Detail of the Dragon Dagger's handle with interactive buttons.

### 3. Activating the Dragonzord Summoning Tune

To activate the full Dragonzord summoning tune, press the buttons in the correct sequence. Refer to the original series or product packaging for the specific sequence. Successful input will trigger a unique light and sound effect, including the iconic Dragonzord call.



Figure 3: Packaging detail illustrating button functions and features.

## MAINTENANCE

- **Cleaning:** Wipe the dagger and stand with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **Storage:** Store the Dragon Dagger on its display stand in a cool, dry place away from direct sunlight to prevent discoloration or damage.

## TROUBLESHOOTING

- **No Sound/Lights:**
  - Ensure the power switch is in the "ON" position.
  - Check if the batteries are correctly installed and not depleted. Replace if necessary.
- **Buttons Unresponsive:**
  - Verify that the dagger is powered on.

- Gently press each button to ensure it is not stuck.
  - If specific buttons are consistently unresponsive, contact customer support.
- **Intermittent Functionality:**
    - This could indicate low battery power. Try replacing the batteries.
    - Ensure no debris is obstructing the buttons or internal components.

SPECIFICATIONS

|                    |                           |
|--------------------|---------------------------|
| Product Dimensions | 6.5 x 2.62 x 22.75 inches |
| Item Weight        | 13.1 ounces               |
| Item Model Number  | E8162                     |
| Manufacturer       | Hasbro                    |
| Batteries Required | 1 A battery               |
| Recommended Age    | 18 years and up           |
| Language           | English                   |
| Release Date       | June 14, 2023             |

WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For detailed warranty information, product support, or to report any issues, please contact Hasbro customer service directly. Contact information can typically be found on the product packaging or on the official Hasbro website.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**