

Philips SRP6249B/27

Philips Universal Remote Control SRP6249B/27 User Manual

Model: SRP6249B/27

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Philips 6-Device Universal Remote Control, model SRP6249B/27. This remote is designed to consolidate control of up to six audio and video devices, simplifying your home entertainment experience.

2. PRODUCT OVERVIEW

The Philips SRP6249B/27 is a versatile universal remote control capable of operating various devices. Its ergonomic design and intuitive button layout enhance usability.

Key Features:

- **Multi-Device Control:** Operate up to six audio and video devices, including TVs, Blu-ray/DVD players, soundbars, cable and satellite receivers, and more.
- **Extensive Code Library:** Compatible with major brands and thousands of audio/video devices. (*Note: Not for use with radio frequency devices like Roku Streaming Sticks and Amazon Fire TV/Sticks.*)
- **Preprogrammed Convenience:** TV and STR (Streaming) device buttons are preprogrammed for immediate use with Samsung TVs and Roku streaming media boxes.
- **Simple Setup:** Features automatic code search and direct code entry programming.
- **Primary Audio Control:** Adjust volume regardless of the currently selected device.
- **Enhanced Functionality:** Includes Blu-ray/DVD player open/close button, advanced DVR functions, simple menu navigation, a dash button for sub-channel access, and a streaming app hotkey.





Figure 2.1: Front view of the Philips 6-Device Universal Remote Control. This image displays the remote's button layout, including device selection buttons, navigation, volume, channel, and number pad.



Figure 2.2: Illustration highlighting the 6-device control capability and key functional areas of the remote, such as media control and DVD/Blu-ray open/close.

3. SETUP

3.1 Battery Installation

The remote requires two AAA batteries (not included). To install:

1. Remove the battery cover on the back of the remote.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).
3. Replace the battery cover.

3.2 Programming Your Remote

Your remote can be programmed using either the Auto Code Search method or Direct Code Entry. The TV and STR (Streaming) device buttons are preprogrammed for immediate use with Samsung TVs and Roku streaming media boxes.












Figure 3.1: Visual guide illustrating the types of devices compatible with the universal remote for programming, including TVs, soundbars, home theater systems, cable/satellite boxes, DVD/Blu-ray players, and media streaming players.

Direct Code Entry Method:

This method uses specific 4-digit codes for your devices. Refer to the Remote Code List included with your remote or visit the online code lookup tool.

Programming your remote

-  Locate the **Remote Code List*** included with the remote.
-  Press and hold the remote's **SETUP** button until the remote's red light turns on.

-  Press and release the remote's device button for the item you want to control.

-  Use the remote's number buttons to enter the first 4-digit code from Step 1.

-  Point the remote at the device and test.
-  Repeat these steps to set up each additional device.

*Find your codes at www.byjasco.com/urccodes

Figure 3.2: Step-by-step visual instructions for programming the universal remote using direct code entry. This includes locating the code list, using the SETUP button, selecting the device, entering the code, and testing functionality.

1. Locate the Remote Code List provided with your remote.
2. Press and hold the remote's **SETUP** button until the remote's red light turns on.
3. Press and release the remote's device button (e.g., **TV**, **STR**, **DVD**) for the item you wish to control.
4. Use the remote's number buttons to enter the first 4-digit code from the list for your device's brand.
5. Point the remote at the device and test its functions (e.g., Power, Volume).
6. Repeat these steps to set up each additional device. If the first code does not work, try the next code listed for your brand.

Online Code Lookup:

For an updated and comprehensive list of codes, visit www.byjasco.com/urccodes.



Comprehensive code library works with all major brands

and supports thousands of the latest audio/video components



- Samsung
- Vizio
- JVC
- Sony
- Emerson
- Element
- Hisense
- Westinghouse
- And more

Preprogrammed for Roku® and Samsung devices

NOT COMPATIBLE with Roku Streaming Stick or Amazon Fire TV/Stick

Figure 3.3: This image highlights the comprehensive code library, indicating compatibility with numerous major brands such as Samsung, Vizio, Sony, and others.

4. OPERATING INSTRUCTIONS

Once programmed, your universal remote can control your devices. Ensure the remote is pointed directly at the device you wish to control.

4.1 Device Selection

To control a specific device, press the corresponding device button at the top of the remote:

- **TV:** For televisions.
- **STR:** For streaming media players (e.g., Roku).
- **DVD:** For DVD or Blu-ray players.
- **AUD:** For audio receivers or soundbars.

- **CBL:** For cable boxes.
- **AUX:** For auxiliary devices.

4.2 Basic Functions

- **Power (⏻):** Turns the selected device on or off.
- **Volume (VOL +/-):** Adjusts the volume of the selected device.
- **Channel (CH +/-):** Changes channels on the selected device.
- **Navigation (Arrow buttons & OK):** Used to navigate menus and confirm selections.
- **Number Pad (0-9):** For direct channel entry or other numerical inputs.

4.3 Special Functions

- **Primary Audio Control:** This feature allows you to control the volume of a specific audio device (e.g., soundbar) regardless of which device is currently selected on the remote. Consult the full instructions for enabling this feature.
- **Blu-ray/DVD Open/Close:** A dedicated button for opening and closing the disc tray on compatible players.
- **Advanced DVR Functions:** Buttons for recording, playback, and other DVR controls.
- **Menu Navigation:** Access and navigate device menus.
- **Dash Button (-):** For accessing sub-channels (e.g., 7-1).
- **Streaming App Hotkey:** A dedicated button to quickly launch your smart TV's primary media platform or a specific streaming application.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the indicator light does not illuminate. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your Philips Universal Remote Control, try the following solutions:

- **Remote Not Responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Point the remote directly at the device and ensure no obstructions are present.
 - Verify that the correct device button (e.g., TV, STR) is selected.
- **Specific Functions Not Working:**
 - If some buttons work but others do not, the programming code might not be fully compatible. Try entering a different code from the code list for your device's brand.
 - Ensure the device you are trying to control supports the specific function (e.g., not all TVs have a 'Dash' function).
- **Programming Difficulties:**
 - Double-check that you are pressing and holding the **SETUP** button until the red light illuminates before proceeding.

- Ensure you are entering the 4-digit code accurately.
- Consult the online code lookup tool at www.byjasco.com/urccodes for additional codes or programming videos.

7. SPECIFICATIONS

Brand	Philips
Model Number	SRP9263C/27 (<i>Note: Product title refers to SRP6249B/27</i>)
Product Dimensions	1.7 x 2.5 x 9 inches
Item Weight	0.634 ounces
Max Number of Supported Devices	6
Color	Blue
Manufacturer	Jasco Products Company, LLC
First Available	February 19, 2020



Figure 7.1: Dimensions of the Philips Universal Remote Control, showing its length, width, and thickness.

8. SUPPORT

For additional support, including an extensive code library and step-by-step programming videos, please visit the manufacturer's website:

- **Code Lookup and Programming Videos:** www.byjasco.com/urccodes

For warranty information, please refer to the documentation included with your purchase or contact Jasco Products Company, LLC directly.