

[Manuals.plus](#) /

> [SEB](#) /

> SEB ActiFry Advance Air Fryer User Manual

SEB FZ727800

SEB ActiFry Advance 1.2kg Oil-Free Electric Fryer

Model: FZ727800 - User Manual

1. PRODUCT OVERVIEW

The SEB ActiFry Advance is an innovative oil-free electric fryer designed to deliver crispy results with significantly less fat. Featuring intelligent temperature regulation, high-speed airflow, and a unique stirring paddle, it ensures even cooking and exceptional crispiness. This appliance is ideal for preparing a variety of healthy fried dishes for the entire family, supported by a dedicated recipe application for culinary inspiration.



This image displays the SEB ActiFry Advance 1.2kg oil-free electric fryer, Model FZ727800, in its retail packaging. The packaging highlights the product's main features, including its ability to produce crispy fries with 99% less fat, intelligent temperature regulation, high-speed airflow, and the unique stirring paddle for even cooking. Various cooked dishes like fries, chicken, and potato wedges are shown, emphasizing the versatility of the appliance. The fryer itself is black with a sleek design.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact authorized service for repair.
- Keep children and pets away from the appliance during operation. The exterior surfaces can become hot.
- Never leave the appliance unattended while in use.
- Do not block the air inlet or outlet vents during operation.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Use only accessories recommended by the manufacturer.
- This appliance is intended for household use only.

3. COMPONENTS AND FEATURES

- **Transparent Glass Lid:** Allows you to monitor the cooking process without opening the appliance.
- **Removable Cooking Pan:** Non-stick coated for easy food release and cleaning.
- **Automatic Stirring Paddle:** Ensures even cooking and crispiness by gently stirring ingredients.
- **Control Panel:** Features intuitive controls for setting time and temperature.
- **Air Outlet Vents:** Located at the rear, for hot air exhaust.
- **Power Cord:** For connecting to the electrical outlet.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.

4.2 Initial Cleaning

1. Wash the removable cooking pan, stirring paddle, and lid in warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

4.3 Placement

1. Place the main unit on a stable, flat, heat-resistant surface.
2. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation.
3. Do not place the appliance near flammable materials or heat sources.

5. OPERATING INSTRUCTIONS

5.1 Preparing Ingredients

- Cut ingredients to a uniform size for even cooking.
- For fresh fries, rinse and pat dry thoroughly to remove excess starch.
- The ActiFry Advance requires little to no oil. For enhanced flavor and crispiness, a small amount of oil (e.g., 1 tablespoon) can be added.

5.2 Adding Ingredients

1. Place the stirring paddle into the cooking pan.
2. Add your prepared ingredients to the cooking pan. Do not exceed the maximum fill line.
3. Close the lid securely.

5.3 Setting Temperature and Time

1. Plug the appliance into a grounded electrical outlet.
2. The ActiFry Advance features intelligent temperature regulation, automatically adjusting for optimal cooking.
3. Use the control panel to set the desired cooking time. Refer to the recipe application or cooking guide for recommended times.

5.4 Starting and Stopping

1. Press the start button to begin cooking. The stirring paddle will rotate automatically.
2. To pause or stop cooking, press the stop button.
3. The appliance will beep when the cooking time is complete.

5.5 Using the MonActiFry Application

Enhance your cooking experience by downloading the MonActiFry application. It offers over 300 inspiring recipes tailored for your ActiFry Advance, providing step-by-step guidance and cooking tips.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

6.1 Daily Cleaning

1. Unplug the appliance and allow it to cool completely before cleaning.
2. Remove the cooking pan, stirring paddle, and lid.
3. Wash these removable parts with warm, soapy water and a non-abrasive sponge. Rinse thoroughly.
4. Wipe the interior and exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Ensure all parts are completely dry before reassembling or storing.

6.2 Dishwasher Compatibility

The cooking pan, stirring paddle, and lid are dishwasher-safe for convenient cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance damage.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If still not working, contact customer support.
Food is not crispy.	Ingredients too wet; too much food; insufficient cooking time.	Pat ingredients dry before cooking. Do not overload the pan. Increase cooking time if necessary. Ensure the stirring paddle is installed correctly.
White smoke coming from appliance.	Excess fat from ingredients; food residue.	This is usually normal for fatty foods. Clean the appliance thoroughly after each use to prevent residue buildup.
Stirring paddle not rotating.	Paddle not installed correctly; obstruction.	Ensure the stirring paddle is properly seated. Check for any food debris obstructing its movement.

8. TECHNICAL SPECIFICATIONS

Feature	Value
Brand	SEB
Model Number	FZ727800
Color	Black
Capacity	1.2 kg (2 Liters)
Power	800 Watts
Voltage	230 Volts
Material	Glass (Lid)
Item Weight	4.3 Kilograms
Control Method	Application
Non-stick Coating	Yes

9. WARRANTY AND SUPPORT

This SEB ActiFry Advance appliance comes with a **2-year manufacturer's warranty** from the date of purchase, covering defects in materials and workmanship under normal household use.

Additionally, SEB commits to a **10-year reparability period** for this product, ensuring that spare parts are available for a decade from the date of purchase.

For warranty claims, technical support, or to inquire about spare parts, please contact your local SEB authorized service center or visit the official SEB website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084ZPB62G>

More documents and user manuals: <https://manuals.plus/>