

Calor DT3030C0

Calor Access Steam Pocket DT3030C0 Garment Steamer

User Manual

INTRODUCTION

The Calor Access Steam Pocket DT3030C0 is an ultra-compact garment steamer designed for convenient and efficient wrinkle removal. Its exclusive foldable head and lightweight design make it ideal for both home use and travel. With a rapid 15-second heat-up time, 1300W power, and a continuous steam output of 19g/minute, this steamer provides quick and effective garment care for all fabric types. For your safety, it includes a stable base and an automatic shut-off function.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the garment steamer.
- Use the appliance only for its intended use.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- Always turn the appliance OFF before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces. Let the appliance cool completely before putting away. Loop cord loosely around the appliance when storing.
- Always disconnect the appliance from the electrical outlet when filling with water or emptying, and when not in use.
- Do not operate the appliance with a damaged cord or if the appliance has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the appliance. Contact qualified service personnel for examination and repair. Incorrect reassembly can cause a risk of electric shock when the appliance is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave the appliance unattended while connected.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam appliance upside down – there may be hot water in the reservoir.
- Use only distilled or demineralized water. Do not use perfumed water, water from tumble dryers, or additives.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Calor Access Steam Pocket DT3030C0 garment steamer.

1. Steam Head
2. Water Tank (removable)
3. Handle (foldable)
4. Steam Trigger/Button
5. Power Cord
6. Base/Stand



Image: The Calor Access Steam Pocket DT3030C0 garment steamer shown in its compact, folded position on its base.



Image: A close-up view of the 'PUSH' button located on the handle, used for folding and unfolding the steamer.

SETUP

1. **Unpack the Steamer:** Carefully remove all packaging materials and ensure all components are present.
2. **Unfold the Handle:** Press the 'PUSH' button (refer to Product Overview image) and unfold the handle until it locks into place.
3. **Fill the Water Tank:**
 - Remove the water tank from the main unit.
 - Open the rubber cap on the tank.
 - Fill the tank with distilled or demineralized water up to the MAX fill line. Do not overfill.
 - Close the rubber cap securely and reinsert the water tank into the steamer until it clicks into place.
4. **Connect to Power:** Plug the power cord into a suitable electrical outlet. The indicator light will illuminate.
5. **Heat Up:** The steamer will begin to heat up. It takes approximately 15 seconds to reach operating temperature. The indicator light will change or turn off when ready for use.

OPERATING INSTRUCTIONS

Once the steamer is ready, you can begin steaming your garments.

1. **Prepare Garment:** Hang the garment on a hanger. For best results, gently pull the fabric taut with one hand while steaming with the other.
2. **Steam Application:** Hold the steamer head a few centimeters away from the fabric. Press the steam trigger to release steam. Move the steamer head slowly over the wrinkled areas, from top to bottom.

3. **Continuous Steam:** For continuous steam, engage the steam lock feature (if available, refer to your specific model's button layout). Otherwise, hold down the steam trigger.
4. **Steaming Different Fabrics:**
 - **Delicate Fabrics:** Hold the steamer further away.
 - **Thicker Fabrics:** Apply steam closer and more slowly.
 - Always test on an inconspicuous area first.
5. **Automatic Shut-off:** The steamer is equipped with an automatic shut-off feature for safety. If left idle for a period, it will turn off. To restart, unplug and replug the unit, then allow it to reheat.
6. **After Use:** Once finished, release the steam trigger and unplug the steamer from the electrical outlet. Allow it to cool down completely before storing.



Image: A hand demonstrates using the Calor Access Steam Pocket DT3030C0, directing steam towards a blue garment.



Image: A man uses the Calor Access Steam Pocket DT3030C0 to steam wrinkles out of a denim shirt hanging on a wall.



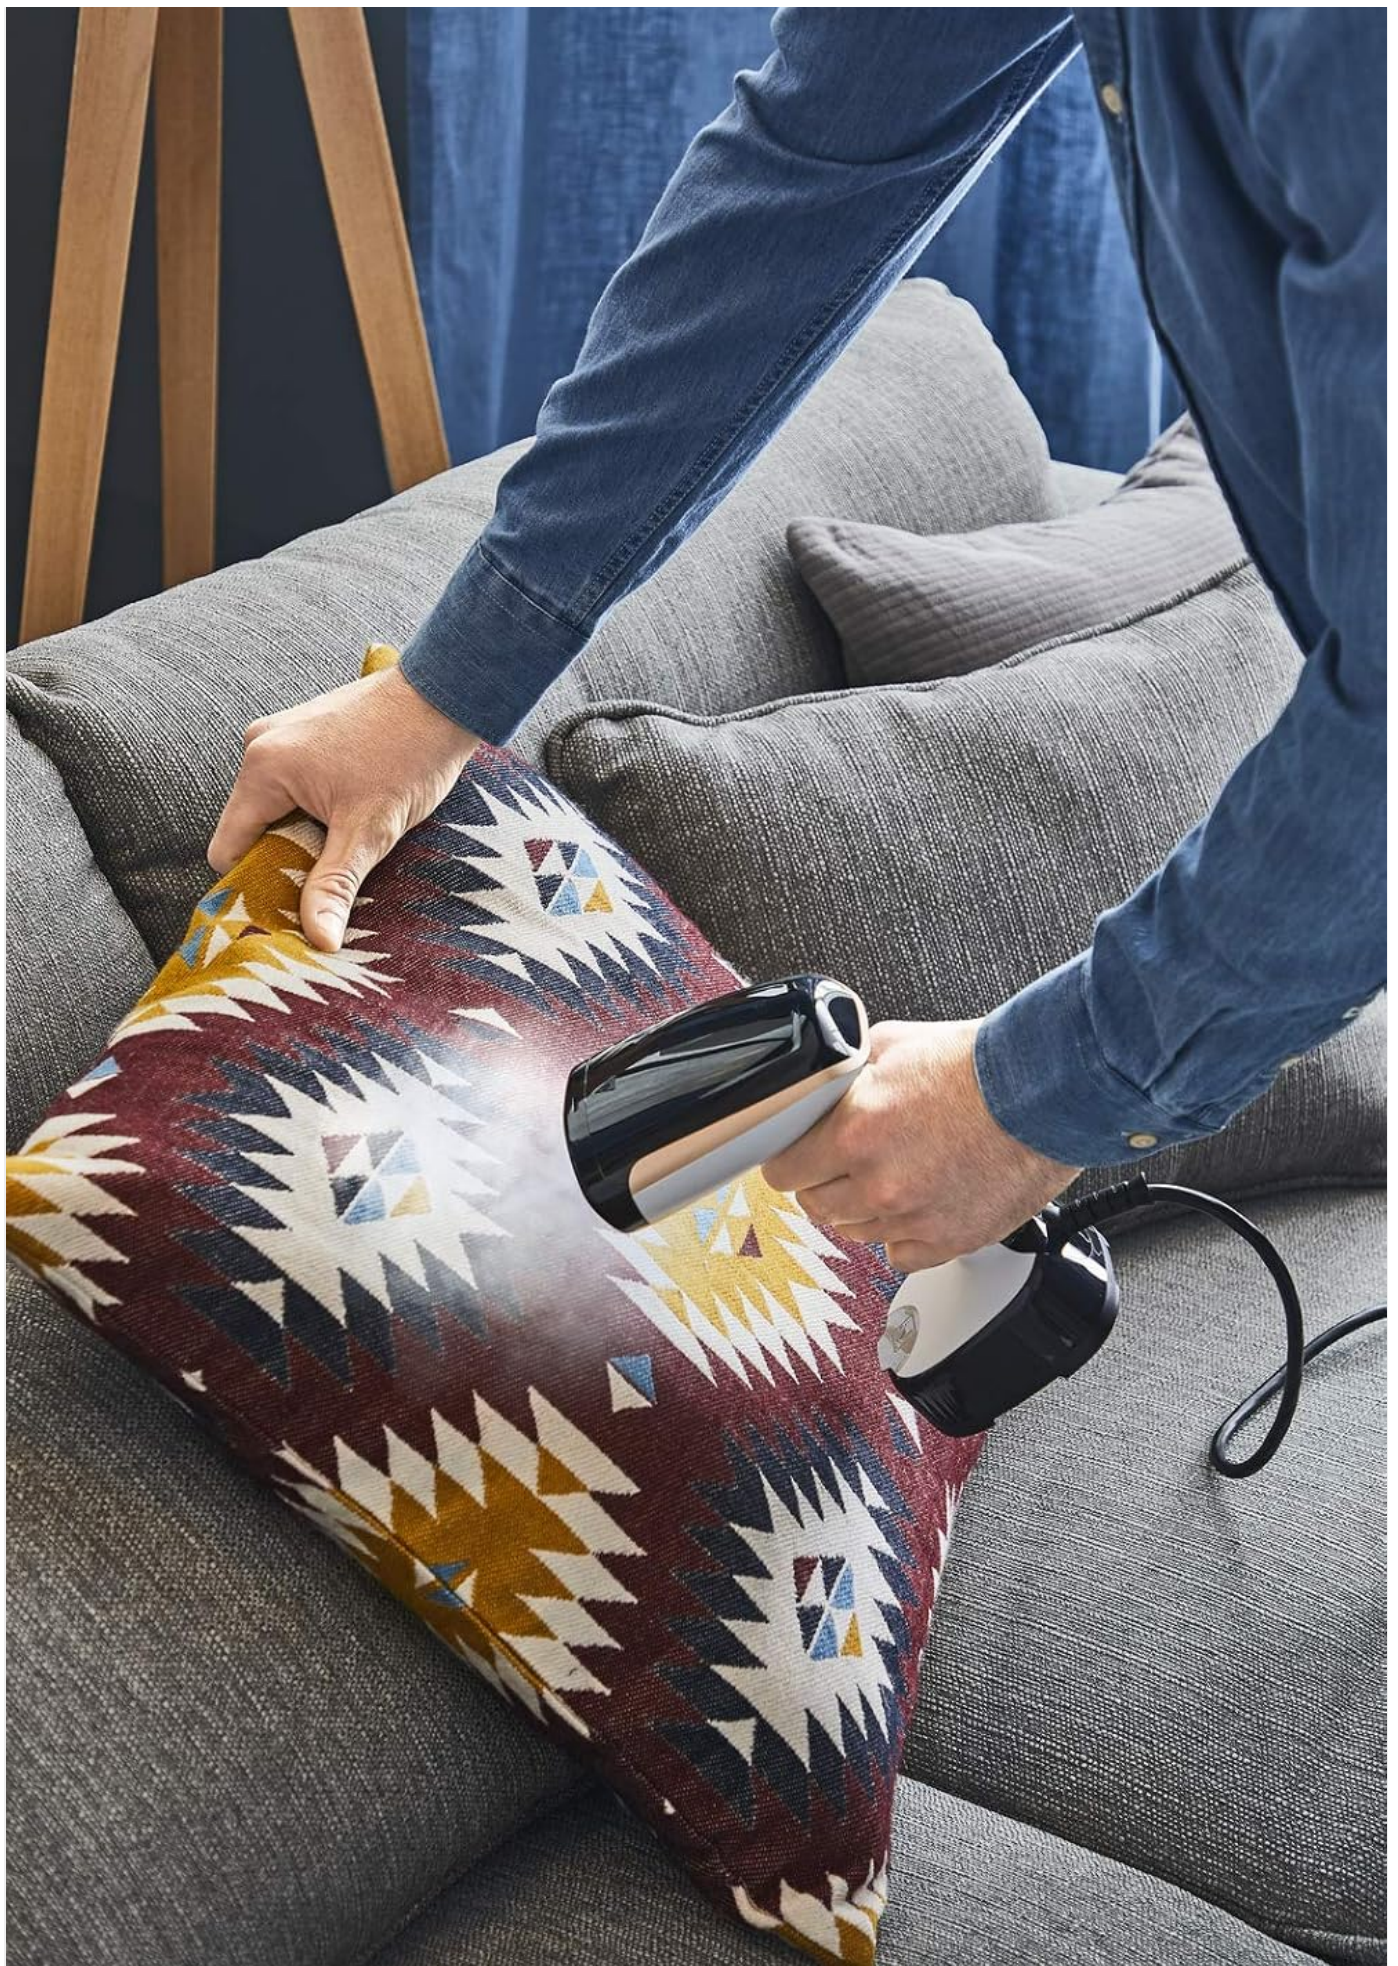


Image: The steamer is being used to refresh and remove wrinkles from a decorative cushion on a sofa.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your steamer.

1. **Empty Water Tank:** After each use, or before storing, ensure the water tank is empty. Remove the tank, open the cap, and pour out any remaining water.
2. **Clean Steam Head:** Wipe the steam head with a soft, damp cloth to remove any residue. Do not use abrasive cleaners or scouring pads.
3. **Descaling (if necessary):** If you notice reduced steam output or mineral buildup, descaling may be required. Consult the manufacturer's website or customer support for specific descaling instructions for this model.
4. **Storage:** Ensure the steamer is completely cool and dry before folding the handle and storing it in a dry, safe place. The compact design allows for easy storage in drawers or bags.





Image: The compact Calor Access Steam Pocket DT3030C0 is shown being stored inside a travel bag, highlighting its portability.





Image: The steamer is neatly stored in a drawer, demonstrating its space-saving design.

TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty. Steamer not heated sufficiently. Mineral buildup (scaling). Steam trigger not pressed.	Refill the water tank. Wait for 15 seconds until the indicator light shows it's ready. Descale the steamer (refer to Maintenance section). Press and hold the steam trigger.
Water leakage from steam head.	Steamer not hot enough. Overfilling the water tank. Using tap water with high mineral content.	Allow the steamer to fully heat up before use. Do not fill past the MAX line. Use distilled or demineralized water.
Steamer does not turn on.	Not plugged in correctly. Power outlet issue. Automatic shut-off activated.	Ensure the plug is fully inserted into a working outlet. Try a different outlet. Unplug and replug the steamer to reset the automatic shut-off.

SPECIFICATIONS

Feature	Detail
Model Number	DT3030C0

Feature	Detail
Brand	Calor
Power	1300 Watts
Steam Output	Up to 19 g/minute
Heat-up Time	15 seconds
Water Tank Capacity	120 Milliliters
Product Dimensions (L x W x H)	20.8 x 20.8 x 16.2 cm
Item Weight	1.36 Kilograms
Special Features	Ultra-compact design, foldable handle, lightweight, automatic shut-off

WARRANTY AND SUPPORT

This Calor Access Steam Pocket DT3030C0 garment steamer comes with **a2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions. For warranty claims, technical support, or further assistance, please contact Calor customer service. You may find contact information on the official Calor website or through your retailer. Please retain your proof of purchase for warranty validation.

© 2024 Calor. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question