

## Ego ST1301E

# Ego Power ST1301E Cordless String Trimmer

## USER MANUAL

Model: ST1301E | Brand: Ego

### 1. SAFETY INFORMATION

**WARNING:** Always read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

#### General Safety Precautions:

- Use the device only on flat and solid ground.
- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and closed-toe shoes.
- Always hold the device with both hands during operation to maintain control.
- Avoid contact with skin and eyes.
- Keep bystanders, children, and pets at a safe distance (at least 15 meters / 50 feet) from the operating area.
- Inspect the work area for objects that could be thrown or entangled in the cutting line.
- In case of improper use, injuries from flying debris or cuts may occur.
- Do not operate the string trimmer in wet conditions or rain.
- Ensure the battery is fully charged before use and removed when not in use or during maintenance.

### 2. PRODUCT OVERVIEW

The Ego Power ST1301E is a high-performance cordless string trimmer designed for efficient lawn and garden maintenance. This kit includes the string trimmer, a compatible battery, and a charger, providing a complete solution for your trimming needs.

#### Key Features:

- Cordless operation for maximum freedom of movement.
- Powerful battery system for extended run time.
- Ergonomic design for comfortable handling.
- Product Type: STRING TRIMMER.



Figure 2.1: The Ego Power ST1301E Cordless String Trimmer kit, including the trimmer unit, a battery, and a battery charger.



Figure 2.2: The Ego Power ST1301E Cordless String Trimmer, showcasing its long shaft and cutting head.

### 3. SETUP

---

Follow these steps to prepare your Ego Power ST1301E for first use:

1. **Unpack Components:** Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present.
2. **Handle Assembly:** Attach the auxiliary handle to the trimmer shaft. Ensure it is securely fastened and adjusted to a comfortable working position. Refer to the detailed assembly instructions in the separate assembly guide for specific steps.
3. **Guard Installation:** Install the debris guard onto the trimmer head. This guard protects against flying debris during operation. Ensure it clicks into place or is securely bolted.
4. **Battery Charging:** Before initial use, fully charge the battery using the provided charger. Connect the charger to a power outlet and insert the battery. The charger indicator lights will show the charging status.
5. **Battery Installation:** Once the battery is fully charged, slide it into the battery compartment on the trimmer until it clicks securely into place. Ensure it is firmly seated to prevent accidental dislodging during operation.

---

### 4. OPERATING INSTRUCTIONS

Before operating, ensure you have read and understood all safety warnings. Always wear appropriate PPE.

1. **Starting the Trimmer:** With the battery installed, press and hold the safety lock-off button (if present) and then squeeze the trigger switch to start the motor. Release the lock-off button once the motor starts.
2. **Trimming Technique:** Hold the trimmer firmly with both hands. Use a sweeping motion, moving the cutting head from side to side. Keep the cutting line parallel to the ground for an even cut.
3. **Line Advancement:** If the cutting line becomes too short, tap the trimmer head gently on the ground while the motor is running to advance more line. Do not tap excessively.
4. **Stopping the Trimmer:** Release the trigger switch to stop the motor. For extended breaks or when finished, remove the battery from the trimmer.
5. **Working Area:** Clear the area of any obstacles, rocks, or debris that could be thrown or damage the cutting line.

---

### 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your string trimmer.

- **Cleaning:** After each use, remove the battery and clean the trimmer head, guard, and motor housing with a dry cloth or soft brush. Do not use water or solvents.
- **Line Replacement:** When the cutting line runs out, replace it with the recommended diameter and type of line as specified by Ego. Refer to the product manual for specific instructions on how to reload the line spool.
- **Battery Care:** Store the battery in a cool, dry place away from direct sunlight and extreme temperatures. Do not store the battery fully discharged for long periods.
- **Storage:** Store the string trimmer in a dry, secure location, out of reach of children. If storing for an extended period, remove the battery.

- **Inspection:** Periodically inspect the trimmer for any loose fasteners, damaged parts, or worn components. Replace damaged parts with genuine Ego replacement parts.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your string trimmer.

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged or not properly installed; Safety lock-off not engaged; Faulty switch.	Ensure battery is fully charged and securely installed. Press safety lock-off before squeezing trigger. If problem persists, contact customer support.
Cutting line does not advance	Line tangled or fused in spool; Incorrect line installation; Spool cap worn.	Remove battery, remove spool cap, untangle/re-spool line correctly. Replace spool cap if worn.
Poor cutting performance	Line too short or worn; Wrong cutting technique; Motor overloaded.	Advance new line or replace spool. Use proper sweeping motion. Avoid cutting excessively thick material.
Excessive vibration	Damaged cutting head or line; Loose components.	Inspect cutting head and line for damage and replace if necessary. Check all fasteners for tightness.

## 7. SPECIFICATIONS




Specification	Value
Brand	Ego
Item Model Number	ST1301E
Power Source Type	Battery Powered
Color	Multicolor
Cutting Width	33 Centimeters
Assembly Required	No (referring to the kit being complete, minor assembly of handle/guard may be needed)
Package Dimensions	95.5 x 29 x 17 cm; 8.3 kg
ASIN	B084ZQ5SHF
Available on Amazon.it from	February 20, 2020


## 8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Ego website or contact Ego customer service directly. Keep your proof of purchase for warranty claims.

**Ego Official Website:** [www.egopowerplus.com](http://www.egopowerplus.com) (This is a general link, please refer to your region's specific website for local support.)
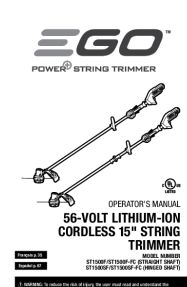
### Related Documents - ST1301E

	<p><a href="#">EGO POWER+ 56-Volt Lithium-Ion Cordless 16\" String Trimmer Operator's Manual</a></p> <p>This operator's manual provides essential safety instructions, assembly guidance, operating procedures, maintenance tips, and troubleshooting for the EGO POWER+ 56-Volt Lithium-Ion Cordless 16\" String Trimmer (Model ST1610T/ST1610T-FC).</p>
	<p><a href="#">EGO 56-Volt Lithium-Ion Cordless 15\" String Trimmer Operator's Manual</a></p> <p>This operator's manual provides essential safety instructions, assembly guidance, operating procedures, maintenance tips, and troubleshooting for the EGO 56-Volt Lithium-Ion Cordless 15\" String Trimmer (models ST1500F, ST1500F-FC, ST1500SF, ST1500SF-FC).</p>
	<p><a href="#">EGO 56-Volt Lithium-Ion Cordless 15\" String Trimmer Operator's Manual</a></p> <p>Operator's manual for the EGO 56-Volt Lithium-Ion Cordless 15\" String Trimmer, covering safety instructions, specifications, operation, maintenance, and troubleshooting. Features include 56V power, cordless operation, and a 15-inch cutting width.</p>
	<p><a href="#">EGO ST1300E-S 56V Lithium-Ion Cordless Line Trimmer Operator's Manual</a></p> <p>This operator's manual provides comprehensive instructions for the safe and effective use of the EGO ST1300E-S 56V Lithium-Ion Cordless Line Trimmer. It covers safety, assembly, operation, maintenance, and troubleshooting.</p>

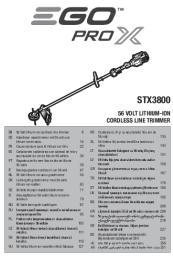

[EGO STX3800 56 Volt Lithium-Ion Cordless Line Trimmer User Manual](#)

Comprehensive user manual for the EGO STX3800 56 Volt Lithium-Ion Cordless Line Trimmer, detailing operation, safety, assembly, maintenance, and troubleshooting.



[EGO STX4500 56 Volt Lithium-Ion Cordless Line Trimmer Operator's Manual](#)

Operator's manual for the EGO STX4500 56 Volt Lithium-Ion Cordless Line Trimmer. Learn about assembly, safe operation, maintenance, and troubleshooting for this powerful garden tool.