

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LUMISKY](#) /

› [LUMISKY Classy C120 Wireless LED Floor Lamp User Manual](#)

LUMISKY CLASSY C120

LUMISKY Classy C120 Wireless LED Floor Lamp User Manual

Model: CLASSY C120

1. INTRODUCTION

Thank you for purchasing the LUMISKY Classy C120 Wireless LED Floor Lamp. This modern, teardrop-shaped lamp features multi-color LED lighting, dimmable functionality, and a wireless design for versatile indoor and outdoor use. With a height of 120 cm and remote control operation, it provides ambient lighting and a stylish decorative element. Please read this manual carefully before use to ensure proper operation and maintenance.

2. SAFETY INSTRUCTIONS

- Ensure the lamp is fully charged before its first use.
- Use only the provided USB charging cable.
- Do not expose the lamp to extreme temperatures or direct sunlight for prolonged periods.
- Although suitable for outdoor use, avoid submerging the lamp in water. The lamp is water-resistant, not waterproof.
- Keep the lamp away from flammable materials.
- Do not attempt to open or repair the lamp yourself. Contact customer support for assistance.
- Keep the remote control away from children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x LUMISKY Classy C120 Wireless LED Floor Lamp (Teardrop shape, 120 cm height)
- 1 x Remote Control
- 1 x USB Charging Cable

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the lamp using the provided USB cable. Connect the USB cable to the lamp's charging port and a suitable USB power adapter (not included). The charging indicator (if present) will show the charging

status. A full charge takes approximately 6-8 hours.

3. **Remote Control Battery:** Ensure the remote control has a working battery. If not, replace it according to the instructions on the remote.



Image: The LUMISKY Classy C120 lamp in its white light setting, suitable for various environments.

5. OPERATING INSTRUCTIONS

The LUMISKY Classy C120 lamp is operated using the included remote control.



Image: The remote control for the Classy C120 lamp, showing buttons for power, brightness, colors, and lighting modes.

Remote Control Functions:

- **ON/OFF:** Press the **ON** button to turn the lamp on, and the **OFF** button to turn it off.
- **Brightness Adjustment:** Use the **Sun+** and **Sun-** buttons to increase or decrease the brightness (dimnable function).
- **Color Selection:** Press any of the colored buttons (R, G, B, W, and other color swatches) to change the lamp's light color. 'W' typically stands for White.
- **Lighting Modes:**
 - **FLASH:** Cycles through colors quickly.
 - **STROBE:** Flashes a single color.
 - **FADE:** Smoothly transitions between colors.
 - **SMOOTH:** Gradual, continuous color change.



Image: The Classy C120 lamp displaying a pink light, demonstrating its multi-color capability.

6. CHARGING

The Classy C120 lamp is powered by an internal battery, providing up to 12 hours of illumination on a full charge.

- Connect the provided USB charging cable to the lamp's charging port.
- Plug the other end of the USB cable into a standard USB power adapter (e.g., phone charger, computer USB port).
- A full charge takes approximately 6-8 hours.
- Disconnect the charger once the lamp is fully charged to preserve battery life.

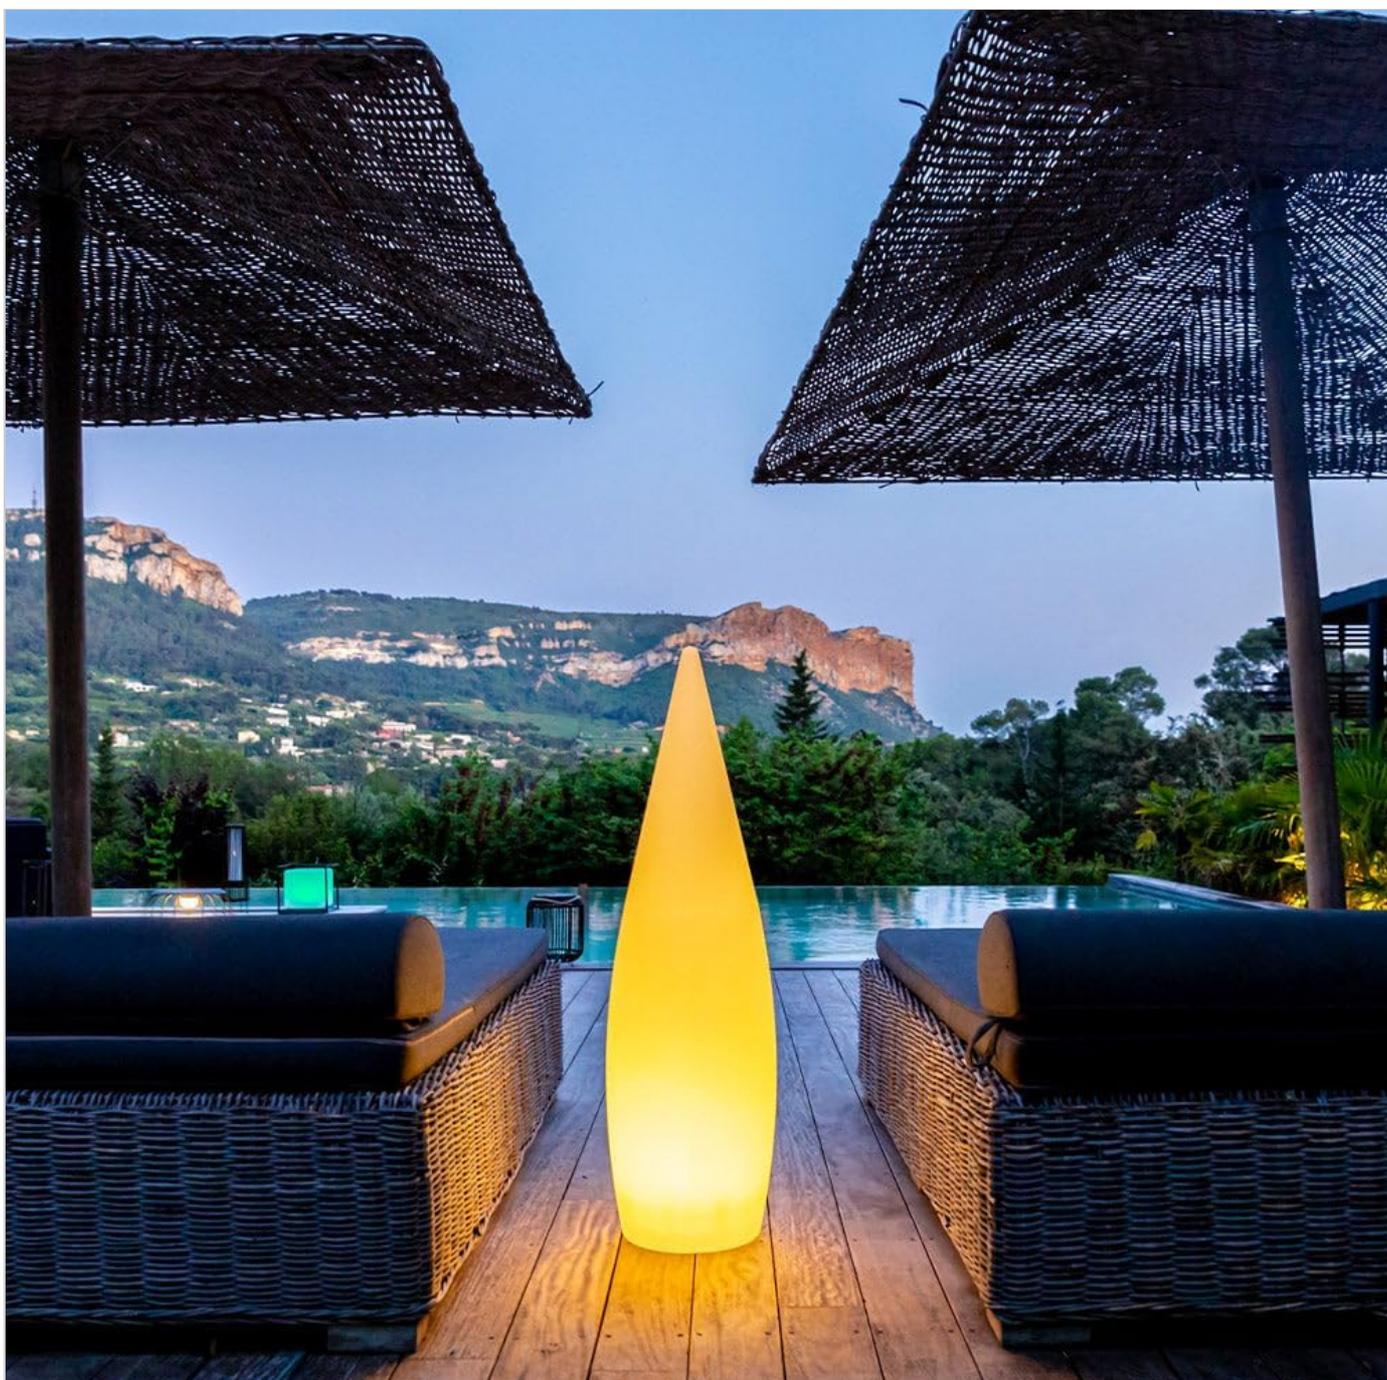


Image: The Classy C120 lamp providing ambient lighting in an outdoor poolside setting.

7. MAINTENANCE

- **Cleaning:** Wipe the lamp surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the lamp for an extended period, ensure it is fully charged and store it in a cool, dry place. Recharge periodically to maintain battery health.
- **Battery Care:** Avoid completely draining the battery frequently. Recharge when the light output diminishes.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted. Remote control battery is dead. Lamp is off.	Charge the lamp. Replace remote control battery. Press the ON button on the remote.

Problem	Possible Cause	Solution
Remote control not working.	Remote control battery is dead. Obstruction between remote and lamp.	Replace remote control battery. Ensure clear line of sight to the lamp.
Short battery life.	Not fully charged. Old battery.	Ensure a full 6-8 hour charge. Battery degradation over time is normal; contact support if significantly reduced.
Light color/mode not changing.	Remote control issue.	Ensure remote control battery is working. Point remote directly at the lamp.

9. SPECIFICATIONS

Model Number	CLASSY C120
Brand	LUMISKY
Dimensions (D x W x H)	34D x 34W x 120H cm
Item Weight	3.3 Kilograms
Light Source Type	LED
Power Source	Battery
Control Type	Remote Control
Special Features	Dimmable, Multi-color
Material	Aluminum (base), Plastic (lampshade)
Finish Type	Mat
Usage	Indoor, Outdoor
Water Resistance Level	Water-resistant
Battery Life (approx.)	12 hours
Charging Time (approx.)	6-8 hours
Energy Efficiency Class	G
EPREL Product Page	View EPREL Information

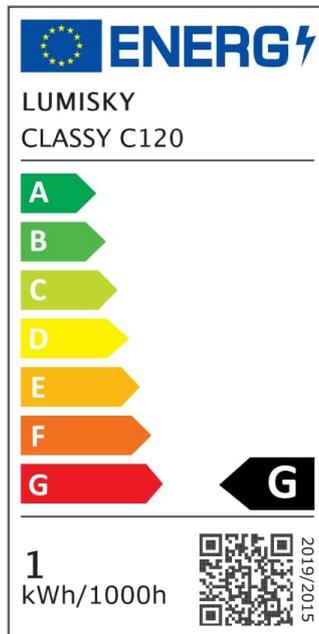


Image: The energy label for the Classy C120 lamp, indicating its energy efficiency class.

10. WARRANTY AND SUPPORT

LUMISKY products are manufactured to high-quality standards. For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. You may also visit the official LUMISKY website for further assistance.

