

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Overstock](#) /

› **Faultless Aged Bronze Electronic Deadbolt User Manual**

Overstock GA7X7D01AA

Faultless Aged Bronze Electronic Deadbolt User Manual

Model: GA7X7D01AA

INTRODUCTION

Thank you for choosing the Faultless Aged Bronze Electronic Deadbolt. This manual provides detailed instructions for the installation, operation, programming, and maintenance of your new electronic deadbolt. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your product.

This electronic deadbolt offers enhanced security and convenience with its keypad entry system, allowing for keyless access. It features a durable aged bronze finish and is designed for residential use.

SAFETY INFORMATION

- Do not attempt to disassemble or modify the lock. This may cause damage to the product and void the warranty.
- Use only the specified battery type (4 AA batteries). Do not mix old and new batteries or different types of batteries.
- Keep all keys and access codes in a secure location to prevent unauthorized access.
- Avoid exposing the lock to extreme temperatures, direct sunlight, or excessive moisture.
- Ensure the door frame and door are properly aligned and in good condition before installation to prevent binding or malfunction.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

PACKAGE CONTENTS

Please verify that all components are present before beginning installation:

- Electronic Deadbolt Exterior Assembly (Keypad)
- Electronic Deadbolt Interior Assembly (Thumb Turn)
- Deadbolt Latch Mechanism
- Mounting Plate
- Strike Plate
- Mounting Screws
- Keys (for manual override)

- User Manual (this document)

Note: 4 AA batteries are required for operation and are not included in the package.

SETUP AND INSTALLATION

Before you begin, ensure your door is prepared for a standard deadbolt installation. You may need a Phillips head screwdriver and a measuring tape.

1. Install the Latch Mechanism

1. Insert the deadbolt latch into the edge bore hole of the door. Ensure the "UP" arrow on the latch is pointing upwards.
2. Secure the latch with the provided screws.

2. Install the Exterior Assembly

1. Feed the cable and spindle through the center hole of the latch mechanism.
2. Align the exterior keypad assembly with the door and press it firmly against the door surface.

3. Install the Mounting Plate

1. Route the cable from the exterior assembly through the rectangular hole in the mounting plate.
2. Secure the mounting plate to the exterior assembly using the long screws provided, ensuring the spindle passes through the center hole of the mounting plate.

4. Install the Interior Assembly

1. Connect the cable from the exterior assembly to the port on the interior assembly.
2. Align the interior assembly with the mounting plate, ensuring the spindle engages with the thumb turn mechanism.
3. Secure the interior assembly to the mounting plate using the short screws provided.

5. Install Batteries

1. Remove the battery cover on the interior assembly.
2. Insert 4 new AA alkaline batteries, observing the correct polarity (+/-).
3. Replace the battery cover.

6. Install Strike Plate

1. Align the strike plate with the deadbolt hole on the door frame.
2. Secure the strike plate with the provided screws. Ensure the deadbolt extends smoothly into the strike plate when locked.



Image: Front view of the Faultless Aged Bronze Electronic Deadbolt, showing the keypad and keyhole.

OPERATING INSTRUCTIONS

Locking the Door

- **From the outside:** Press the "LOCK" button (if available, or a specific button for locking) or press any key for 2 seconds. The deadbolt will extend.
- **From the inside:** Rotate the thumb turn on the interior assembly to the horizontal position.

Unlocking the Door

- **From the outside (Keypad):** Enter your valid User Code (or Master Code) followed by the "LOCK" button (or specific enter button). The deadbolt will retract.
- **From the outside (Key):** Insert the physical key into the keyhole and turn it to unlock.
- **From the inside:** Rotate the thumb turn on the interior assembly to the vertical position.



Image: Angled view of the Faultless Aged Bronze Electronic Deadbolt, highlighting the keypad and finish.

PROGRAMMING CODES

Your deadbolt supports one Master Code and up to 10 User Codes. The Master Code is used for programming and should be kept confidential. User Codes are for daily entry.

Setting the Master Code (First Time Setup)

The lock comes with a default programming code. You must change this to your unique Master Code immediately after installation.

1. Open the battery cover on the interior assembly.
2. Press the "Program" button (usually a small button on the interior assembly). The keypad will illuminate.
3. Enter the default Master Code (refer to a sticker on the interior assembly or quick start guide, typically 123456).
4. Press the "LOCK" button.
5. Enter your new Master Code (4-10 digits).
6. Press the "LOCK" button again to confirm. A successful tone will sound.

Adding User Codes

1. Press the "Program" button.
2. Enter your Master Code.
3. Press the "LOCK" button.
4. Enter a new User Code (4-10 digits).
5. Press the "LOCK" button again to confirm. A successful tone will sound.
6. Repeat for additional user codes (up to 10).

Deleting User Codes

1. Press the "Program" button.
2. Enter your Master Code.
3. Press the "LOCK" button.
4. Enter the User Code you wish to delete.
5. Press the "LOCK" button again. A successful tone will sound, and the code will be deleted.

Note: Individual user codes cannot be deleted. To remove a user code, you typically need to reset all user codes or overwrite them. Consult the specific instructions that came with your lock for advanced programming options.

MAINTENANCE

- **Battery Replacement:** When the batteries are low, the lock may emit a series of beeps or the keypad may not illuminate as brightly. Replace all 4 AA batteries promptly. Always use new, high-quality alkaline batteries.
- **Cleaning:** Clean the lock's exterior with a soft, damp cloth. Avoid abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and electronic components.
- **Door Alignment:** Periodically check that your door and frame are properly aligned. Misalignment can cause the deadbolt to bind, leading to excessive battery drain or malfunction.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lock does not respond or keypad does not light up.	Dead batteries.	Replace all 4 AA batteries with new ones.
Lock beeps continuously after entering code.	Incorrect code entered.	Re-enter the correct Master or User Code. Ensure no numbers are skipped or repeated.
Deadbolt does not extend/retract smoothly.	Door/frame misalignment; Latch binding.	Check door and frame alignment. Ensure the strike plate is properly positioned. Lubricate the latch mechanism if necessary (use a silicone-based lubricant).
Cannot program new codes.	Incorrect Master Code; Batteries low; Programming sequence error.	Verify Master Code. Replace batteries. Review programming steps carefully.
Keypad is unresponsive.	Temporary electronic glitch.	Remove batteries for 30 seconds, then reinsert them to reset the lock.

SPECIFICATIONS

Brand: Overstock

Model Number: GA7X7D01AA

UPC: 050134988286

Lock Type: Electronic Deadbolt with Keypad and Key Override

Material: Bronze, Metal

Finish: Aged Bronze

Dimensions (L x W x H): 5.8 x 4.6 x 7.5 inches

Power Source: 4 AA Batteries (not included)

Master Codes: 1

User Codes: Up to 10

Connectivity

Protocol: Wi-Fi (as per product specifications, though typical for smart locks, this is an electronic deadbolt)

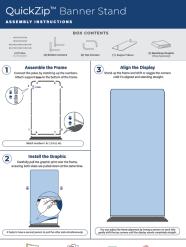
Controller Type: Mechanical knob (for interior thumb turn)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Overstock customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may visit the Overstock website or contact their support line. Please have your model number (GA7X7D01AA) and UPC (050134988286) ready when contacting support.

Related Documents - GA7X7D01AA

	<p><u>LOFT BED WF281725 Assembly Instructions</u></p> <p>Comprehensive assembly instructions and safety warnings for the WF281725 Loft Bed, including part lists, hardware details, and step-by-step setup guide. Ensure safe and proper installation.</p>
	<p><u>QuickZip™ Banner Stand Assembly Instructions</u></p> <p>Comprehensive guide for assembling the QuickZip™ Banner Stand, detailing box contents, frame assembly, graphic installation, and final alignment for trade shows and events.</p>
	<p><u>The 2026 Comprehensive Trade Show Checklist: Plan, Execute, Win Backdrop.com</u></p> <p>Download The 2026 Exhibitor Guide from Backdrop.com. This comprehensive trade show checklist helps you plan, execute, and win by covering booth space, budget, logistics, marketing, and post-show analysis.</p>
	<p><u>Defiant Limited Lifetime Mechanical and 1 Year Electronic Warranty Information</u></p> <p>Official warranty details for Defiant products, outlining the limited lifetime mechanical and 1-year electronic warranty coverage, terms, conditions, and consumer rights.</p>
	<p><u>Defiant Deadbolt & Handle-Set Compatibility Guide</u></p> <p>Comprehensive compatibility guide for Defiant, PanoLock+, and Endura multi-point door locks, listing deadbolt and handle-set models, item numbers, configurations, and adapter types.</p>

