



[Manuals.plus](#) /

› [Navaris](#) /

› Navaris Salt and Pepper Mill Set (Rubber Wood) Instruction Manual

**Navaris 49616.02\_m000684**

# Navaris Salt and Pepper Mill Set Instruction Manual

Model: 49616.02\_m000684

## INTRODUCTION

---

Thank you for choosing the Navaris Salt and Pepper Mill Set. This manual provides essential information for the safe and efficient use, maintenance, and care of your new spice mills. Please read these instructions carefully before first use and retain them for future reference.

## PRODUCT OVERVIEW

---

The Navaris Salt and Pepper Mill Set consists of two manual grinders designed for various spices, including salt, pepper, and other dry seasonings. Each mill features a durable rubber wood body and a ceramic grinding core for consistent performance.

# MODERN DESIGN

These grinders can be used for many different spices and seasonings like Himalayan salt, sea salt, ground black pepper, sesame seeds, chili flakes and more



Image: The top of the Navaris salt and pepper mills, showing the 'S' and 'P' markings for easy identification of salt and pepper.

## Key Features:

- **Rubber Wood Construction:** Provides a sleek and durable exterior.
- **Ceramic Grinding Core:** Non-corrosive and designed not to absorb flavors, ensuring pure spice taste.
- **Adjustable Coarseness:** Allows customization from fine to coarse grind.
- **Easy Refill Design:** Simple top-pull mechanism for adding spices.

## SETUP

---

### 1. Unpacking

Carefully remove the salt and pepper mills from their packaging. Inspect both mills for any signs of damage. Dispose of packaging materials responsibly.

### 2. Filling the Mills

To fill the mills with your desired spice (e.g., sea salt, peppercorns, chili flakes):

1. Gently pull the top wooden cap upwards to remove it from the mill body.
2. Pour your chosen spice into the exposed chamber. Do not overfill.
3. Replace the top wooden cap, ensuring it is seated firmly.

## EASY TO REFILL

Open the top of the grinder to add your own spice or seasoning inside



Image: A diagram illustrating the easy refill process. The top wooden cap is removed, revealing the chamber where spices like peppercorns are poured in.

## OPERATING INSTRUCTIONS


### 1. Adjusting Coarseness

The grind coarseness can be adjusted to your preference:

1. Turn the mill upside down.
2. Locate the plastic screw on the bottom of the grinding mechanism.
3. Turn the screw clockwise for a finer grind or counter-clockwise for a coarser grind. Test the grind and adjust as needed.

# ADJUSTABLE COARSENESS

Turn the plastic screw on the bottom of the shaker to adjust from fine to coarse

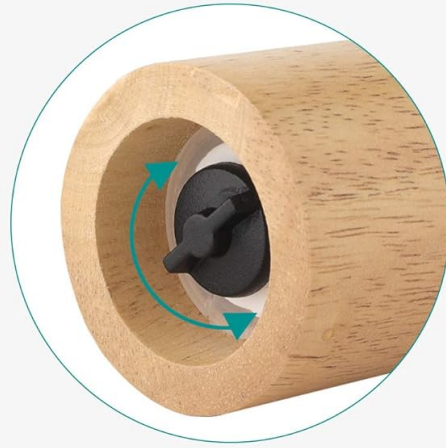

Fine



Medium



Coarse



Image: A visual guide demonstrating how to adjust the coarseness of the grind by turning the plastic screw at the bottom of the mill. Examples of fine, medium, and coarse grinds are shown.

## 2. Grinding Spices

Once filled and adjusted, grinding is simple:

1. Hold the mill firmly with one hand.
2. With the other hand, twist the top wooden cap clockwise.
3. Continue twisting until the desired amount of ground spice is dispensed.



Image: Two Navaris mills actively grinding salt and pepper onto a dark surface, with bowls of whole salt and peppercorns nearby.

## MAINTENANCE

---

### Cleaning

- Wipe the exterior of the wooden mills with a soft, damp cloth. Do not use abrasive cleaners or immerse the mills in water.
- The ceramic grinding mechanism can be cleaned by grinding a small amount of coarse salt or rice through it to clear any residue.
- **DO NOT** place the mills in a dishwasher.

### Storage

Store the mills in a dry place away from direct sunlight and excessive humidity to preserve the wood and spice quality.

## TROUBLESHOOTING

---

- **Difficulty Grinding:**

Ensure the mill is properly filled and the top cap is securely in place. Check the coarseness adjustment screw; it may be set too fine for the spice being used.

- **Inconsistent Grind:**

Verify that the coarseness adjustment screw is tightened appropriately. If the issue persists, clean the grinding mechanism as described in the Maintenance section.

- **Spice Leaking/Messy Output:**

This can sometimes occur with very fine grinds or certain spices. Ensure the mill is upright when not in use. Consider adjusting to a slightly coarser setting if mess is a significant concern.

## SPECIFICATIONS

Feature	Detail
Model Number	49616.02_m000684
Material	Rubber Wood, Ceramic Grinding Core, Aluminum, Stainless Steel, ABS Plastic
Color	Beige
Product Dimensions	8.07 x 2.16 inches (20.5 x 5.5 cm)
Item Weight	260 Grams (approx. 9.2 ounces)
Operation Mode	Manual
Dishwasher Safe	No
Included Components	1x Pepper Mill, 1x Salt Mill

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact Navaris customer service through the retailer where the product was purchased. Please have your model number (49616.02\_m000684) and proof of purchase ready.