

Lumisky AUSTRAL W170

Lumisky AUSTRAL W170 Wired LED Floor Lamp H170cm E27 Socket User Manual

Model: AUSTRAL W170 | Brand: Lumisky

INTRODUCTION

Thank you for choosing the Lumisky AUSTRAL W170 wired LED floor lamp. This lamp features a modern, sleek design, perfect for enhancing both indoor and outdoor spaces. Its robust construction ensures durability and resistance to outdoor elements. Please read this manual carefully before installation and use to ensure safe and optimal performance of your product.

WHAT'S IN THE BOX

- 1 x Lumisky AUSTRAL W170 Wired LED Floor Lamp (H170cm, E27 Socket)

Note: E27 LED bulbs are not included and must be purchased separately. The lamp requires 3 E27 bulbs.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Inspect the lamp for any signs of damage.
2. **Bulb Installation:** The AUSTRAL W170 requires 3 E27 LED bulbs (not supplied). Unscrew the lamp shade or access panel as indicated in the diagram (if available) and carefully screw in the E27 bulbs. Ensure they are securely fastened but do not overtighten.
3. **Placement:** Position the lamp on a stable, flat surface. This lamp is designed for both indoor and outdoor use, offering IP44 splash protection. When placing outdoors, ensure the power outlet is also suitable for outdoor use and protected from direct water exposure.
4. **Power Connection:** Connect the lamp's power cord to a standard 220V AC power outlet. Ensure the cable is not a tripping hazard and is protected from damage.



Image: The Lumisky AUSTRAL W170 lamp providing ambient lighting in a garden setting at night.



Image: Two Lumisky AUSTRAL lamps, including the H170cm model, positioned on an outdoor terrace with a scenic sea view at sunset.

OPERATING INSTRUCTIONS

1. **Power On/Off:** The lamp is equipped with a touch-sensitive switch. Gently touch the designated area on the lamp to turn it on or off.
2. **Dimming Feature:** The AUSTRAL W170 lamp is dimmable. If using dimmable E27 bulbs, the touch control may allow for adjustment of light intensity. Refer to your bulb's instructions for specific dimming capabilities.

MAINTENANCE

- **Cleaning:** To clean the lamp, disconnect it from the power supply. Use a soft cloth dampened with lukewarm water and mild soap. Avoid abrasive cleaners or solvents that could damage the finish.
- **Bulb Replacement:** Ensure the lamp is unplugged and cool before attempting to replace bulbs. Unscrew the old bulb and carefully screw in a new E27 LED bulb.

- **Storage:** If storing the lamp for an extended period, clean it thoroughly and store it in a dry, protected area away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on	No power supply Faulty bulb(s) Touch switch malfunction	Check power connection and outlet Replace bulb(s) Ensure touch area is clean and dry; try touching again
Light flickers	Loose bulb(s) Incompatible dimmer (if applicable) Faulty bulb(s)	Tighten bulb(s) Ensure bulbs are dimmable and compatible with the lamp's dimming function Replace bulb(s)

If you encounter issues not listed here or if the problem persists, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	AUSTRAL W170
Brand	Lumisky
Dimensions (D x W x H)	34P x 34I x 170H cm
Item Weight	7.04 Kilograms
Material	Metal
Shade Material	Metal
Finish Type	Matte
Color	White
Bulb Base	E27
Number of Bulbs Required	3 (not included)
Recommended Bulb Type	LED
Voltage	220 Volts
Wattage (per bulb)	3 Watts (example, depends on bulb)
Switch Type	Touch Control
Features	Dimmable, Lightweight, Adjustable
Waterproof Rating	IP44 (Splash-proof)
UV Resistance	Yes
Usage	Outdoor, Indoor

Feature	Detail
Mounting Type	Floor Mount
Energy Label	View Energy Label Information

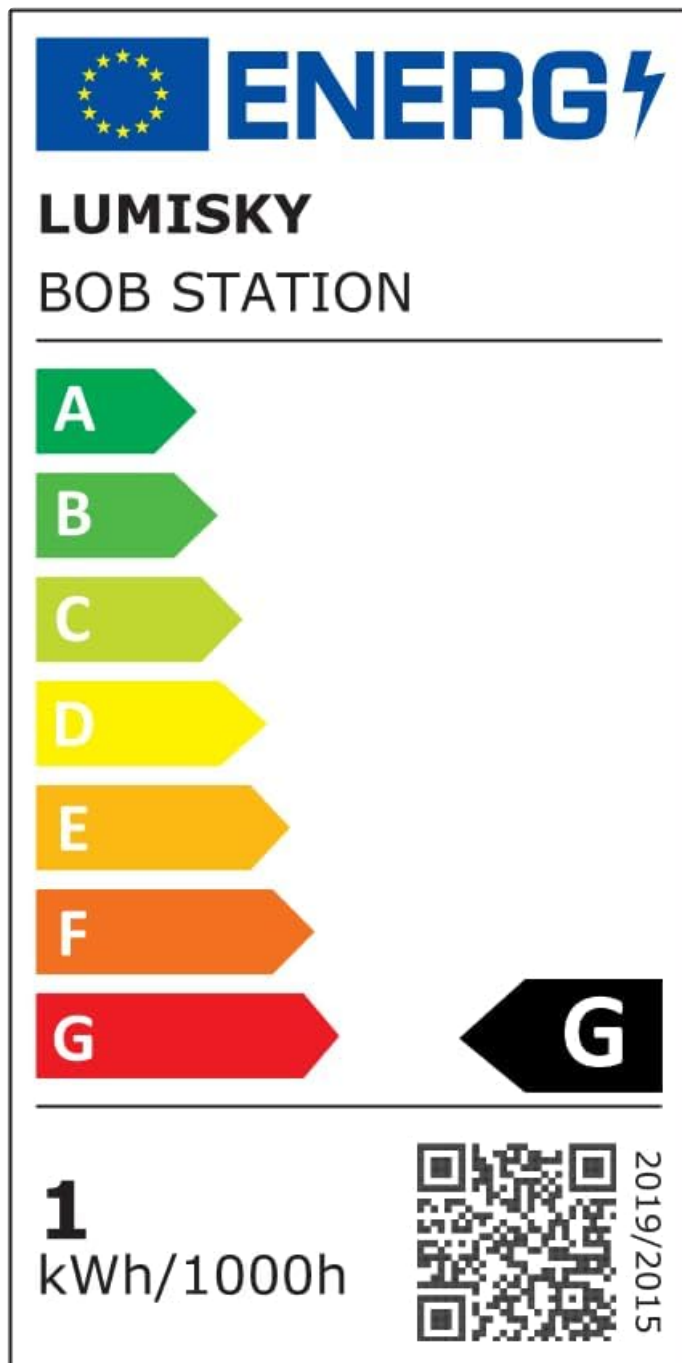


Image: EU Energy Label for Lumisky lighting products, indicating energy efficiency class.

SAFETY INFORMATION

- Always disconnect the lamp from the power supply before cleaning, maintenance, or bulb replacement.
- Do not expose the lamp to direct jets of water or immerse it in water, despite its IP44 rating.
- Ensure the power cord is not damaged, pinched, or placed in areas where it could be tripped over.
- Use only E27 LED bulbs that are compatible with the lamp's specifications.
- Keep out of reach of children and pets.
- Do not attempt to modify or repair the lamp yourself. Contact qualified personnel for service.

WARRANTY AND SUPPORT

Your Lumisky AUSTRAL W170 lamp comes with a 30-day return policy and standard legal guarantees. For any questions, technical assistance, or warranty claims, please contact our specialized customer support. Refer to your purchase documentation for specific contact details.

© 2023 Lumisky. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question