

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec Power Instant-ccino 20 Chic Semi-Automatic Coffee Machine User Manual](#)

Cecotec 01590

Cecotec Power Instant-ccino 20 Chic Semi-Automatic Coffee Machine User Manual

Model: 01590

Instructions	Components	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty
Introduction Safety & Support							

1. INTRODUCTION

Thank you for choosing the Cecotec Power Instant-ccino 20 Chic Semi-Automatic Coffee Machine. This manual provides important information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

This semi-automatic coffee machine is designed to prepare a variety of coffee beverages using both ground coffee and capsules, featuring a powerful 20-bar pressure pump and a Thermoblock fast heating system for optimal results.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Exercise extreme caution when disposing of hot steam.
- Never touch hot surfaces. Use handles or knobs.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cecotec Power Instant-ccino 20 Chic coffee machine:

1. Control Panel with indicator lights and beverage selection buttons.
2. Filter Holder Arm with double outlet.
3. Removable Drip Tray.
4. Removable Water Tank (1.7L capacity).
5. Full-Milk Tank (0.7L capacity) with adjustable frother.
6. Steam/Hot Water Nozzle.
7. Measuring Spoon/Tamper.
8. Filters (for ground coffee and capsules).



Image: Front view of the Cecotec Power Instant-ccino 20 Chic coffee machine, showing the main unit, filter holder, and milk tank, preparing a layered coffee drink.



Image: Close-up of the control panel with illuminated buttons for different coffee types and steam.

4. SETUP AND FIRST USE

4.1 Unpacking

- Carefully remove all packaging materials.
- Check that all components are present and undamaged.
- Keep packaging materials out of reach of children.

4.2 Initial Cleaning

- Wash the water tank, milk tank, filter holder, and filters with warm soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the machine with a damp cloth.

4.3 Filling the Water Tank

- Remove the 1.7L water tank from the back of the machine.

- Fill the tank with fresh, cold water up to the MAX level indicator.
- Place the water tank back securely into its position.

4.4 Priming the Machine

- Plug the machine into a grounded power outlet.
- Place a large cup under the coffee outlet.
- Press the power button to turn on the machine. The indicator lights will flash as the machine heats up.
- Once the lights are steady, press the button for a large coffee (e.g., Lungo) to run water through the system without coffee. Repeat this process 2-3 times to clean and prime the internal components.

5. OPERATING INSTRUCTIONS

5.1 Preparing Espresso with Ground Coffee

- Ensure the water tank is filled.
- Insert the appropriate filter for ground coffee into the filter holder.
- Add ground coffee using the measuring spoon. For a single espresso, use one level spoon (approx. 7g). For a double espresso, use two level spoons (approx. 14g).
- Lightly tamp the coffee grounds with the tamper end of the spoon.
- Attach the filter holder securely to the brewing head.
- Place one or two cups under the filter holder outlets.
- Press the desired coffee button (e.g., single espresso or double espresso). The machine will brew and stop automatically.



Image: Bowls of ground coffee and coffee capsules, demonstrating the machine's versatility.

5.2 Preparing Coffee with Capsules

- Ensure the water tank is filled.
- Insert the appropriate filter for capsules into the filter holder.
- Place a coffee capsule into the filter.
- Attach the filter holder securely to the brewing head.
- Place a cup under the filter holder outlet.
- Press the desired coffee button. The machine will brew and stop automatically.

5.3 Using the Instant Cappuccino System (Milk Frothing)

- Fill the Full-Milk tank with cold milk (dairy or non-dairy) up to the desired level.
- Ensure the milk tank is securely attached to the machine.
- Position the milk frother nozzle over your cup.
- Prepare your coffee as described in sections 5.1 or 5.2.

- After brewing the coffee, select the cappuccino or latte button. The machine will automatically dispense frothed milk into your cup.
- The "Custom" system allows you to adjust the quantity of coffee, milk, or foam. Refer to the control panel for specific customization options.



© 2020 Cecotec Innovaciones, S.L. Spain. All rights reserved

Image: The coffee machine actively frothing milk into a glass, demonstrating the milk frothing function.

5.4 Hot Water Function

- Place a cup under the steam/hot water nozzle.
- Press the hot water button (if available on your model's control panel) or turn the steam knob to the hot water position.
- Dispense the desired amount of hot water.
- Turn the knob back or press the button again to stop.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

6.1 Daily Cleaning

- **Drip Tray:** Empty and rinse the removable drip tray after each use or when the indicator floats up.
- **Filter Holder and Filters:** Remove the filter holder and discard used coffee grounds/capsules. Rinse the filter holder and filters under running water.
- **Milk Tank:** After each use of the milk frother, perform a quick clean cycle for the milk system (if available) or rinse the milk tank and frother nozzle thoroughly to prevent milk residue buildup.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2 Descaling

Over time, mineral deposits (limescale) can build up in the machine, affecting performance. Descaling your machine regularly, depending on water hardness and frequency of use (e.g., every 2-3 months).

1. Use a commercial descaling solution suitable for coffee machines, following the manufacturer's instructions.
2. Fill the water tank with the descaling solution and water mixture.
3. Place a large container under the coffee outlet and steam nozzle.
4. Run several cycles of hot water and steam through the machine until the water tank is empty.
5. Rinse the water tank and fill it with fresh water.
6. Run several cycles of fresh water through the machine to thoroughly rinse out any descaling solution.

7. TROUBLESHOOTING GUIDE

If you encounter issues with your coffee machine, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet malfunction.	Check power cord connection; try a different outlet.
No coffee dispenses.	Water tank empty; machine not primed; coffee too finely ground or over-tamped; clogged filter.	Fill water tank; prime the machine; use coarser grind or less pressure when tamping; clean filter.
Coffee is cold or not hot enough.	Machine not preheated sufficiently; cups not preheated.	Allow machine to fully preheat (indicator lights steady); preheat cups with hot water.
Milk frother not producing foam.	Milk tank empty; milk too warm; frother nozzle clogged.	Fill milk tank with cold milk; clean frother nozzle.
Water leaks from machine.	Water tank not seated correctly; drip tray full; seals damaged.	Ensure water tank is properly installed; empty drip tray; contact customer support if seals are damaged.

8. TECHNICAL SPECIFICATIONS

Brand: Cecotec

Model Number: 01590

Color: Black

Power: 1470 Watts

Voltage: 240 Volts

Pressure Pump: 20 Bars (ForceAroma technology)

Water Tank Capacity: 1.7 Liters (removable)

Milk Tank Capacity: 0.7 Liters (Full-Milk system)

Heating System: Thermoblock (fast heating)

Material: Stainless Steel components

Product Dimensions (L x W x H): 48 x 33 x 42 cm

Item Weight: 4.45 Kilograms

Features: Milk frother, Removable tanks, Suitable for ground coffee and capsules, Custom system for beverage personalization.

9. WARRANTY AND CUSTOMER SUPPORT

Cecotec products are manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship.

- Warranty Period:** Please refer to your purchase documentation or the official Cecotec website for specific warranty terms applicable in your region.
- Spare Parts Availability:** Spare parts for this model are available for up to 10 years from the date of purchase.
- Customer Support:** For technical assistance, warranty claims, or to order spare parts, please contact Cecotec customer service through their official website or the contact information provided with your purchase.

When contacting support, please have your product model number (01590) and purchase date ready.


© 2024 Cecotec. All rights reserved.

Related Documents - 01590



[Cecotec Power Instant-ccino 20 Chic Coffee Machine User Manual](#)

Comprehensive instruction manual for the Cecotec Power Instant-ccino 20 Chic Serie Nera and Serie Bianca coffee machines, covering setup, operation, cleaning, maintenance, troubleshooting, and warranty.

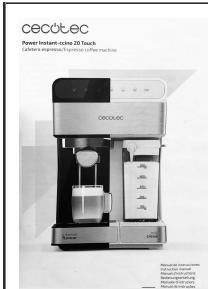

[Cecotec Power Instant-ccino 20 Touch Espresso Machine User Manual](#)

Comprehensive user manual for the Cecotec Power Instant-ccino 20 Touch Espresso Machine. Learn about its features, operation, cleaning, maintenance, and troubleshooting.



[Cecotec Cremmaet Compactccino Coffee Machine User Manual](#)

Comprehensive user manual for the Cecotec Cremmaet Compactccino coffee machine, covering safety instructions, operation, cleaning, maintenance, and troubleshooting for models in black, black rose, white rose, and black silver.



[Cecotec Cremmaet Compactccino Super-automatic Coffee Machine User Manual](#)

Comprehensive user manual for the Cecotec Cremmaet Compactccino Super-automatic Coffee Machine. This guide provides detailed instructions on operation, cleaning, maintenance, and troubleshooting for models including Black, Black Rose, White Rose, and Black Silver. Learn to brew perfect coffee with your Cecotec machine.



[Cecotec Cremmaet Macchia Super-Automatic Coffee Machine User Manual](#)

Comprehensive user manual for the Cecotec Cremmaet Macchia super-automatic coffee machine, covering safety instructions, operation, cleaning, maintenance, and troubleshooting.



[Cecotec Cremmaet Compactccino Super-automatic Coffee Machine User Manual](#)

Comprehensive user manual for the Cecotec Cremmaet Compactccino Super-automatic Coffee Machine, covering safety instructions, operation, cleaning, maintenance, troubleshooting, and technical specifications.



[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty
instant ccino 20 chic serie nera m user manual decdn cecotec cloud s3 amazonaws media files |||
POWER INSTANT-CCINO 20 CHIC SERIE NERA/SERIE BIANCA Manual de
instrucciones Instruction manual Manue ... al depsto. **POWER INSTANT-CCINO 20**
CHIC SERIE NERA/BIANCA 17 ESPAOL 7. ESPECIFICACIONES TCNICAS 01590
Power Instant-ccino 20 Chic Serie Nera 01594 Power Instant-ccino 20 Chic Serie
Bianca 1230 - 1...
lang:it score:26 filesize: 2.17 M page_count: 120 document date: 2020-02-17



[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty
Manuale utente Cecotec Macchina da caffè semi automatica Instant Power ccino 20 Serie Chic Nera per
macinato e capsule barrette 0 7 ml serbatoio acqua 1 L 1470 W Amazon it Casa cucina B1TqLHMYk1L m
media amazon images I |||
POWER INSTANT-CCINO 20 CHIC SERIE NERA/SERIE BIANCA Manual de
instrucciones Instruction manual Manue ... al depsto. **POWER INSTANT-CCINO 20**
CHIC SERIE NERA/BIANCA 17 ESPAOL 7. ESPECIFICACIONES TCNICAS 01590
Power Instant-ccino 20 Chic Serie Nera 01594 Power Instant-ccino 20 Chic Serie
Bianca 1230 - 1...
lang:it score:22 filesize: 2.43 M page_count: 120 document date: 2023-08-02



[\[pdf\]](#) User Manual Instructions
POWER INSTANT CCINO 20 CHIC NERA Sep 8 2023 — ADVERTENCIA un mal uso o inadecuado
puede suponer peligro tanto para el aparato como usuario Utilice este los fines que instant ccino chic
serie nera user manual decdn cecotec cloud media files |||
POWER INSTANT-CCINO 20 CHIC NERA POWER INSTANT-CCINO 20 CHIC
BIANCA Cafetera espresso/Espresso machi ... rgo. Utilice un caf molido ms fino.
Aada agua al depsto. 6. **ESPECIFICACIONES TCNICAS** Referencia: **01590/ 01594**
Modelo: Power Instant-ccino 20 Chic Serie Nera/Bianca Potencia: 1230 - 1470 W
Voltaje: ...
lang:it score:22 filesize: 4.64 M page_count: 65 document date: 2023-09-07



[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty

POWER INSTANT CCINO 20 CHIC SERIE NERA BIANCA Кавоварка напівавтоматична Кофеварка полуавтоматическая по z3z2aqkp2dqgy8dlps4mv995onlmje58 cecotec ua upload medialibrary c9a |||

POWER INSTANT-CCINO 20 CHIC SERIE NERA/SERIE BIANCA / Instruction manual 5 8 8 9 13 15 16 POWER INSTANT-CCINO 20 CHIC SERIE NERA/BIANCA 15 7. **01590** Power Instant-ccino 20 Chic Serie Nera 01594 Power Instant-ccino 20 Chic Serie Bianca 1230 - 1...

lang:i-klingon **score:21** filesize: 2.57 M page_count: 41 document date: 2021-12-14



[\[pdf\]](#) Catalog

Cecotec Tienda Oficial Envío Gratis Mejor Precio Catalogo Cumbia Cafeteras Semiautomáticas

CECOTEC EN cdn cecotec cloud media IFA2022 en |||

Cumbia Instant-cino 20 Coffee Machines Maximum creaminess, your way The semi-automatic Cumbia Powe ... nstruction manual. WARRANTY: 2 years 20 x 30 x 33 cm, 4.25 kg 220-240 V, 50 Hz 1230- 1470 W 8435484 **01590 5 01590 16** Instant-ccino 20 Chic Serie Bianca 20-bar semiautomatic coffee machine with thermo...

lang:en **score:20** filesize: 16.59 M page_count: 11 document date: 2019-10-07



[Cecotec Product Catalogue - February 2022](#)

Explore the comprehensive Cecotec product catalogue for February 2022, featuring a wide range of household appliances including robot vacuum cleaners, kitchen appliances, personal care items, and more. Discover innovative technology and value from Cecotec brands like Conga, Mambo, and Bongo.

lang:en **score:20** filesize: 137.82 M page_count: 1196 document date: 2022-03-07



[\[pdf\] Accessories Catalog](#)

Catalogue Semi automatic coffee machines 2023 EN cdn cecotec cloud s3 amazonaws media IFA2023 |||

INSTANT- CCINO AND POWER ESPRESSO Semi-automatic coffee machines

Maximum creaminess, your way. Cof ... 12 kg 51.5 x 37.3 x 40 cm 12.28 kg 29.5 x

19.5 x 32.5 cm 4.45 kg 220-240 V 50 Hz 1230-1470 W 8435484015905 Box

28435484015909 Master **01590** Discover the range 15 Instant-ccino 20 Chic Serie

Bia...

lang:en **score:16** filesize: 4.93 M page_count: 11 document date: 2023-09-01



[\[pdf\] Accessories](#)

Catálogo Cafeteras semiautomáticas 2023 ENcdn cecotec cloud s3 amazonaws media IFA2023 EN 1cdn

||| ||| INSTANT- CCINO AND POWER ESPRESSO Semi-automatic coffee machines Maximum

creaminess, your way. Coffee is delicious, but we all take it differently. Whether it be Americano,

Espresso, or Latte, Power Espresso coffee machines are the perfect

INSTANT- CCINO AND POWER ESPRESSO Semi-automatic coffee machines

Maximum creaminess, your way. Cof ... 12 kg 51.5 x 37.3 x 40 cm 12.28 kg 29.5 x

19.5 x 32.5 cm 4.45 kg 220-240 V 50 Hz 1230-1470 W 8435484015905 Box

28435484015909 Master **01590** Discover the range 15 Instant-ccino 20 Chic Serie

Bia...

lang:en **score:14** filesize: 4.93 M page_count: 11 document date: 2023-09-01



[\[pdf\] User Manual Instructions Troubleshooting Guide Specifications Warranty](#)

POWER INSTANT CCINO 20 CHIC SERIE NERA BIANCA Encienda la cafetera colocando el botón de encendido en posición I Los indicadores luminosos del panel dispositivo comenzarán a parpadear Una vez las B1zgvZwDNhL m media amazon images |||

POWER INSTANT-CCINO 20 CHIC SERIE NERA/SERIE BIANCA Manual de instrucciones Instruction manual Manue ... al depósito. POWER INSTANT-CCINO 20 CHIC SERIE NERA/BIANCA 17 ESPAOL 7. ESPECIFICACIONES TCNICAS **01590** Power Instant-ccino 20 Chic Serie Nera 01594 Power Instant-ccino 20 Chic Serie Bianca 1230 - 1...

lang:it **score:13** filesize: 2.43 M page_count: 120 document date: 2023-08-01



[Cecotec General Catalog February 2021](#)

Explore the comprehensive Cecotec General Catalog from February 2021, featuring a wide range of home appliances including vacuum cleaners, kitchen robots, coffee makers, and more. Discover innovative technology and quality products designed to enhance everyday living.

lang:es **score:12** filesize: 49.86 M page_count: 886 document date: 2021-03-31

