

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› **ZdalaMit AH59-02331A Remote Control User Manual for Samsung Blu-ray Home Entertainment Systems HT-D6500W, HT-D6730W**

ZdalaMit AH59-02331A

ZdalaMit AH59-02331A Remote Control User Manual

For Samsung Blu-ray Home Entertainment Systems HT-D6500W, HT-D6730W

INTRODUCTION

This manual provides instructions for the ZdalaMit AH59-02331A replacement remote control. It is designed to operate specific Samsung Blu-ray Home Entertainment Systems without the need for programming or pairing. Please read this manual carefully to ensure proper use and functionality.

PACKAGE CONTENTS

- 1 x ZdalaMit AH59-02331A Remote Control

Note: Batteries are not included and must be purchased separately.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover, sliding it back into place until it clicks securely.

2. Initial Use

This remote control is a direct replacement and does not require any programming or pairing. Once batteries are installed, it is ready for immediate use with compatible Samsung Blu-ray Home Entertainment Systems.

3. Compatibility

This remote control is compatible with the following Samsung Home Entertainment System models:

- HT-D6500W
- HT-D6730W
- HTD6500W

- HTD6730W
- AH59-02332A (original remote model it replaces)

OPERATING INSTRUCTIONS

Point the remote control directly at the sensor on your Samsung Blu-ray Home Entertainment System. Ensure there are no obstructions between the remote and the system.

Remote Control Layout



Image 1: Front view of the ZdalaMit AH59-02331A remote control, showing all buttons and their labels. The remote is black with grey and colored buttons.



Image 2: Angled view of the ZdalaMit AH59-02331A remote control, providing a perspective of its ergonomic design and button placement.

Key Functions Overview

- **POWER (Red Button):** Turns the system on or off.

- **FUNCTION / TV SOURCE:** Switches between input sources (e.g., Blu-ray, TV, AUX).
- **SLEEP:** Sets a timer for the system to automatically turn off.
- **BD / TV / RECEIVER:** Selects the device to control.
- **Number Buttons (0-9):** Used for direct track selection, channel input, or numerical entries.
- **FULL SCREEN:** Adjusts the display aspect ratio.
- **REPEAT:** Repeats playback of a track or disc.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Standard media playback functions.
- **MUTE:** Mutes or unmutes the audio.
- **VOL +/-:** Adjusts the volume level.
- **TUNING / CH ^/v:** Changes radio stations or TV channels.
- **DISC MENU:** Accesses the menu of the currently playing disc.
- **MENU:** Opens the main system menu.
- **TITLE MENU:** Accesses the title menu of a disc.
- **POPUP:** Displays a pop-up menu.
- **TOOLS:** Accesses various tools and settings.
- **INFO:** Displays information about the current content.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigates through menus and selections.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the current menu or content.
- **iPod SYNC:** Initiates iPod synchronization (if supported by the system).
- **SMART HUB:** Accesses Samsung Smart Hub features.
- **NETFLIX:** Direct access to the Netflix application.
- **3D SOUND:** Activates or deactivates 3D sound effects.
- **DOPLII:** Activates or deactivates Dolby Pro Logic II sound mode.
- **DSP:** Digital Signal Processor sound modes.
- **VERTICAL SURROUND:** Activates or deactivates vertical surround sound.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new 1.5V AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the system's sensor.
 - Verify that the remote is pointed directly at the system.

- **Specific buttons not working:**

- Ensure the remote is set to control the correct device (e.g., BD, TV, RECEIVER buttons).
- Clean the remote control surface, especially around the unresponsive buttons, to remove any debris.

- **Short operating range:**

- Replace the batteries. Low battery power can reduce the remote's effective range.
- Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

SPECIFICATIONS

Model:	AH59-02331A
Brand:	ZdalaMit
Compatible Systems:	Samsung Blu-ray Home Entertainment Systems HT-D6500W, HT-D6730W, HTD6500W, HTD6730W
Power Supply:	2 x 1.5V AAA Alkaline Batteries (not included)
Dimensions:	5.9 x 1.3 x 0.5 inches (15 x 3.3 x 1.3 cm)
Item Weight:	1.41 ounces (40 grams)
Color:	Black

SUPPORT

For further assistance or inquiries regarding your ZdalaMit AH59-02331A remote control, please refer to the seller's contact information on your purchase platform. Ensure to provide your order details for efficient support.

