

Manuals.plus /

- › Fujifilm /
- › Fujifilm Instax Mini 11 Instant Camera User Manual

**Fujifilm 1665211**

# Fujifilm Instax Mini 11 Instant Camera User Manual

Model: 1665211

## INTRODUCTION

---

The Fujifilm Instax Mini 11 is an instant camera designed for ease of use and capturing spontaneous moments. It features automatic exposure for optimal lighting in various environments and a dedicated selfie mode for close-up shots. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Instax Mini 11 camera.





Figure 1: Front view of the Fujifilm Instax Mini 11 Instant Camera in Blush Pink.

## SETUP

---

### 1. Battery Installation

The Instax Mini 11 requires two AA batteries for operation. Ensure the batteries are inserted with the correct polarity as indicated inside the battery compartment.

- Open the battery compartment cover located on the side of the camera.
- Insert two fresh AA batteries, matching the + and - indicators.
- Close the battery compartment cover securely.

### 2. Film Loading

Use only Fujifilm Instax Mini Instant Film with your camera. Each film pack contains 10 exposures.

- Open the film compartment cover on the back of the camera.
- Align the yellow mark on the film pack with the yellow mark on the camera body.
- Gently insert the film pack straight into the compartment. Do not press down on the film pack.
- Close the film compartment cover. The camera will automatically eject the black film cover sheet.
- The film counter on the back of the camera will display '10' (or the remaining number of shots).



Figure 2: Rear view of the camera, illustrating the film compartment.

### 3. Attaching Shutter Button Accessories

The camera comes with two fun shutter button accessories (Jewel button and Glow button) that can be attached to

customize its look.

- Peel off the adhesive backing from the desired accessory.
- Carefully align and press the accessory onto the shutter button.

## OPERATING THE CAMERA

---

### 1. Powering On/Off

To turn on the camera, press the button next to the lens. The lens will extend. To turn off, simply push the lens back into the camera body.

### 2. Taking a Photo

The Instax Mini 11 features automatic exposure, simplifying the process of taking photos. The camera automatically selects the optimal shutter speed and flash output based on ambient light conditions.

- Turn on the camera by pressing the button next to the lens.
- Look through the viewfinder to frame your shot.
- Press the shutter button to take the picture. The photo will automatically eject from the top of the camera.
- Allow the photo to develop for a few minutes. Do not shake or bend the film during development.

### 3. Selfie Mode

The Mini 11 includes a convenient selfie mode with a built-in macro lens and a small mirror next to the lens for easy framing.

- With the camera powered on, pull out the front edge of the lens barrel until the "Selfie Mode" mark appears.
- Hold the camera approximately 0.3 to 0.5 meters (1 to 1.6 feet) from your subject.
- Use the small mirror next to the lens to compose your selfie.
- Press the shutter button to capture your selfie.



Figure 3: The camera with its lens extended for Selfie Mode.

## MAINTENANCE

---

Proper care will ensure the longevity of your Instax Mini 11 camera.

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a lens cleaning cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

- **Batteries:** Remove batteries if the camera will not be used for an extended period to prevent leakage.
- **Film:** Store film packs in a cool, dry place. Do not expose film to high temperatures or direct sunlight.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Red light blinking slowly	Flash charging	Wait for the light to stop blinking and remain solid, indicating the flash is ready.
Red light blinking quickly	Battery issue or other error	Turn the camera off, remove and reinsert the batteries. If the issue persists, replace with new AA batteries.
No photo ejected after pressing shutter	No film loaded or film exhausted	Check the film counter. Load a new film pack if necessary.
Photos are too dark/light	Extreme lighting conditions	The camera has automatic exposure, but avoid extremely dark or bright environments for best results. Ensure flash is not obstructed.

## SPECIFICATIONS

Feature	Detail
Model Name	Instax Mini 11
Item Model Number	16655211
Product Dimensions	2.6 x 4.2 x 4.8 inches
Item Weight	10.4 ounces (0.65 Pounds)
Film Format Type	Instant (Instax Mini Film)
Lens	INSTAX LENS 60mm
Focus Range	0.3m - ∞ (infinity)
Exposure Control Type	Automatic
Min Shutter Speed	1/2 seconds
Batteries	2 AA batteries (included)
Included Components	Camera Body & Accessories

## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Fujifilm website or the documentation included with your product. You can also find additional resources and the full user manual in PDF format via the link below:

- [Download User Manual \(PDF\)](#)
- [Visit the Official Fujifilm Store on Amazon](#)

