

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Instax Mini 11 Instant Camera User Manual

Fujifilm Instax Mini 11

Fujifilm Instax Mini 11 Instant Camera User Manual

Model: Instax Mini 11

1. INTRODUCTION

The Fujifilm Instax Mini 11 is an instant camera designed for ease of use, featuring automatic exposure and a dedicated selfie mode. This manual provides instructions for setting up, operating, and maintaining your camera.

Key features include:

- **Automatic Exposure:** The camera automatically adjusts shutter speed and flash output for optimal brightness in various lighting conditions.
- **One-Touch Selfie Mode:** Extend the lens barrel to activate selfie mode, allowing for close-up shots and selfies using the built-in mirror.
- **Compact Design:** A slim body with a transparent ring lens for a modern aesthetic.

2. WHAT'S IN THE BOX

Verify that all the following items are included with your Instax Mini 11 camera:

- Instax Mini 11 Camera Body
- Hand Strap
- Shutter Button Accessories (x2)
- AA Batteries (x2)
- User Manual (this document)

3. CAMERA PARTS

Familiarize yourself with the main components of your Instax Mini 11 camera:





Figure 3.1: Front view of the Instax Mini 11 camera.

- **Shutter Button:** Press to take a photo.
- **Flash:** Provides illumination for photos in low light.
- **Lens:** The primary optical component for capturing images.
- **Viewfinder:** Used to frame your shots.
- **Power Button:** Press to turn the camera on or off.
- **Film Ejection Slot:** Where printed photos emerge.
- **Film Counter:** Indicates the number of remaining films.
- **Battery Compartment:** Located on the side, holds two AA batteries.

4. SETUP

4.1 Inserting Batteries

1. Open the battery compartment cover located on the side of the camera.
2. Insert two AA-size alkaline batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

4.2 Loading Film

Use only Fujifilm Instax Mini Instant Film.

This Instax Device Uses
Requis par ce dispositif Instax

instax[®] mini

Film

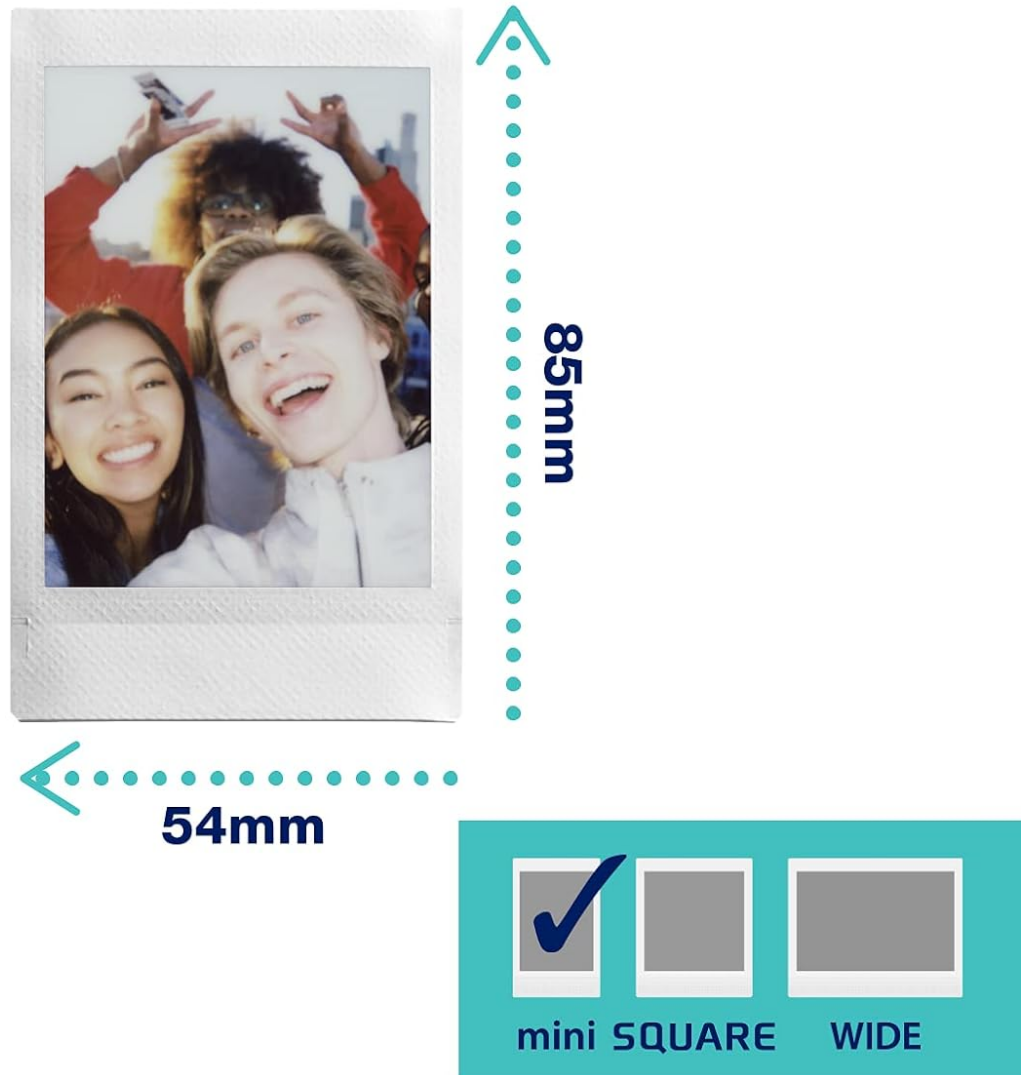


Figure 4.1: Instax Mini instant film pack.

1. Open the film compartment cover on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark on the camera body.
3. Insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment cover. The film counter will display 'S' (Start) and then '10' after the dark slide is ejected.
5. Press the shutter button once to eject the black protective film cover. The film counter will then show '10', indicating 10 photos remaining.

Important: Do not open the film compartment cover until all 10 films have been used, as this will expose the film and render it unusable.



Figure 4.2: Back of the camera showing the film counter.

5. OPERATION

5.1 Powering On/Off

- To turn on: Press the power button next to the lens. The lens will extend, and the flash charging lamp will light up.
- To turn off: Push the lens back into the camera body.

5.2 Taking a Photo

1. Turn on the camera by pressing the power button.
2. Wait for the flash charging lamp to glow steadily (not blinking). This indicates the flash is ready.
3. Hold the camera firmly and frame your shot using the viewfinder.
4. Press the shutter button. The photo will automatically eject from the film ejection slot.
5. Allow the photo to develop naturally. Do not shake or bend the print.

5.3 Automatic Exposure

The Instax Mini 11 features automatic exposure, eliminating the need for manual adjustments. The camera senses the ambient light and optimizes the shutter speed and flash output to ensure subjects and backgrounds are properly exposed, even in challenging lighting conditions.

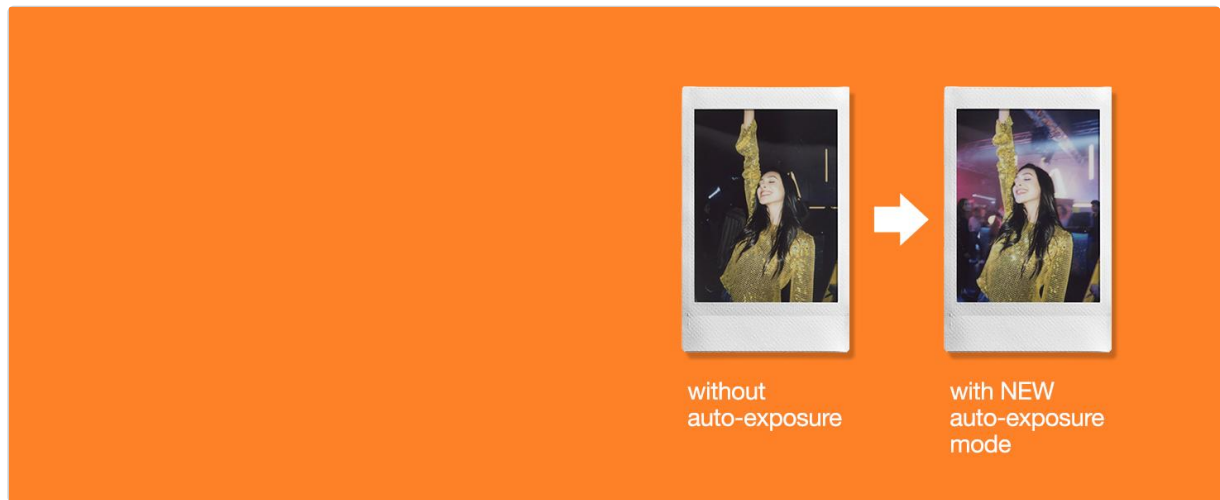


Figure 5.1: Example of automatic exposure in action.

5.4 Selfie Mode

For close-up shots and selfies:



Figure 5.2: Instax Mini 11 with lens extended for selfie mode.

1. With the camera powered on, pull the front rim of the lens barrel outwards until the 'SELFIE ON' mark appears.
2. Hold the camera at arm's length (approximately 30-50 cm from your face).
3. Use the small mirror next to the lens to check your framing.
4. Press the shutter button to take the selfie.
5. To exit selfie mode, push the lens barrel back into the camera body.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens and viewfinder, use a lens cleaning cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

Remove batteries if the camera will not be used for an extended period.

- **Film Handling:** Store film packs in their original packaging in a cool, dry place. Avoid exposing film to high temperatures or direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Dead or incorrectly inserted batteries.	Replace batteries with new AA alkaline batteries, ensuring correct polarity.
Flash charging lamp blinks rapidly.	Battery issue or internal error.	Turn off the camera, remove and reinsert the batteries. If the issue persists, replace batteries.
Film does not eject.	No film loaded, film compartment opened mid-pack, or film jam.	Check film counter. If '0', load new film. If film compartment was opened, the film pack is likely damaged and needs replacement. Do not force film out.
Photos are too dark/light.	Subject too far/close, or extreme lighting conditions.	Ensure subject is within flash range (0.3m - 2.7m). Avoid shooting directly into bright light or in extremely dark environments beyond the camera's capabilities.
Photo is blurry.	Camera shake or subject movement.	Hold the camera steady when pressing the shutter. Ensure subjects are still.

8. SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	instax mini 11
Film Format Type	Instant (Instax Mini)
Item Weight	0.65 Pounds (approx. 293g)
Item Dimensions (L x W x H)	4.24 x 4.77 x 2.65 inches (107.6mm x 121.2mm x 67.3mm)
Lens	2 components, 2 elements, f = 60 mm, 1:12.7
Viewfinder	Real image finder, 0.37x, with target spot
Shooting Range	0.3m and beyond (0.3m to 0.5m in Selfie Mode)
Shutter Speed	1/2 to 1/250 sec. (Automatic exposure control)
Exposure Control	Automatic, Lv 5.0 to 14.5 (ISO 800)

Feature	Detail
Film Ejection	Automatic
Flash	Constant firing flash (automatic light adjustment), recycle time: 6.5 seconds or less (with new batteries), effective flash range: 0.3 to 2.7 m
Power Supply	Two AA-size alkaline batteries (LR6)
Auto Power Off Time	After 5 minutes

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Fujifilm Instax Mini 11 camera comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or consumables such as film and batteries.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Fujifilm customer support. Refer to the official Fujifilm website or the contact information provided in your product packaging for the most up-to-date support details.