

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Crosscall](#) /
- › [Crosscall Core-T4 Mobile/Tablet User Manual](#)

## Crosscall Core-T4

# Crosscall Core-T4 Mobile/Tablet User Manual

Model: COT4.TAB.OPM

## INTRODUCTION

This user manual provides essential information for the proper use, setup, operation, and maintenance of your Crosscall Core-T4 Mobile/Tablet. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.





Figure 1: Front view of the Crosscall Core-T4 Mobile/Tablet.

## DEVICE OVERVIEW

---

The Crosscall Core-T4 is a robust 8-inch mobile tablet designed for durability and extended use. It features a 5 MP front camera and a 13 MP rear camera, running on Android 9.0 Pie.

- **Display:** 8-inch screen
- **Operating System:** Android 9.0 Pie
- **Cameras:** 5 MP Front, 13 MP Rear
- **Connectivity:** 4G+, Wi-Fi, NFC, Bluetooth
- **Storage:** 3GB RAM, 32GB Internal (expandable up to 512GB via Micro SD)
- **Battery:** 7000 mAh for extended usage
- **Durability:** IP68 standard, waterproof and durable





Figure 2: Front and back view of the Crosscall Core-T4 Mobile/Tablet.

## SETUP

---

### 1. Inserting SIM and Micro SD Cards

The Core-T4 supports Dual SIM and a Micro SD card for expanded storage.

1. Locate the SIM/Micro SD card tray on the side of the device.
2. Use the provided tool to open the tray.
3. Carefully place your Nano SIM cards and Micro SD card into their respective slots.
4. Gently push the tray back into the device until it clicks into place.

### 2. Initial Charging

Before first use, fully charge the device.

- Connect the charging cable to the device's charging port.
- Connect the other end of the cable to a compatible power adapter and plug it into a wall outlet.
- The battery indicator on the screen will show charging progress.

### 3. Powering On and Initial Configuration

Press and hold the power button until the Crosscall logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

## OPERATING INSTRUCTIONS

---

### Basic Navigation

- **Touch Screen:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.

### Camera Usage

The Core-T4 is equipped with a 13 MP rear camera and a 5 MP front camera.

1. Open the Camera application.
2. Select between photo or video mode.
3. Tap the screen to focus, then press the shutter button to capture.
4. Switch between front and rear cameras using the camera toggle icon.







Figure 3: Rear view of the Crosscall Core-T4 Mobile/Tablet, showing the camera.

## Connectivity

- **Wi-Fi:** Go to Settings > Network & Internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth to pair with other Bluetooth devices.
- **NFC:** Enable NFC in settings for contactless payments and data transfer.
- **4G+:** Ensure your SIM card is active and mobile data is enabled in settings for cellular connectivity.

## MAINTENANCE

---

### Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn marks, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

### Battery Care

To maximize battery life, avoid extreme temperatures and do not let the battery fully discharge frequently. Use only approved chargers.

## Software Updates

Regularly check for and install software updates to ensure your device has the latest features and security patches. Go to Settings > System > System update.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; software crash.	Charge the device for at least 30 minutes. Perform a forced restart by holding the power button for 10-15 seconds.
Cannot connect to Wi-Fi.	Incorrect password; router issue; Wi-Fi disabled.	Verify Wi-Fi password. Restart your router. Ensure Wi-Fi is enabled in settings.
Apps are slow or crashing.	Too many apps running; low storage; outdated app.	Close background apps. Clear app cache. Update apps from the Play Store. Consider freeing up storage.
Battery drains quickly.	High screen brightness; background apps; poor signal.	Reduce screen brightness. Close unused apps. Check battery usage in settings to identify culprits.

## SPECIFICATIONS

Feature	Detail
Model Name	Core-T4
Model Number	COT4.TAB.OPM
Brand	Crosscall
Display Size	8 inches
Operating System	Android 9.0 Pie
Rear Camera	13 MP
Front Camera	5 MP
RAM	3 GB
Internal Storage	32 GB
Expandable Storage	Up to 512 GB (Micro SD)
Battery Capacity	7000 mAh
Connectivity	4G+, Wi-Fi, Bluetooth, NFC
SIM Support	Dual SIM (Nano SIM)
Dimensions (L x W x H)	22.5 x 13.5 x 1.4 cm

Feature	Detail
Weight	610 grams
Durability	IP68 Standard (Waterproof and Durable)







## WARRANTY AND SUPPORT





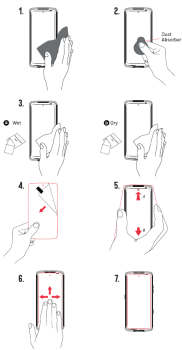
The Crosscall Core-T4 Mobile/Tablet typically comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty duration and coverage details. For technical support, service, or further inquiries, please visit the official Crosscall website or contact their customer service department. Keep your proof of purchase for warranty claims.

**Online Resources:** For additional information, FAQs, and software downloads, please visit the official Crosscall support page.

© 2024 Crosscall. All rights reserved.  
This manual is for informational purposes only.

### Related Documents - Core-T4

<div>  CORE-S5</div>	<p><a href="#">CROSSCALL CORE-S5 User Manual: Comprehensive Guide</a></p> <p>Explore the CROSSCALL CORE-S5 user manual for detailed instructions, features, safety guidelines, and specifications. Learn how to set up and use your rugged mobile phone.</p>
<div>  CORE-X5</div>	<p><a href="#">CROSSCALL CORE-X5 : Guide d'utilisation et caractéristiques principales</a></p> <p>Découvrez le CROSSCALL CORE-X5, un smartphone robuste conçu pour les professionnels. Profitez de ses fonctions de communication avancées (PMR, X-TALK), de sa puissance (Snapdragon 665), de sa durabilité exceptionnelle (IP68, résistance aux chutes) et de sa garantie de 5 ans. Plus d'informations sur <a href="http://www.crosscall.com">www.crosscall.com</a>.</p>
<div>  CORE-X5</div>	<p><a href="#">Manuel d'utilisation CROSSCALL CORE-X5</a></p> <p>Ce manuel d'utilisation complet pour le smartphone CROSSCALL CORE-X5 détaille ses fonctionnalités, son installation, son utilisation, sa personnalisation, le dépannage et les mesures de sécurité. Idéal pour les professionnels exigeants.</p>

<div data-bbox="165 109 261 143"> CROSSCALL</div> <div data-bbox="191 143 236 159">CORE-S5</div> <div data-bbox="165 176 261 300"></div> <div data-bbox="178 315 248 327">Guide de démontage</div> <div data-bbox="138 344 288 351">Version 1.0 1</div>	<div data-bbox="341 154 999 185"><a href="#">Crosscall CORE-S5 Disassembly and Reassembly Guide</a></div> <div data-bbox="341 197 1455 304"><p>A comprehensive guide for disassembling and reassembling the Crosscall CORE-S5 smartphone, including safety warnings, necessary tools, and step-by-step instructions for component replacement.</p></div>
<div data-bbox="158 423 272 456"> CROSSCALL</div> <div data-bbox="165 456 261 636"></div> <div data-bbox="196 642 231 658">CORE-Z5</div>	<div data-bbox="341 470 1289 499"><a href="#">Guide d'utilisation du smartphone CROSSCALL CORE-Z5 : Puissance et Durabilité</a></div> <div data-bbox="341 510 1442 618"><p>Découvrez le manuel d'utilisation complet du CROSSCALL CORE-Z5, un smartphone robuste et performant conçu pour les professionnels. Apprenez à utiliser ses fonctionnalités avancées, sa connectivité 5G et sa résistance IP68.</p></div>
<div data-bbox="197 734 253 745">STELLAR</div> <div data-bbox="170 745 256 757">Front screen tempered glass</div> <div data-bbox="122 763 304 1111"></div>	<div data-bbox="341 875 1109 904"><a href="#">STELLAR &amp; CORE/ACTION-X5 Tempered Glass Installation Guide</a></div> <div data-bbox="341 916 1430 983"><p>Step-by-step instructions for applying STELLAR and CORE/ACTION-X5 tempered glass screen protectors and back camera protectors for Crosscall devices.</p></div>