

KEMEI KM-1102

KEMEI KM-1102 Professional Double Foil Electric Shaver Instruction Manual

Model: KM-1102 | Brand: KEMEI

[Instructions](#) [Safety Information](#) [Maintenance](#) [Package Contents](#) [Troubleshooting](#) [Setup](#) [Specifications](#) [Operating](#) [Warranty & Support](#)

1. SAFETY INFORMATION

Please read all safety instructions carefully before using the KEMEI KM-1102 electric shaver. Retain this manual for future reference.

- **Caution:** To avoid injury, do not touch the blades while the shaver is on.
- Keep away from water when the shaver is plugged in or charging.
- Clean the shaver regularly to prevent skin irritation and bacterial growth.
- Be careful when using the pop-up trimmer to avoid cuts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the shaver if the foil or blades are damaged, as this may cause injury.
- Only use the provided USB charging cable.

2. PACKAGE CONTENTS

The KEMEI KM-1102 package includes the following items:

- 1 x KEMEI KM-1102 Electric Shaver
- 1 x Replacement Shaver Head

- 1 x Foil Guard
- 1 x USB Charge Cable
- 1 x Cleaning Brush
- 1 x Storage Bag
- 1 x Operating Instructions Manual



Image: All accessories included in the KEMEI KM-1102 package, neatly arranged.

Your browser does not support the video tag.

Video: An unboxing of the KEMEI KM-1102 electric shaver, showing all included components and accessories.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your KEMEI KM-1102 electric shaver. A full charge takes approximately 1.5 hours and provides up to 60 minutes of continuous use.

- Connect the provided USB charging cable to the shaver's charging port.
- Plug the other end of the USB cable into a compatible USB power source (e.g., computer, power bank, USB adapter).
- The charging indicator light will illuminate during charging.
- Once fully charged, disconnect the shaver from the power source.



Image: The KEMEI KM-1102 shaver being charged via a USB cable, highlighting its versatile charging options.



Image: Detail of the shaver's USB charging port and the green charging indicator light.

4. OPERATING INSTRUCTIONS

4.1 Basic Shaving

The KEMEI KM-1102 is designed for a close and comfortable shave with its double independent reciprocating sharp stainless steel blades and polygonal foil net.

- Ensure the shaver is charged.
- Slide the power switch to the "ON" position to start the shaver.
- Hold the shaver at a right angle to your skin and move it against the direction of hair growth.
- Apply gentle pressure. Do not press too hard, as this can cause irritation or damage the foils.
- For optimal results, especially with longer stubble, consider using the pop-up trimmer first.



Image: A detailed view of the shaver's gold foil net, designed for efficient hair capture.

Your browser does not support the video tag.

Video: A demonstration of the KEMEI KM-1102 electric shaver in use, showing its effectiveness for a close shave.

Your browser does not support the video tag.

Video: A user demonstrating the KEMEI KM-1102 shaver, highlighting its ease of use and effective performance.

4.2 Using the Pop-Up Trimmer

The shaver features a convenient pop-up trimmer on the back, ideal for shaping sideburns, mustaches, or for pre-trimming longer beard hair before using the main foils.

- Locate the trimmer switch on the side of the shaver.
- Slide the switch upwards to engage the pop-up trimmer.
- Use the trimmer to define edges or reduce the length of longer hairs.
- After use, slide the switch back down to retract the trimmer.

◉ Sharp Cutters



◉ Close Shaver



Image: The KEMEI KM-1102 shaver with its pop-up trimmer engaged, ready for detailing.

Your browser does not support the video tag.

Video: A demonstration of using the KEMEI KM-1102's pop-up trimmer for beard and hair detailing.

4.3 Wet and Dry Shaving

The KEMEI KM-1102 supports both wet and dry shaving. For a more comfortable shave, especially for sensitive skin, consider using shaving cream or gel.

- For dry shaving, ensure your skin is clean and dry.
- For wet shaving, apply shaving cream or gel to your face before shaving.
- The shaver is designed to be used in the shower, but ensure it is not plugged in or charging when wet.



Gentle Reminder: Enhance your shaving experience and achieve a cleaner face by applying foam cream to soften your beard before using the shaver.

Image: A gentle reminder to apply foam cream to soften the beard before using the shaver for an enhanced shaving experience.

5. MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

5.1 Cleaning the Shaver Head

- Turn off the shaver and disconnect it from any power source.
- Press the release button (if applicable) or gently pull the shaver head upwards to detach it from the body.
- Use the provided cleaning brush to remove any accumulated hair from the foils and the internal blades.
- For a deeper clean, the shaver head can be rinsed under running water. Ensure it is completely dry before reattaching.
- Reattach the shaver head by aligning it with the body and pressing down until it clicks into place.



Image: A close-up view of the shaver's internal cutting blades, which should be cleaned regularly.

5.2 Replacing the Shaver Head

For continued optimal performance, it is recommended to replace the shaver head periodically, especially if you notice reduced cutting efficiency or irritation.

- Turn off the shaver and detach the old shaver head as described in the cleaning section.
- Take the new replacement shaver head from the package.

- Align the new head with the shaver body and press firmly until it clicks securely into place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver not turning on	Low battery or not charged.	Charge the shaver for 1.5 hours. Ensure the charging cable is properly connected.
Poor shaving performance / pulling hair	Blades or foils are dull or clogged with hair.	Clean the shaver head thoroughly. Consider replacing the shaver head if performance does not improve.
Skin irritation after shaving	Applying too much pressure, dirty shaver head, or sensitive skin.	Shave with gentle pressure. Clean the shaver head before each use. Try wet shaving with cream or gel.
Shaver making unusual noise	Hair caught in the blades or internal mechanism.	Turn off and clean the shaver head. If the issue persists, contact customer support.

7. SPECIFICATIONS

- **Model Name:** KM-1102
- **Brand:** KEMEI
- **Power Source:** Battery Powered (Rechargeable)
- **Battery Type:** 1 CR5 battery (included)
- **Charge Time:** Approximately 1.5 hours
- **Continuous Use Time:** Up to 60 minutes per charge
- **Motor Speed:** Up to 7500 RPM
- **Special Features:** Detachable Head, Dry Shave, Ergonomic Design, Pop-Up Trimmer, Portable, Wet Shave
- **Recommended Uses:** Beard, Head (for bald men)
- **Product Dimensions:** 4.72 x 2.36 x 1.57 inches
- **Item Weight:** 7 ounces



Image: Visual representation of the shaver's compact dimensions.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided with your purchase or visit the official KEMEI website.

Keep your purchase receipt as proof of purchase for any warranty claims.