

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dansat](#) /
- › [Dansat Twin Tub Top Load Washing Machine DNWT1220WR User Manual](#)

Dansat DNWT1220WR

Dansat Twin Tub Top Load Washing Machine

Model: DNWT1220WR

Capacity: 8.5 kg

1. INTRODUCTION

Thank you for choosing the Dansat Twin Tub Top Load Washing Machine, model DNWT1220WR. This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the washing machine and keep it for future reference.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

3. PRODUCT OVERVIEW

The Dansat Twin Tub Washing Machine DNWT1220WR is designed for efficient and convenient laundry care. It features two separate tubs for washing and spinning, allowing for simultaneous or sequential processing of clothes. The machine is constructed from high-quality plastic for durability and ease of use.



Figure 1: Front view of the Dansat Twin Tub Top Load Washing Machine DNWT1220WR. The image shows the two top-loading compartments, one for washing and one for spinning, along with the control panel featuring rotary knobs.

Key Features:

- Twin tub design for separate wash and spin functions.
- Top-load access for easy loading and unloading.
- 8.5 kg washing capacity.
- Durable plastic body construction.
- Hard water wash program for effective cleaning in various water conditions.
- Simple knob controls for wash timer, wash selector, and spin timer.

4. SETUP

4.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect the appliance for any damage that may have occurred during transit. Retain packaging materials for future transport if needed.

4.2 Placement

- Place the washing machine on a firm, level surface to prevent vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and access.
- Position the machine near a water tap and a drain outlet.

4.3 Water Connection

- Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks.
- Place the drain hose into a suitable drain or sink. Ensure the hose is not kinked or blocked.

4.4 Electrical Connection

- Ensure the power supply voltage matches the requirements of the washing machine (220-240V, 50/60Hz).
- Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The control panel typically consists of three rotary knobs:

- **Wash Timer:** Sets the duration of the wash cycle.
- **Wash Selector:** Chooses between different wash modes (e.g., Gentle, Normal, Heavy) or functions (e.g., Wash, Rinse).
- **Spin Timer:** Sets the duration of the spin cycle.

5.2 Washing Procedure

1. **Load Laundry:** Open the wash tub lid and place clothes loosely into the wash tub. Do not overload the machine.
2. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
3. **Fill with Water:** Turn on the water tap to fill the wash tub with water to the desired level.
4. **Select Wash Program:** Turn the **Wash Selector** knob to the desired wash mode (e.g., Normal for everyday clothes, Gentle for delicate items).
5. **Set Wash Timer:** Turn the **Wash Timer** knob to the desired washing duration. The machine will start washing.
6. **Drain Water:** Once the wash cycle is complete, turn the **Wash Selector** knob to the 'Drain' position to empty the water from the wash tub.
7. **Rinse (Optional):** After draining, you can perform a rinse cycle. Refill the wash tub with clean water, set the **Wash Timer** for a short duration, and then drain again. Alternatively, you can use the 'Rinse' option on the **Wash Selector** if available.
8. **Spin Drying:** Transfer the washed and rinsed clothes to the spin tub. Ensure clothes are evenly distributed. Close the spin tub lid. Turn the **Spin Timer** knob to the desired spin duration. The machine will spin dry the clothes.
9. **Unload:** Once the spin cycle is complete, remove the clothes from the spin tub.

6. MAINTENANCE

6.1 Cleaning the Lint Filter

The lint filter collects lint and debris during washing. For optimal performance, clean the lint filter after every few washes.

1. Locate the lint filter, usually inside the wash tub.
2. Remove the filter and clean any accumulated lint under running water.
3. Reinsert the filter securely.

6.2 Cleaning the Machine Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the plastic surface.

6.3 Draining Residual Water

After use, ensure all water is drained from both tubs. If the machine will not be used for an extended period, ensure it is completely dry to prevent mold or odors.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Lid not closed properly.	Check power connection; Check household fuse/breaker; Ensure wash/spin lid is fully closed.
Water does not fill	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten or clear water inlet hose.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten or clear drain hose; Set drain selector to 'Drain'.
Excessive vibration/noise	Machine not level; Uneven load in spin tub.	Adjust machine to be level; Redistribute clothes evenly in the spin tub.
Poor washing results	Too much or too little detergent; Overloading; Incorrect wash program.	Use recommended detergent amount; Do not overload; Select appropriate wash program.

8. SPECIFICATIONS

Feature	Specification
Brand Name	Dansat
Model Information	DNWT1220WR
Washing Load Capacity	8.5 kg
Product Dimensions (W x D x H)	85.5 x 48.5 x 95.5 cm
Item Weight	26 kg
Body Material	Plastic
Installation Type	Freestanding

Feature	Specification
Access Location	Top Load
Color	White
Control Unit	Knob
Voltage	220-240 V
Frequency	50/60 Hz
Special Feature	Hard water wash program
Cycle Options	Drain, Spin, Rinse
Batteries Required	No
Included Components	1 × Dansat Twin Tub Top Load Washing Machine 8.5 kg, White

9. WARRANTY AND SUPPORT

This Dansat washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, service, or inquiries regarding your product, please contact your local Dansat authorized service center or the retailer from whom you purchased the appliance. Keep your purchase receipt and model number (DNWT1220WR) handy when contacting support.