

ECONTROLLY RCEC-AKB73715606

Instruction Manual for AKB73715606 Remote Control

Model: AKB73715606

1. PRODUCT OVERVIEW

The ECONTROLLY AKB73715606 is a replacement remote control designed for a wide range of LG Smart TV models. It offers direct functionality without the need for complex programming, providing a convenient solution for controlling your television.





Image 1.1: Front view of the AKB73715606 Remote Control. The remote is black with clearly labeled buttons for power, input, channel navigation, volume, number pad, and various function keys.

2. SETUP

2.1 Battery Installation

This remote control operates on two (2) AAA batteries. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: No programming or pairing is required. The remote is ready for use once batteries are installed.

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

The remote control provides standard functions for navigating your LG Smart TV. Below is a table detailing the primary buttons and their uses:

Button	Function
Power (Red Circle)	Turns the TV on or off.
TV / INPUT	Switches between TV mode and external input sources (HDMI, AV, etc.).
Number Pad (0-9)	Direct channel selection or numerical input.
Volume Up/Down (Triangle Up/Down)	Adjusts the audio volume level.
Channel Up/Down (P PAGE)	Changes the TV channel up or down.
MUTE	Mutes or unmutes the TV audio.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections or enters menus.
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.

3.2 Special Functions

The remote also includes dedicated buttons for specific TV features:

- **Q.MENU:** Accesses the Quick Menu for common settings.
- **PICTURE:** Adjusts picture modes and settings.
- **SOUND:** Adjusts sound modes and settings.
- **LIST:** Displays a list of channels or recorded programs.
- **Q.VIEW:** Switches between the current and previously viewed channel.
- **FAV:** Accesses favorite channels.
- **I/II:** Changes audio language or stereo/mono mode.
- **TIME:** Displays time-related information or settings.
- **REVEAL:** Reveals hidden text in teletext mode.
- **UPDATE:** Checks for software updates (TV dependent).
- **SETTINGS:** Opens the main TV settings menu.
- **HOLD:** Holds the current teletext page.
- **TEXT:** Activates teletext mode.
- **INDEX:** Displays the teletext index page.
- **Media Control Buttons (Rewind, Play, Pause, Fast Forward, Stop):** Controls media playback on compatible devices or TV functions.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions displayed on the TV screen, varying by application or menu.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not working	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote works intermittently	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure no objects block the line of sight between the remote and the TV's IR sensor.
Some buttons not responding	Dirt or debris under buttons, or internal damage.	Clean the remote. If problem persists, the remote may be damaged and require replacement.
Remote does not control TV	Incompatibility or TV's IR sensor issue.	Verify the remote model (AKB73715606) is compatible with your specific LG TV model. Check if the TV's IR sensor is clean and unobstructed.

6. SPECIFICATIONS

- **Model Number:** RCEC-AKB73715606
- **Compatible Brand:** LG
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounce
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

This remote control is designed for reliable performance. For any issues not covered in the troubleshooting

section, please refer to the seller's return policy or contact customer support through your purchase platform. Keep your purchase receipt for reference.