

## GLACER GT-23853GDEP

# GLACER Retro Countertop Microwave Oven

MODEL: GT-23853GDEP - USER MANUAL

## 1. Important Safety Instructions

---

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not allow children to use the microwave oven without supervision.
- Do not heat liquids or other foods in closed containers as they are liable to explode.
- Do not operate the oven if the cord or plug is damaged, or if the oven malfunctions or has been dropped or damaged.
- Do not attempt to service or repair the oven yourself. Contact qualified service personnel.
- Ensure proper ventilation around the microwave. Do not block any ventilation openings.
- Do not use corrosive chemicals or vapors in this appliance.
- Always ensure the glass turntable is correctly positioned before operation.
- This product is not for sale in California.

## 2. Product Overview and Features

---

The GLACER Retro Countertop Microwave Oven (Model GT-23853GDEP) combines a classic aesthetic with modern functionality, designed for efficient and convenient food preparation.



Figure 2.1: Front view of the GLACER Retro Countertop Microwave Oven.

### Key Features:

- **5 Microwave Power Levels:** Offers adjustable power from 100% to 20% for diverse cooking needs, maximizing power savings.
- **Removable Glass Turntable:** Ensures 360° heating for uniform cooking results.
- **LED Digital Display:** Clearly shows cooking time remaining, time, and weight settings.
- **Auto Reminder Function:** Emits a beep sound after cooking is complete.
- **Auto-Cook Preset Programs:** One-touch cooking for popular foods like popcorn, potato, pizza, frozen vegetables, beverages, and dinner plates.
- **Child Safety Lock:** Prevents unsupervised use by children, enhancing household safety.
- **Retro Design:** Features rounded buttons, a curved handle, and vibrant colors to complement various kitchen styles.

## 3. Package Contents

---

Verify that all items are included in the package:

- 1 x GLACER Retro Countertop Microwave Oven
- 1 x Glass Turntable Plate
- 1 x User Manual

## 4. Installation and Setup

---

### 4.1 Placement

- Place the microwave oven on a flat, stable surface capable of supporting its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation by leaving at least 4 inches (10 cm) of space around the sides, back, and top of the oven.
- Keep the microwave away from heat sources, steam, or splashing water.

- Do not place anything on top of the microwave oven.

## 4.2 Turntable Assembly

1. Place the roller ring in the center of the oven cavity.
2. Position the glass turntable plate securely on top of the roller ring. Ensure it sits properly in the center.



Figure 4.1: The rotating glass turntable ensures even heating.

## 5. Operating Your Microwave

---

### 5.1 Control Panel Overview

# 5 MICROWAVE POWER

Designed for You diverse needs

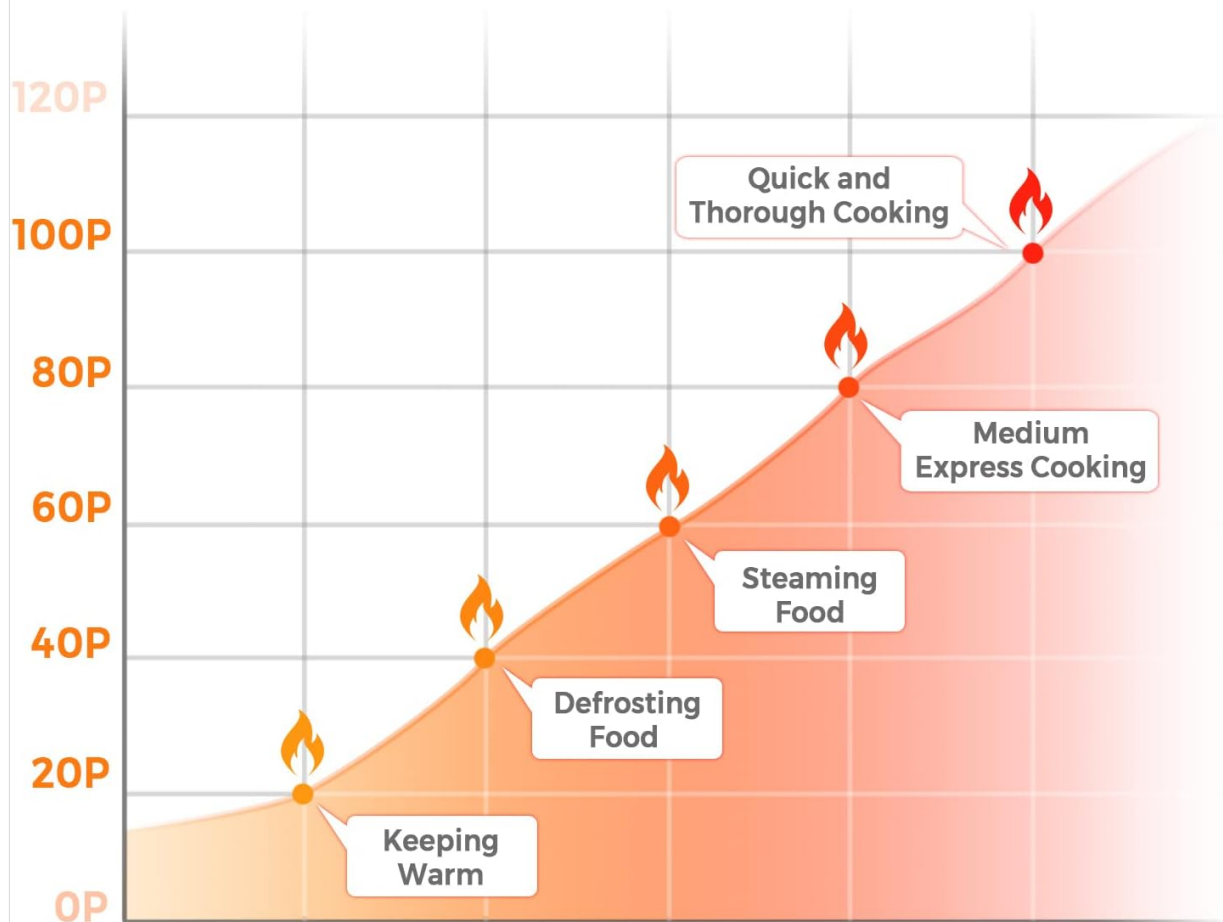


Figure 5.1: The intuitive control panel features buttons for various functions and a dial for time/weight adjustments. The control panel includes an LED display, function buttons (Micro Power, Express, Clock/Defrost, Auto Cooking, Instant/Start, Pause/Cancel), and a rotary dial for setting time and weight.

## 5.2 Setting Time/Clock

- Press the 'Clock/Defrost' button once.
- Turn the rotary dial to set the hour. Press 'Clock/Defrost' again.
- Turn the rotary dial to set the minutes. Press 'Clock/Defrost' to confirm.

## 5.3 Setting Power Level

This microwave offers 5 power levels (100%, 80%, 60%, 40%, 20%) for precise cooking.

# 0.7CU.FT LARGE CAPACITY



Figure 5.2: Power levels can be adjusted for different cooking needs.

1. Press the 'Micro Power' button repeatedly to cycle through the desired power levels (e.g., 100P, 80P, 60P, 40P, 20P).
2. Turn the rotary dial to set the cooking time.
3. Press 'Instant/Start' to begin cooking.

## 5.4 Using Auto-Cook Programs

The microwave features pre-programmed settings for common food items:



# CHILD LOCK

Control panel will be locked to protect your family



Figure 5.3: Auto-cook presets simplify cooking for various foods.

1. Place the food item in the microwave.
2. Press the 'Auto Cooking' button repeatedly to select the desired food type (e.g., Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate).
3. The display will show the recommended cooking time or weight. Adjust if necessary using the rotary dial.
4. Press 'Instant/Start' to begin cooking.

## 5.5 Defrosting

The microwave offers both time-based and weight-based defrosting options.

- **Time Defrost:** Press 'Clock/Defrost' twice. Turn the rotary dial to set the defrosting time. Press 'Instant/Start'.
- **Weight Defrost:** Press 'Clock/Defrost' three times. Turn the rotary dial to set the weight of the food. Press 'Instant/Start'.

## 5.6 Child Safety Lock

To activate the child safety lock, press and hold the 'Pause/Cancel' button for 3 seconds. The display will show a lock indicator. To deactivate, press and hold 'Pause/Cancel' again for 3 seconds.



Figure 5.4: The child lock feature prevents accidental operation.

## 6. Care and Maintenance

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Exterior:** Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Cleaning the Interior:** For spills and splatters, wipe the interior with a damp cloth immediately. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes until steam forms. This will loosen food particles for easier cleaning.
- **Turntable:** The glass turntable and roller ring can be removed and washed in warm soapy water or in the dishwasher.
- **Door Seals:** Regularly clean the door seals and adjacent parts to ensure proper closure and prevent microwave leakage.

## 7. Troubleshooting

---

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door firmly; Replace fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Door not closed properly.	Adjust time/power; Close door firmly.
Turntable not rotating	Turntable not correctly placed on roller ring; Obstruction under turntable.	Reposition turntable; Remove any obstructions.
Unusual noise during operation	Food container touching oven walls; Turntable or roller ring dirty.	Ensure proper clearance; Clean turntable and roller ring.

If the problem persists after attempting these solutions, please contact customer support.

## 8. Specifications

---

Specification	Value
Brand	GLACER
Model Number	GT-23853GDEP
Capacity	0.7 Cubic Feet (20 L)
Output Power	700 Watts
Rated Voltage	120 V
Frequency	60 Hz
Product Dimensions (L x W x H)	18" x 14" x 10"
Item Weight	23 lbs
Material	Steel, Glass
Special Feature	Child Safety Lock



Figure 8.1: Product dimensions for planning placement.

## 9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided in your purchase documentation or visit the official GLACER website. Keep your proof of purchase for any warranty claims.