

NutriBullet NB50100C

NutriBullet NB50100C Pro 1000 Single Serve Blender User Manual

Model: NB50100C

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your NutriBullet NB50100C Pro 1000 Single Serve Blender. Please read this manual thoroughly before first use and retain it for future reference.



Figure 1.1: The NutriBullet Pro 1000 Single Serve Blender with a cup filled with ingredients and another with a blended smoothie.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury. Read all instructions.

- Do not immerse the motor base in water or other liquids.
- Avoid contact with moving parts.

- Do not operate any appliance with a damaged cord or plug.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender on a flat, stable surface.
- Do not fill ingredients past the MAX line indicated on the cup.
- Blades are sharp. Handle with care.

3. PACKAGE CONTENTS

Your NutriBullet Pro 1000 7-piece set includes the following components:

- 1000-Watt Motor Base
- Extractor Blade
- 30 Fl Oz Cup
- To-Go Lid
- Lip Ring
- User Manual (this document)
- Recipe Guide (may vary by package)



Figure 3.1: Main components of the NutriBullet Pro 1000 Blender.

4. SETUP

Before first use, wash all parts except the motor base with warm soapy water. Rinse and dry thoroughly.

1. Place the motor base on a clean, dry, and level surface.
2. Ensure the motor base is unplugged from the power outlet.
3. Add your desired ingredients to the NutriBullet cup. Do not exceed the MAX fill line.

4. Twist the Extractor Blade onto the cup until it is securely tightened.
5. Invert the cup and blade assembly onto the motor base. Align the three tabs on the cup with the three slots on the motor base.
6. Press down and twist the cup clockwise to activate the blending cycle.



Figure 4.1: The NutriBullet Pro 1000 motor base.

5. OPERATING INSTRUCTIONS

The NutriBullet Pro 1000 features a powerful 1000-watt motor designed for efficient blending.

5.1 Blending Cycle

1. After assembling the cup and blade onto the motor base as described in Section 4, plug the power cord into a 110V electrical outlet.
2. Press down firmly on the cup and twist clockwise until the tabs lock into place. The blender will begin operating.
3. The blending cycle will run automatically for approximately 60 seconds and then shut off. For shorter blending times, simply twist the cup counter-clockwise and lift to stop.
4. Once blending is complete, twist the cup counter-clockwise and lift it off the motor base.
5. Unscrew the Extractor Blade from the cup.
6. Attach the Lip Ring or To-Go Lid to the cup if desired.

5.2 Blending Tips

- For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice.
- If blending becomes difficult, add more liquid.

- Do not continuously blend for more than 1 minute. Allow the motor to rest for a few minutes between cycles.
- Ensure the cup is securely attached to the motor base to prevent leaks.



Figure 5.1: The NutriBullet Pro 1000 Blender prepared for operation with ingredients.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your NutriBullet blender.

6.1 Cleaning the Extractor Blade and Cups

- Immediately after each use, rinse the Extractor Blade and cups under warm running water.
- For a deeper clean, wash with warm soapy water using a dish brush to remove any residue.
- The cups and Extractor Blade are top-rack dishwasher safe.
- **Caution:** The blades are sharp. Handle with extreme care.

6.2 Cleaning the Motor Base

- Unplug the motor base before cleaning.
- Wipe the motor base with a damp cloth. If necessary, use a mild soap.
- Do not immerse the motor base in water or any other liquid.
- Ensure the motor base is completely dry before plugging it back in or storing.

7. TROUBLESHOOTING

If you encounter issues with your NutriBullet Pro 1000, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; cup not properly engaged.	Ensure power cord is securely plugged in. Twist cup firmly clockwise onto the motor base until locked.
Leaking during blending.	Blade not tightened; ingredients over MAX line.	Ensure Extractor Blade is securely twisted onto the cup. Do not fill ingredients past the MAX line.
Motor stops during operation.	Overheating; too many ingredients; too thick consistency.	Unplug and let cool for 15-20 minutes. Reduce ingredients or add more liquid. Do not blend continuously for more than 1 minute.
Loud noise or unusual smell.	Foreign object; motor strain.	Immediately unplug. Check for obstructions. If problem persists, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	NutriBullet
Model Number	NB50100C
Power Source	Corded Electric
Motor Wattage	1000 Watts
Voltage	110V
Capacity	30 Fl Oz (2140.95 Grams)
Special Feature	Single Serve
Blade Material	Stainless Steel
Material Type Free	BPA Free
Product Dimensions	5.47"D x 5.51"W x 14.88"H
Item Weight	4.72 pounds

9. WARRANTY AND SUPPORT

Your NutriBullet NB50100C Pro 1000 Single Serve Blender comes with a**Limited Warranty**. For specific details regarding the warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official NutriBullet website.

For technical support, replacement parts, or any other inquiries, please contact NutriBullet Customer Service. Contact information can typically be found on the official NutriBullet website or on the product packaging.

