

IKEA HÅLLBAR 3L Bin

IKEA HÅLLBAR 3L Manual-Lift Bin Instruction Manual

Model: HÅLLBAR 3L Bin (Light Grey)

1. PRODUCT OVERVIEW

The IKEA HÅLLBAR 3L Manual-Lift Bin is a versatile and durable plastic container designed for efficient waste sorting and general storage. Its compact size and light grey color make it suitable for various home environments, including kitchens, bathrooms, and utility areas. The bin features a manual-lift lid and is constructed from heavy and thick plastic for longevity.

- **Purpose:** Ideal for sorting small waste items such as used batteries, light bulbs, or for storing small household items like sponges, cloths, tea lights, and crayons.
- **Design:** Features a simple, rectangular shape with rounded corners for easy cleaning.
- **Capacity:** 3 Liters (approximately 101 oz).
- **Stackable:** Designed to be stackable, allowing for space-saving configurations with other HÅLLBAR bins.
- **Lid:** Includes a removable manual-lift lid to conceal contents and facilitate cleaning.
- **Stability:** Equipped with anti-slip pads on the bottom for secure placement.

2. SETUP AND PLACEMENT

The HÅLLBAR bin offers flexible placement options to suit your needs.

1. **Freestanding Placement:** The bin can be placed freestanding on any flat surface in your home. Ensure the surface is stable.
2. **Cabinet or Drawer Integration:** For integrated waste sorting, the bin can be placed inside a cabinet or drawer. For enhanced stability and access in MAXIMERA high drawers (80x45 cm or 80x60 cm), a HÅLLBAR support frame (sold separately) can be used to keep the bins in place.
3. **Kitchen Placement:** When used in the kitchen, it is recommended to position the bin as close to the sink as possible. This minimizes travel distance for waste disposal and helps prevent spills, as the sink area is typically where most kitchen waste is generated.
4. **Stacking:** To save space, HÅLLBAR bins can be stacked. Place same-sized bins directly on top of each other, or place smaller HÅLLBAR bins on top of larger ones.
5. **Labeling:** Different-colored stickers are included with HÅLLBAR bins to help you mark each bin according to the type

of waste or items being sorted. You can also write or draw on these stickers for clearer identification.



Image: Multiple IKEA HÅLLBAR bins stacked in a kitchen setting, demonstrating space-saving. The bins are designed to be stackable, allowing for efficient use of space. They can be stacked on top of each other or smaller bins can be placed on larger ones.



Image: IKEA HÅLLBAR bins integrated into a kitchen pull-out drawer for waste sorting. HÅLLBAR bins can be integrated into kitchen cabinets or drawers using a support frame (sold separately) for convenient waste access.

3. OPERATING INSTRUCTIONS

Using the HÅLLBAR bin is straightforward due to its manual design.

1. **Opening the Lid:** To open the bin, simply lift the lid manually. The lid is designed for easy handling.
2. **Closing the Lid:** To close, gently lower the lid back onto the bin until it sits securely.
3. **Using Plastic Bags:** For easier waste disposal and to keep the bin clean, you have the option to line the bin with a plastic bag. Ensure the bag fits properly and does not obstruct the lid's closure.
4. **Removable Lid:** The lid can be completely removed if you prefer to keep the bin open or for thorough cleaning.

4. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the hygiene and appearance of your HÅLLBAR bin.

- **General Cleaning:** Wipe the bin and lid regularly with a soft cloth dampened with water and a mild detergent.
- **Stubborn Stains:** For more stubborn dirt, a soft brush can be used. Avoid abrasive cleaners or scouring pads, as these can scratch the plastic surface.
- **Lid Removal:** The lid is removable, making it easy to clean separately and access the interior of the bin for thorough washing.
- **Rounded Corners:** The bin's design with rounded corners facilitates easier cleaning, preventing dirt from accumulating in sharp edges.
- **Drying:** After cleaning, ensure all parts are thoroughly dried before reassembling or using.

5. TROUBLESHOOTING

This section addresses common questions or minor issues you might encounter.

- **Lid not closing properly:** Ensure no debris is caught between the lid and the bin's rim. Check if a plastic bag is overfilled or improperly positioned.
- **Bin sliding on surface:** The bin is equipped with anti-slip pads. If it still slides, ensure the surface is clean and dry.
- **Odor:** If odors persist, thoroughly clean the bin and lid as per the maintenance instructions. Consider using a bin liner and emptying the bin more frequently.

6. SPECIFICATIONS

Brand	IKEA
Model Name	HÅLLBAR 3L Bin
Capacity	3 Liters (approx. 101 oz)
Color	Light Grey
Material	Plastic
Opening Mechanism	Manual-Lift
Special Feature	Removable Lid
Shape	Rectangular
Item Dimensions (L x W x H)	7.48"L x 6.69"W x 5.91"H (19cm x 17cm x 15cm approx.)
Item Weight	0.26 Kilograms

Recommended Uses	Home, Kitchen
------------------	---------------

7. WARRANTY AND SUPPORT

Specific warranty information for the IKEA HÅLLBAR 3L Manual-Lift Bin is not provided in the product details. For warranty claims, product support, or to inquire about replacement parts, please refer to your purchase receipt or contact IKEA customer service directly. You can find contact information on the official IKEA website or at your local IKEA store.