

Danby DBMW0720BWW

Danby DBMW0720BWW Countertop Microwave Oven

Model: DBMW0720BWW

INTRODUCTION

Thank you for choosing the Danby DBMW0720BWW 0.7 Cu.Ft. Countertop Microwave. This appliance is designed for convenient and efficient heating, cooking, and defrosting of various food items. Its compact size makes it ideal for smaller spaces such as dorm rooms, offices, or kitchens with limited counter space. Please read this manual thoroughly before operating your new microwave oven to ensure safe and optimal performance.



The Danby DBMW0720BWW 0.7 Cu.Ft. Countertop Microwave in white, featuring a push-button door and digital display.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. Ensure the door closes properly and there is no damage to the door, hinges, or latches.
- Only qualified service personnel should adjust or repair this appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not overcook food.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is designed for heating food. It is not designed for industrial or laboratory use.

SETUP

Unpacking

Carefully remove all packaging materials from the microwave oven. Inspect the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it appears damaged. Retain the packaging materials for future transport or storage if necessary.

Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation around the unit. Do not block air vents. Maintain a minimum clearance of 4 inches (10 cm) from the rear and sides, and 8 inches (20 cm) from the top of the oven to allow for proper airflow.



The compact dimensions of the Danby DBMW0720BWW microwave, suitable for various countertop spaces.

Turtable Installation

Before first use, ensure the glass turntable and turntable ring assembly are correctly placed inside the oven cavity. The turntable should sit securely on the central hub and rotate freely.



The interior of the microwave, highlighting the 10-inch glass turntable for even cooking.

Power Connection

Plug the microwave oven into a grounded 120V AC, 60Hz electrical outlet. The cord length is approximately 59 inches. Do not use an extension cord unless absolutely necessary, and ensure it is a grounded 3-prong cord with a rating equal to or greater than the appliance.

OPERATING INSTRUCTIONS

Basic Operation (Time Cook)

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Press the **Time Cook** button.
4. Use the number pad to enter the desired cooking time.
5. Press the **Power** button to select a power level (1-10). The default is 10 (full power).
6. Press **START/+30SEC** to begin cooking.

Auto Cook Options

The microwave features 6 convenient auto cook options for common food items:

- **Popcorn:** For pre-packaged microwave popcorn.
- **Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Frozen Vegetable:** For cooking frozen vegetables.
- **Beverage:** For heating drinks like coffee or tea.
- **Dinner Plate:** For reheating a full dinner plate.

To use, simply press the corresponding auto cook button. The microwave will automatically set the optimal

cooking time and power level. Press **START/+30SEC** to begin.



A bowl of popcorn inside the Danby DBMW0720BWW microwave, demonstrating its capacity for common food items.

Express Cook

For quick cooking, press any number button (1-6) to instantly start cooking at full power for that many minutes. For example, pressing **1** will start cooking for 1 minute.

Add 30 Seconds

During cooking, press the **START/+30SEC** button to add 30 seconds to the current cooking time. This can also be used to start cooking for 30 seconds at full power when the oven is in standby mode.

Auto Defrost Options

The microwave offers two defrost methods:

- **Time Defrost:** Press **Time Defrost**, then enter the desired defrosting time using the number pad.
- **Weight Defrost:** Press **Weight Defrost**, then enter the weight of the food in ounces or grams using the number pad.

Press **START/+30SEC** to begin the defrost cycle.

Child/Control Lock Out Option

To prevent unintended operation, you can lock the control panel. Press and hold the **STOP/Cancel** button for 3 seconds until a beep sounds and the lock indicator appears on the display. To unlock, press and hold the **STOP/Cancel** button again for 3 seconds.

MAINTENANCE AND CLEANING

General Cleaning

Regular cleaning helps maintain the performance and appearance of your microwave. Wipe the interior and exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.

- For stubborn stains inside the oven, place a bowl of water with a few lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen food particles.
- Clean the door seals and adjacent parts thoroughly to ensure proper door closure.

Turtable Care

The glass turntable and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back into the oven.

TROUBLESHOOTING

If you experience issues with your microwave, consult the following common troubleshooting steps before contacting service.

Problem	Possible Cause	Solution
Oven will not start.	Door is not closed securely.	Close the door completely.
	Plug is not properly inserted into the outlet.	Ensure the plug is firmly in the wall outlet.
	Circuit breaker tripped or fuse blown.	Check your circuit breaker or fuse box.
No power to the unit.	Power cord is disconnected.	Reconnect the power cord.
Food is not heating.	Cooking time is too short.	Increase cooking time.
	Power level is too low.	Adjust to a higher power level.
Turntable is noisy or not rotating.	Turntable or ring is not correctly positioned.	Reposition the turntable and ring. Ensure no food debris is obstructing movement.

SPECIFICATIONS

Feature	Detail
Brand	Danby
Model	DBMW0720BWW
Capacity	0.7 Cubic Feet
Wattage	700 Watts
Power Levels	10
Product Dimensions (W x D x H)	17.31 x 11.94 x 10.19 inches
Item Weight	21.2 pounds
Turntable Size	10 inches (Glass)
Cord Length	59 inches

Feature	Detail
Control Type	Push Button
Color	White
Special Features	Defrost (Time/Weight), Auto Cook Options, Express Cook, Child Lock

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Danby website. You can also contact Danby customer service directly for assistance with product registration, troubleshooting, or parts replacement.

Note: Keep your purchase receipt as proof of purchase for warranty claims.