

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY SHWRMC0103 Replacement Remote Control User Manual for Sharp Aquos 3D TVs](#)

ALLIMITY SHWRMC0103

ALLIMITY SHWRMC0103 Replacement Remote Control User Manual

Model: SHWRMC0103 | Brand: ALLIMITY

INTRODUCTION

This manual provides detailed instructions for the ALLIMITY SHWRMC0103 replacement remote control. This remote is designed to function as a direct replacement for your original Sharp Aquos 3D TV remote, offering identical functionality without the need for complex programming. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

PACKAGE CONTENTS

- 1 x ALLIMITY SHWRMC0103 Replacement Remote Control
- (Batteries are not included)

SETUP

1. Battery Installation

The ALLIMITY SHWRMC0103 remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming or pairing is required. The remote control is ready for use immediately after battery installation.







Image: Front view of the ALLIMITY SHWRMC0103 replacement remote control. This image shows the full layout of the remote's buttons, including power, channel, volume, and navigation controls.

OPERATING INSTRUCTIONS

The ALLIMITY SHWRMC0103 remote control is designed to replicate the functions of your original Sharp Aquos 3D TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

Key Functions Overview

Button	Function
Power (Red Button)	Turns the TV on or off.
DTV / RADIO / USB / DVD	Selects input sources or modes.
Number Buttons (0-9)	Direct channel selection.
TV GUIDE	Accesses the electronic program guide.
P.MODE / S.MODE	Picture Mode / Sound Mode selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes TV channels.
MENU	Opens the TV's main menu.
OK / Navigation Arrows	Confirms selections and navigates through menus.
EXIT	Exits the current menu or function.
SOURCE	Cycles through available input sources (HDMI, AV, etc.).
INFO	Displays information about the current program or input.
ASPECT / SLEEP / AUDIO / SUBTITLE / DISPLAY	Various TV function controls.
TEXT / HOLD / ZOOM	Teletext and display zoom functions.
DVD MENU / REC LIST / GOTO	DVD player controls and recording list access.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback for connected devices or recorded content.

Button	Function
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.
3D	Activates or deactivates 3D mode (if supported by TV).





Image: Angled view of the ALLIMITY SHWRMC0103 remote control, showing the ergonomic design and button layout from a top-left perspective.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not working	<ul style="list-style-type: none"> ◦ Check if batteries are inserted correctly with correct polarity (+/-). ◦ Replace old batteries with new alkaline batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Verify the remote is pointed directly at the TV.
Buttons not responding	<ul style="list-style-type: none"> ◦ Clean the remote control surface, especially around the buttons, to remove any dirt or debris. ◦ If only specific buttons are not working, the remote might be damaged.
Short operating range	<ul style="list-style-type: none"> ◦ Batteries may be low; replace them. ◦ Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.



Image: Angled view of the ALLIMITY SHWRMC0103 remote control, highlighting the button arrangement and overall design from a top-right perspective.

SPECIFICATIONS

Brand: ALLIMITY

Model: SHWRMC0103

Manufacturer: MaxControlFactory

Product Dimensions: 6 x 0.5 x 17 cm

Product Weight: 80 g

Battery Type: Alkaline (AAA, not included)

Connectivity Technology: Infrared

Maximum Range: 10 Meters

Special Feature: No programming required

Compatible TV Models:

- Sharp Aquos 3D TV models including:
- LC-32CHF4041K, LC-32DHE4041K, LC-32DHF4041K, LC-32HG3141K, LC-32HG3241K, LC-32HG3341K
- LC-43CFE4142E, LC-48CFE4041E, LC-48CFE4041K, LC-48CFE4042E

- LC-22DFE4011K, LC-22DFF4011E, LC-22DFF4011ES, LC-24CHE4000E, LC-24CHE4000ES, LC-24CHE4012E, LC-24CHE4012ES
- LC-48CFE4042K, LC-49CFE4041E, LC-49CFE4042E
- LC-22CFE4000ES, LC-22CFE4012E, LC-22CFE4012ES, LC-22CFF4011E, LC-22CFF4011ES, LC-22CFF4012E, LC-22CFF4012ES
- LC-24CHF4011E, LC-24CHF4011ES, LC-40CFE4041E, LC-40CFE4041K, LC-40CFE4042E, LC-40CFF4041K
- LC-40FG3141K, LC-40FG3241K, LC-40FG3341K, LC-24CHF4011K, LC-24CHF4012E, LC-24CHF4012ES
- LC-24DHE4011K, LC-40CFE4040E, LC-43CFE4140E, LC-43CFE4141E, LC-24DHF4011E, LC-24DHF4011ES, LC-24DHF4011K, LC-32CHE4041K

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For any issues or support inquiries, please refer to the seller or retailer from whom the product was purchased. Ensure you retain your proof of purchase for any potential warranty claims.