

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ARROW](#) /

› [Arrow RO-06TTB 4.5 Kg Semi-Automatic Washing Machine User Manual](#)

ARROW RO-06TTB

Arrow RO-06TTB 4.5 Kg Semi-Automatic Washing Machine User Manual

Model: RO-06TTB | Capacity: 4.5 Kg

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and noise.
- Do not connect the appliance to a hot water supply. Use cold water only for inlet.
- Keep children and pets away from the appliance during operation.
- Do not operate the machine if the power cord or plug is damaged.
- Never reach into the machine while it is operating.
- Unplug the machine from the power outlet before cleaning or performing any maintenance.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Arrow RO-06TTB is a 4.5 Kg top-loading semi-automatic washing machine designed for efficient and convenient laundry care. It features a durable plastic body and a streamlined design.



Figure 2.1: Front view of the Arrow RO-06TTB washing machine, showing the two tubs and control panel.

Key Features:

- **Durable Plastic Body:** Resists scratches and scuffs.
- **Top-Load Design:** Easy loading and unloading of laundry.
- **Semi-Automatic Operation:** Separate wash and spin tubs for manual control over cycles.
- **Knob Controls:** Simple dial-style knobs for various settings.
- **Portable Design:** Lightweight frame for easier installation and movement.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or service.

3.2 Placement

Place the washing machine on a firm, flat, and level surface. Ensure there is adequate space around the machine for ventilation and access to connections. Avoid direct sunlight or areas with high humidity.

3.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks. **Do not connect to a hot water supply.**



Figure 3.1: Water inlet connection point, indicating cold water use only.

3.4 Drainage

Position the drain hose to allow water to flow freely into a sink or drain pipe. Ensure the hose is not kinked or blocked.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the machine's requirements (220 Volts).

4. OPERATING INSTRUCTIONS

The Arrow RO-06TTB features simple knob controls for wash and spin functions.



Figure 4.1: Top view of the washing machine, illustrating the control panel and tubs.

4.1 Washing Cycle

- Load Laundry:** Open the wash tub lid and place clothes loosely inside. Do not overload beyond the 4.5 Kg capacity.
- Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
- Fill with Water:** Turn on the water tap and fill the wash tub to the desired level.
- Set Wash Time:** Turn the wash timer knob to select the desired wash duration. The machine will start washing.
- Drain Water:** Once the wash cycle is complete, turn the drain knob to drain the water from the wash tub.

4.2 Rinse Cycle

- After draining the wash water, refill the wash tub with clean water.
- Set the wash timer for a short duration (e.g., 3-5 minutes) to rinse the clothes.
- Drain the rinse water. Repeat if necessary for thorough rinsing.

4.3 Spin Cycle

- Carefully transfer the rinsed clothes from the wash tub to the spin tub. Distribute them evenly to maintain balance.
- Close the spin tub lid securely.

3. Turn the spin timer knob to select the desired spin duration. The machine will begin spinning to remove excess water.
4. Once the spin cycle is complete, open the lid and remove the clothes.

5. MAINTENANCE

5.1 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the plastic surface.

5.2 Cleaning the Interior

Periodically clean the wash and spin tubs. You can run a short wash cycle with just water and a small amount of detergent to remove any residue. Ensure the lint filter (if present) is cleaned regularly to maintain washing efficiency.

5.3 Storage

If storing the machine for an extended period, ensure it is clean and dry. Disconnect water hoses and power cord. Store in a dry, well-ventilated area.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Lid not closed properly (for spin cycle)	Check power connection; Check household fuse/breaker; Ensure lid is fully closed.
Water does not fill	Water tap off; Water inlet hose kinked or blocked	Turn on water tap; Straighten or clear hose.
Water does not drain	Drain hose kinked or blocked; Drain knob not set to drain	Straighten or clear drain hose; Turn drain knob to the 'Drain' position.
Excessive vibration/noise	Machine not level; Uneven load in spin tub	Adjust machine to be level; Redistribute clothes evenly in the spin tub.
Poor washing results	Overloading; Insufficient detergent; Incorrect wash time	Reduce load size; Use correct amount of detergent; Adjust wash time as needed.

If the problem persists after checking these points, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	ARROW
Model Number	RO-06TTB
Capacity	4.5 Kg / 4.5 Liters
Loading Type	Top Load - Semi Automatic
Material Type	Plastic
Color	White
Control Console	Knob

Feature	Specification
Standard Cycles	1
Voltage	220 Volts
Product Dimensions (L x W x H)	70 x 42 x 87.2 cm
Item Weight	18 Kilograms
Special Features	Portable

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Arrow washing machine typically comes with a **2-year warranty**. Please refer to your purchase documentation for specific terms and conditions of the warranty.



Figure 8.1: Product image highlighting the 2-year warranty.

8.2 Customer Support

For installation services, technical support, or warranty claims, please contact the Arrow service center in your region:

- **Riyadh:** +966-11-4094006 Ext – 113
- **Jeddah:** +966-12-6577714
- **Dammam:** +966-13-8343691
- **Qassim:** +966 581044198
- **Abha:** +966 593322785

© 2026 ARROW. All rights reserved.