

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hitachi](#) /

› [Hitachi PS975GJ 6kg Top Load Washing Machine User Manual](#)

## Hitachi PS975GJ

# Hitachi PS975GJ 6kg Top Load Washing Machine User Manual

Model: PS975GJ

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Hitachi PS975GJ 6kg Top Load Washing Machine. Please read these instructions thoroughly before operating the appliance and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your washing machine.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not reach into the tub while it is spinning.

## 3. PRODUCT FEATURES

Your Hitachi PS975GJ washing machine is equipped with several features designed for effective and convenient laundry care:

- **Capacity:** 6kg wash capacity, 4.5kg spin dry capacity.
- **Air Jet Dry:** Utilizes air circulation for faster drying of clothes.
- **Nano Titanium Filter:** Helps to remove odors and bacteria from the wash water.
- **High Spin Speed:** Up to 1450 RPM for efficient water extraction.
- **Dust Protection Cover:** Protects the internal components from dust accumulation.
- **Soak Timer:** Allows for pre-soaking of heavily soiled items.
- **Two-Way Wash Action:** Enhances washing performance by moving clothes in multiple directions.
- **Material:** Stainless steel tub for durability.



Image: Front view of the Hitachi PS975GJ 6kg Top Load Washing Machine, showcasing its white exterior and top-loading design.

## 4. SETUP

---

Proper installation is crucial for the performance and safety of your washing machine.

### 4.1 Unpacking

- Carefully remove all packaging materials.
- Check for any damage during transit. If damaged, do not install and contact your retailer.
- Remove all shipping bolts and packing materials from inside the drum.

### 4.2 Location

- Place the washing machine on a firm, level surface to minimize vibration and noise.
- Ensure adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or locations with extreme temperatures.

## 4.3 Water Connection

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a standpipe or laundry tub, ensuring it is securely fastened and not kinked.

## 4.4 Power Connection

- Plug the power cord into a grounded 220V electrical outlet.
- Do not use extension cords or adapters.

# 5. OPERATING INSTRUCTIONS

---

Follow these steps for effective washing:

## 5.1 Loading Laundry

- Sort laundry by fabric type, color, and soil level.
- Open the lid and load clothes loosely into the tub, ensuring not to overload.
- Close the lid securely.

## 5.2 Adding Detergent and Additives

- Add the recommended amount of detergent to the dispenser.
- If using fabric softener or bleach, add them to their respective compartments.

## 5.3 Selecting a Wash Cycle

Use the control knob to select the desired wash cycle. Available cycle options include:

- **Wash:** Standard washing cycle.
- **Rinse:** For rinsing clothes.
- **Spin:** For draining water and spinning clothes.
- **Soak:** Activates the soak timer for pre-soaking.
- **Air Jet Dry:** Select this option for air drying after the wash cycle.

## 5.4 Starting the Machine

- Press the 'Start' button to begin the selected cycle.
- The machine will automatically fill with water, wash, rinse, and spin according to the program.

# 6. MAINTENANCE

---

Regular maintenance helps keep your washing machine in good condition.

## 6.1 Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Ensure the dust protection cover is clean and free of debris.

## 6.2 Cleaning the Lint Filter

- Locate the lint filter inside the tub.
- Remove the filter and clean out any accumulated lint under running water.
- Reinsert the filter securely. Clean regularly, ideally after every few washes.

## 6.3 Cleaning the Nano Titanium Filter

- Refer to the specific instructions in your full manual for cleaning the Nano Titanium filter, as it may require special care.

## 6.4 Tub Cleaning

- Run an empty wash cycle with a tub cleaner or a cup of white vinegar to remove detergent residue and odors.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Power outage	Check power connection; Ensure lid is fully closed; Check household circuit breaker
No water filling	Water tap off; Water inlet hose kinked; Water supply cut off	Turn on water tap; Straighten hose; Check water supply
Machine vibrates excessively	Machine not level; Laundry unevenly distributed; Shipping bolts not removed	Adjust leveling feet; Redistribute laundry; Ensure all shipping bolts are removed
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged	Check and clear drain hose; Clean drain pump filter (refer to full manual)

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

Detailed technical specifications for the Hitachi PS975GJ washing machine:

Specification	Value
Brand Name	Hitachi
Model Information	PS975GJ WH
Capacity (Wash)	6 Kilograms
Capacity (Dry)	4.5 Kilograms
Maximum Spin Speed	1450 RPM
Installation Type	Freestanding
Part Number	PS975GJ WH
Special Features	Air Drying, Fast Spin, Two-Way Wash Action
Color	White
Control Type	Knob
Access Location	Top Load
Voltage	220 Volts

Specification	Value
Material Type	Stainless Steel
Included Components	None
Batteries Required?	No
Item Weight	6 Kilograms
Date First Available	February 26, 2020

## 9. WARRANTY AND SUPPORT

---

Your Hitachi PS975GJ washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and what is covered.

For technical assistance, service requests, or to purchase genuine spare parts, please contact Hitachi customer support. Contact details can typically be found on the Hitachi official website or on your warranty documentation.