

manuals.plus /

- › [Wendry](#) /
- › [Wendry RT-MWK02 2.4GHz Mini Keyboard with Touchpad User Manual](#)

## Wendry RT-MWK02

# Wendry RT-MWK02 2.4GHz Mini Keyboard with Touchpad User Manual

Model: RT-MWK02

## 1. INTRODUCTION

---

Thank you for choosing the Wendry RT-MWK02 2.4GHz Mini Keyboard with Touchpad. This compact and versatile device combines a full QWERTY keyboard with an integrated touchpad, offering convenient control for various systems including HTPCs, gaming consoles (PS3, PS4, Xbox 360, Xbox One), and other compatible devices. Its ultra-thin design, 2.4GHz wireless connectivity, and backlit keys ensure a comfortable and efficient user experience.



Figure 1: Top-down view of the Wendry RT-MWK02 Mini Keyboard, showcasing its full QWERTY layout and integrated touchpad.

## 2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Wendry RT-MWK02 Mini Keyboard with Touchpad
- 1 x 2.4GHz USB Receiver
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Figure 2: The Wendry RT-MWK02 Mini Keyboard, showing the USB receiver and the included USB charging cable.

## 3. SETUP

### 3.1 Charging the Keyboard

1. Locate the USB charging port on the keyboard.
2. Connect the small end of the included USB charging cable to the keyboard's charging port.
3. Connect the larger end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

### 3.2 Connecting the USB Receiver

1. Remove the 2.4GHz USB receiver from its storage compartment, usually located on the side or back of the keyboard.
2. Insert the USB receiver into an available USB port on your device (HTPC, gaming console, computer, etc.).
3. The device should automatically detect and install the necessary drivers. This is a plug-and-play device, so no manual driver installation is typically required.
4. Turn on the keyboard using the power switch, usually located on the side.

# Super Slim&Lightweight

Innovative wireless touch pad operation, no need mouse.



Figure 3: The Wendry RT-MWK02 Mini Keyboard alongside its 2.4GHz USB receiver, illustrating the connection method.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Keyboard Functions

The keyboard features a standard QWERTY layout. Simply type as you would on a regular keyboard.

### 4.2 Touchpad Usage

- **Single Finger Tap:** Functions as a left-click.
- **Two Finger Tap:** Functions as a right-click.
- **Single Finger Drag:** Moves the cursor.
- **Two Finger Scroll:** Scrolls up or down in documents or web pages.

# Infrared Light Indicator

Highly suitable for teaching and training,  
69 backlit keys bring easy utility.



Figure 4: A user demonstrating the ergonomic grip and compact size of the Wendry RT-MWK02 Mini Keyboard while in use.

## 4.3 Backlight Control

The keyboard features backlit keys for use in low-light environments. Refer to the keyboard layout for the specific key combination to activate or deactivate the backlight. Typically, this involves pressing the **Fn** key along with a designated backlight key (e.g., **Fn + F2** or a dedicated light bulb icon key).



Figure 5: The Wendry RT-MWK02 Mini Keyboard with its 69 backlit keys illuminated, demonstrating its utility in low-light conditions.

## 4.4 Special Function Keys

The top row of keys (F1-F8) often includes multimedia and special function shortcuts. These functions are typically accessed by holding down the **Fn** key and pressing the desired function key. Examples include volume control, play/pause, and browser shortcuts.

## 5. MAINTENANCE

### 5.1 Cleaning

- Use a soft, dry cloth to wipe the surface of the keyboard.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the keyboard's finish.

### 5.2 Storage

- When not in use for extended periods, turn off the keyboard to conserve battery life.
- Store the keyboard in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the USB receiver in its designated storage compartment to prevent loss.

## 5.3 Battery Care

- Charge the keyboard regularly to maintain optimal battery performance.
- Avoid completely draining the battery frequently, as this can reduce its lifespan.
- If the keyboard will not be used for a long time, charge it to about 50% before storing.

## 6. TROUBLESHOOTING

If you encounter issues with your Wendry RT-MWK02 Mini Keyboard, please refer to the following troubleshooting steps:

- **Keyboard not responding:**
  - Ensure the keyboard is turned on.
  - Check if the battery is charged. Connect the charging cable and try again.
  - Verify that the USB receiver is securely plugged into your device's USB port.
  - Try plugging the USB receiver into a different USB port.
  - Restart your device.
- **Touchpad not working:**
  - Ensure the keyboard is powered on and connected.
  - Check if the touchpad has been accidentally disabled (some keyboards have a function key to toggle the touchpad).
  - Clean the touchpad surface to remove any dirt or debris.
- **Backlight not turning on:**
  - Ensure the keyboard is powered on.
  - Press the correct key combination (e.g., **Fn + F2** or the dedicated backlight key) to activate the backlight.
  - Check the battery level; low battery might prevent backlight activation.
- **Poor wireless connection or lag:**
  - Ensure the keyboard is within the effective range of the USB receiver (typically up to 10 meters).
  - Minimize obstacles between the keyboard and the receiver.
  - Avoid placing the receiver near other wireless devices or sources of electromagnetic interference.

## 7. SPECIFICATIONS

Feature	Description
Brand	Wendry
Model	RT-MWK02
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Compatible Devices	Gaming Console, HTPC, PC, Laptop
Keyboard Description	QWERTY Wireless Keyboard with Touchpad
Special Features	Backlit Keys, Integrated Touchpad, Lightweight, Rechargeable

Feature	Description
Product Dimensions	5.9"L x 2.3"W x 0.5"H (15cm x 5.8cm x 1.3cm approx.)
Material	Plastic
Included Components	USB Cable

## 8. WARRANTY AND SUPPORT

---

Wendry products are designed for reliability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact Wendry customer service through the retailer where you purchased the product or visit the official Wendry website for contact information.

Please note that warranty coverage may vary based on region and specific terms and conditions. Damage caused by misuse, accident, unauthorized modification, or neglect is not covered under warranty.