

eKids EK-B50W.EXV0

eKids Kids Bluetooth Wireless Headphones User Manual

Model: EK-B50W.EXV0

1. INTRODUCTION

Thank you for choosing the eKids Kids Bluetooth Wireless Headphones. These headphones are designed to provide a safe and enjoyable audio experience for children, featuring volume-limiting technology to protect young ears. They offer versatile connectivity options, comfortable wear, and a durable, foldable design for easy portability.

This manual provides detailed instructions on how to set up, operate, and maintain your headphones, ensuring optimal performance and longevity.

2. PACKAGE CONTENTS

- eKids Kids Bluetooth Wireless Headphones
- USB Charging Cable
- 3.5mm Audio Cable

3. PRODUCT OVERVIEW



Figure 1: Front view of the eKids Kids Bluetooth Wireless Headphones, showcasing the white design with black ear cushions.



Figure 2: Detailed view highlighting key features such as the adjustable headband, foldable design for portability, soft ear cushions, charging port, and line-in audio port.



Figure 3: Illustration of the headphone controls including power/pairing/charging LED indicators, USB charging port, AUX jack, microphone, volume up/skip forward, play/pause/power on/off, hang up/answer phone, and volume down/skip back buttons. Also shows product dimensions.

Key Features:

- **Bluetooth Connectivity:** Wirelessly stream high-quality stereo sound from compatible devices.
- **Volume Reduced for Child Safety:** Incorporates volume-limiting technology to protect young ears.
- **Built-in Microphone:** Facilitates clear communication for video calls and online learning.
- **Wired Option:** Includes a 3.5mm audio cable for listening when Bluetooth is unavailable or the battery is low.
- **Long Battery Life:** Up to 18 hours of continuous Bluetooth playtime.
- **Custom Fit:** Adjustable headband and soft ear cushions for comfortable wear.
- **Foldable Design:** Ensures easy storage and portability.

4. GETTING STARTED

4.1 Charging the Headphones

Before first use, fully charge the headphones. Connect the included USB charging cable to the USB charging port on the headphones (refer to Figure 3 for location) and plug the other end into a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status.

- **Charging Time:** Approximately 2-3 hours for a full charge.
- **LED Indicator:** Red light indicates charging; light turns off when fully charged.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power/Play/Pause button (refer to Figure 3) for approximately 3 seconds until the LED indicator flashes.
- **To Power Off:** Press and hold the Power/Play/Pause button for approximately 3 seconds until the LED indicator turns off.

4.3 Bluetooth Pairing

To connect your headphones wirelessly to a device:

1. Ensure the headphones are powered off.
2. Press and hold the Power/Play/Pause button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately. This indicates pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "eKids Headphones" from the list of found devices.
5. Once paired, the LED indicator on the headphones will flash blue slowly.

4.4 Wired Connection

You can use the headphones with the included 3.5mm audio cable when Bluetooth is not desired or the battery is depleted.

1. Plug one end of the 3.5mm audio cable into the AUX jack on the headphones (refer to Figure 3).
2. Plug the other end into the headphone jack of your audio device.
3. The headphones will automatically switch to wired mode.



Figure 4: Illustration demonstrating the flexibility of switching between wired mode (using the 3.5mm audio cable) and wireless Bluetooth mode, highlighting the battery life for wireless use.

5. OPERATING THE HEADPHONES

5.1 Music Playback Controls

Use the control buttons on the headphones (refer to Figure 3) to manage your audio:

- **Play/Pause:** Press the Power/Play/Pause button once.
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.
- **Skip Forward:** Press and hold the Volume Up button.
- **Skip Back:** Press and hold the Volume Down button.

5.2 Phone Call Controls

When connected via Bluetooth, you can manage phone calls:

- **Answer/End Call:** Press the Power/Play/Pause button once.
- **Reject Call:** Press and hold the Power/Play/Pause button for approximately 2 seconds.

5.3 Volume Limiting Feature

These headphones are designed with a built-in volume limiter to ensure safe listening levels for children. This feature cannot be disabled, providing peace of mind during extended use.

6. COMPATIBILITY

The eKids Kids Bluetooth Wireless Headphones are compatible with a wide range of devices:



Figure 5: Visual representation of device compatibility, showing the headphones connecting to mobile phones, tablets, notebooks, smartwatches, PCs, and game devices.

- Smartphones (iOS and Android)
- Tablets
- Computers (PC, Laptops)
- Gaming Devices (with 3.5mm audio jack)

7. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, fold the headphones to their compact size and store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Moisture:** These headphones are not water-resistant. Keep them away from water and excessive moisture.
- **Handle with Care:** Avoid dropping the headphones or subjecting them to strong impacts.

8. TROUBLESHOOTING

8.1 No Power

- Ensure the headphones are fully charged. Connect to a power source using the USB charging cable.
- Verify the charging cable and power source are working correctly.

8.2 Cannot Pair via Bluetooth

- Make sure the headphones are in pairing mode (LED flashing red and blue alternately).
- Ensure Bluetooth is enabled on your device and it is within range (typically 10 meters).
- Forget the device from your device's Bluetooth settings and try pairing again.

- Restart both the headphones and your device.

8.3 No Sound in Wired Mode

- Ensure the 3.5mm audio cable is securely plugged into both the headphones and the audio device.
- Check the volume level on both the headphones and the audio device.
- Test the audio cable with another device if possible to rule out a faulty cable.

8.4 Low Volume

- Remember that these headphones have a built-in volume limiter for child safety.
- Increase the volume on both the headphones and the connected device.

9. SPECIFICATIONS

Model Number	EK-B50W.EXV0
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Jack)
Wireless Communication Technology	Bluetooth
Battery Life	Up to 18 hours (Bluetooth playtime)
Earpiece Shape	On Ear
Special Features	Adjustable Headband, Foldable, Microphone Included, Volume Reduced
Compatible Devices	Smartphones, Tablets, Computers, TVs
Material	Plastic
Item Weight	14.7 ounces (0.42 Kilograms)
Package Dimensions	8.5 x 8.5 x 3.75 inches
Water Resistance Level	Not Water Resistant
UPC	092298949741

10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: eKids Kids Bluetooth Wireless Headphones. This video provides a visual overview of the headphones' features and functionality, including their design, connectivity options, and child-safe volume limiting.

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official eKids website. Keep your proof of purchase for warranty claims.

For additional assistance, you may also visit the [eKids Store on Amazon](#).

Related Documents - EK-B50W.EXV0

	<p>eKids B50 Bluetooth Headphones User Manual and Guide</p> <p>Comprehensive user manual for the eKids B50 Bluetooth Headphones, covering setup, operation, controls, charging, and warranty information. Learn how to pair, use, and maintain your wireless headphones.</p>
	<p>eKids B64 Series Disney Themed Wireless Headphones with EZ Link - User Manual</p> <p>User manual for the eKids B64 Series wireless Bluetooth headphones featuring EZ Link technology and Disney themes (Princess, Frozen, Encanto). Includes setup, pairing, app usage, controls, safety, and warranty information.</p>
	<p>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
	<p>eKids DE-072 MP3 Microphone User Manual and Instructions</p> <p>User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.</p>
	<p>eKids B64 Series Wireless Headphones with EZ Link User Manual</p> <p>Comprehensive user manual for the eKids B64 Series Wireless Headphones with EZ Link. Learn about setup, Bluetooth pairing, EZ Link app features, controls, charging, battery information, warranty, and safety guidelines. Supports Disney Princess, Frozen, and Encanto themes.</p>
	<p>eKids B50 Bluetooth Headphones User Manual</p> <p>User manual for eKids B50 Bluetooth Headphones, providing instructions on setup, operation, controls, charging, pairing, and warranty information.</p>